



VOLLRATH JPO14 Oven Stacker Installation Guide

[Home](#) » [VOLLRATH](#) » VOLLRATH JPO14 Oven Stacker Installation Guide 

Contents

- [1 VOLLRATH JPO14 Oven Stacker](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Conveyor Sandwich Oven](#)
- [5 FAQ'S](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



VOLLRATH JPO14 Oven Stacker



Specifications

- **Product:** Conveyor Sandwich Oven Stacker
- **Models:** JPO14, JPO18, JSO14, MGD18
- **Manufacturer:** Vollrath Company, L.L.C.

Product Usage Instructions

Setting Up the Stacker


1. If this is a new installation, refer to the Operator's Manual for setting up the bottom oven.
2. If adding the stacker to an existing installation, follow these steps:
 1. Set the stacker on top of the bottom oven.
 2. Remove the legs from the top oven where they were installed.
 3. Set the top oven on top of the stacker.
 4. Install the wings on the stacker.
 5. Plug the power cord for the stacker into either the outlet on the top or bottom oven.

Conveyor Sandwich Oven

Stacker For Models JPO14, JPO18, JSO14, and MGD18


If this is a new installation, refer to the Operator's Manual for instructions on setting up the bottom oven. If the stacker is being added to existing installation, refer to Step 1.

WARNING: Electrical Shock Hazard
Unplug before servicing.

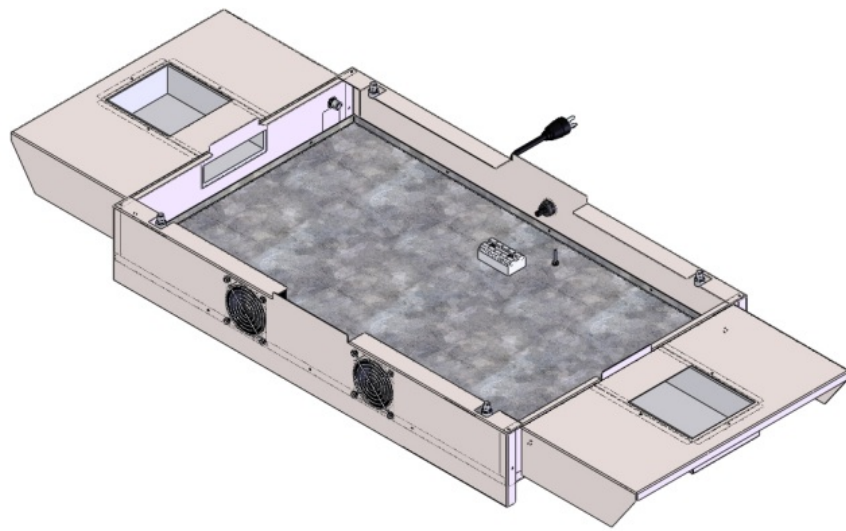


1. Set the stacker on top of the bottom oven. Do not install the “wings” on the stacker

1

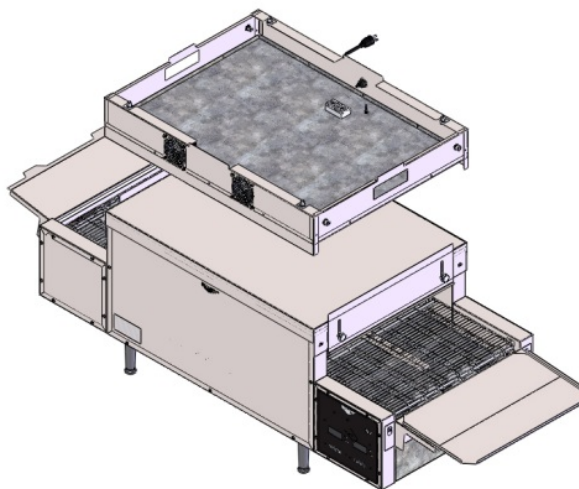


2. Remove the legs from the top oven.

2

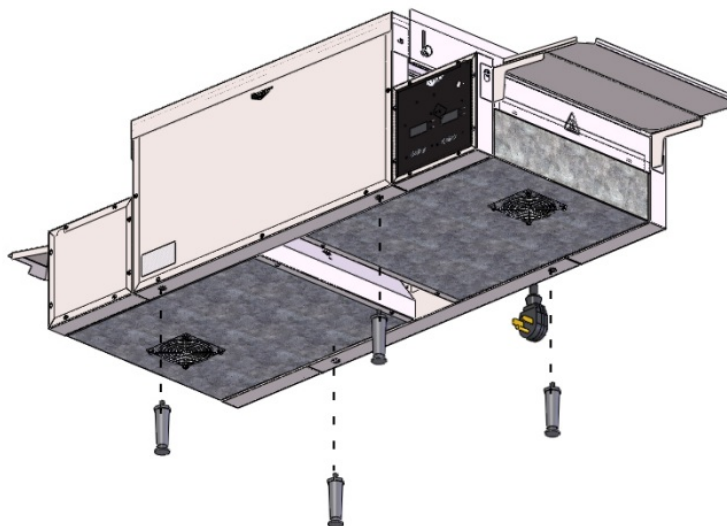

3. Install the provided screws into the holes where the legs had been installed.


3

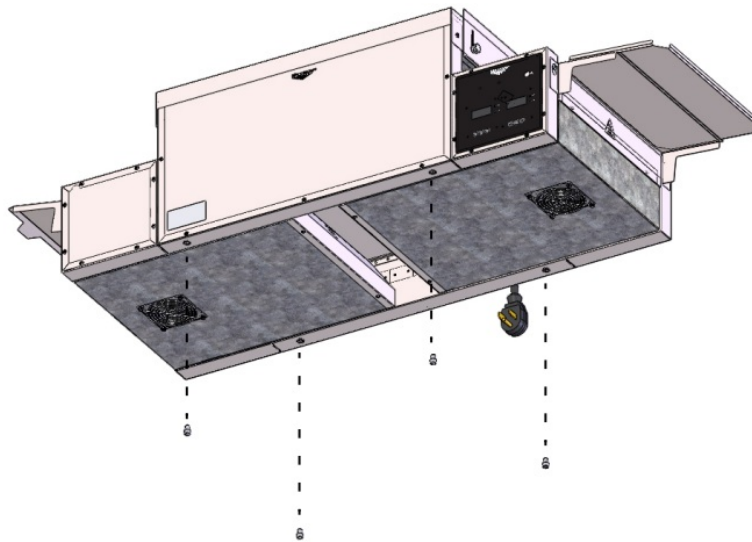

Note: The screws help stabilize the top oven, but they do not attach the oven to the stacker.


4. Set the top oven on top of the stacker.

4

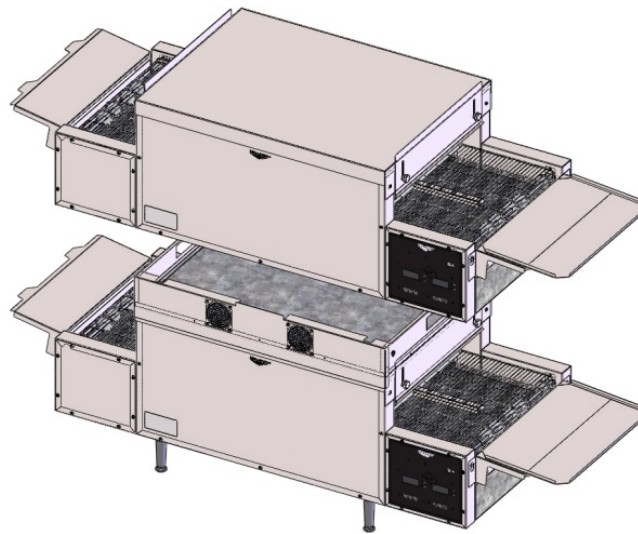


5. Install the wings on the stacker.

5

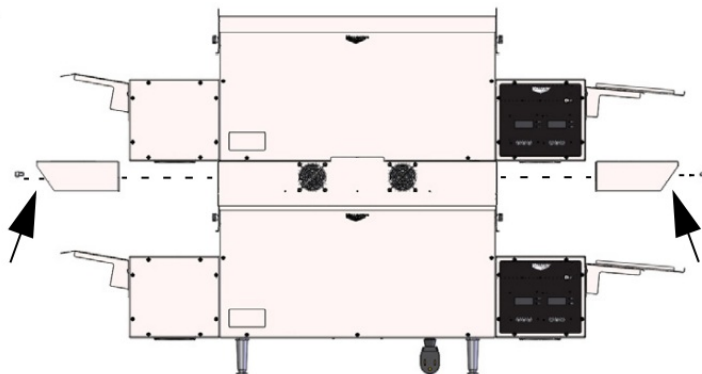

6. Plug the power cord for the stacker into either the outlet on top or bottom oven.

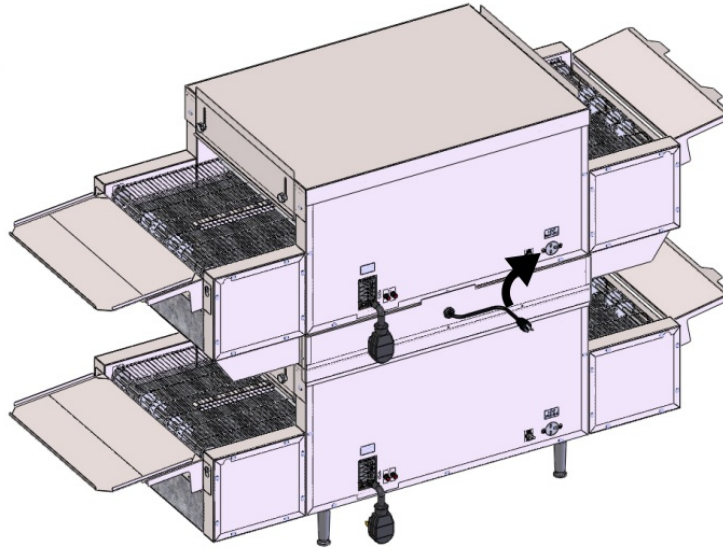

Address: The Vollrath Company, L.L.C. 1236 North 18th Street Sheboygan, WI 53081-3201 U.S.A.

Main Tel: 800.624.2051 or 920.457.4851

Main Fax: 800.752.5620 or 920.459.6573

Customer Service: 800.628.0830

Canada Customer Service: 800.695.8560

Technical Services

techservicereps@vollrathco.com

Induction Products: 800.825.6036

Countertop Warming Products: 800.354.1970

Toasters: 1-[800-309-2250](tel:800-309-2250)

All Other Products: 800.628.0832

www.vollrath.com © 2018 The Vollrath Company L.L.C. Part No. 351297-1 ml 5/7/18

FAQ'S

Q: Can I plug the power cord for the stacker into any outlet?

A: Yes, you can plug the power cord for the stacker into either the outlet on the top or bottom oven.

Q: Do I need to remove the legs from the top oven before setting it on top of the stacker?

A: Yes, it is recommended to remove the legs from the top oven before placing it on top of the stacker for stability.

Documents / Resources



[VOLLRATH JPO14 Oven Stacker](#) [pdf] Installation Guide
JPO14, JPO18, JSO14, MGD18, JPO14 Oven Stacker, JPO14, Oven Stacker

References

- [Commercial Foodservice & Kitchen Equipment | Vollrath Foodservice](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.