



## VOLLRATH VOL-59601 Mirage Countertop and Drop In Induction Ranges Instruction Manual

[Home](#) » [VOLLRATH](#) » VOLLRATH VOL-59601 Mirage Countertop and Drop In Induction Ranges Instruction Manual 



### Operator's Manual Mirage® Countertop and Drop-in Induction Ranges



## Contents

1	VOL-59601 Mirage Countertop and Drop In Induction Ranges
2	SAFETY PRECAUTIONS
3	FUNCTION AND PURPOSE
4	COOKWARE REQUIREMENTS
5	FCC STATEMENT
6	COUNTERTOP RANGE INSTALLATION
7	DROP-IN RANGE INSTALLATION
8	FEATURES AND CONTROLS
9	OPERATION
10	CLEANING
11	TROUBLESHOOTING
12	SERVICE AND REPAIR
13	WARRANTY STATEMENT FOR THE VOLLRATH CO. L.L.C.
14	Documents / Resources
14.1	References

## VOL-59601 Mirage Countertop and Drop In Induction Ranges

Thank you for purchasing this Vollrath equipment. Before operating the equipment, read and familiarize yourself with the following operating and safety instructions. **SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.** Save the original box and packaging. Use this packaging to ship the equipment if repairs are needed.

### SAFETY PRECAUTIONS

To ensure safe operation, read the following statements and understand their meaning. This manual contains safety precautions which are explained below. Please read carefully.



#### **WARNING**

Warning is used to indicate the presence of a hazard that will or can cause severe personal injury or death.



#### **CAUTION**

Caution is used to indicate the presence of a hazard that will or can cause minor or major personal injury if the caution is ignored.

**NOTICE:** Notice is used to note information that is important but not hazard-related.

To reduce risk of injury or damage to the equipment:

- Plug only into grounded electrical outlets that match the voltage on the rating label.
- This equipment requires a dedicated circuit.
- Do not use extension cords, power strips or surge protectors with this equipment.
- Unplug this equipment from the wall outlet when not in use.
- Use this equipment only in a flat, level position.
- To protect against electrical shock do not immerse the cord or plug in water. Keep the cord away from heated surface. Do not let the cord hang over the edge of table or counter.
- As a precaution, persons using a pacemaker should stand back 12" (30 cm) from an operating unit. Studies have shown that the induction element will not disrupt a pacemaker.
- Keep all credit cards, driver licenses and other items with a magnetic strip away from an operating unit. The unit's magnetic field will damage the information on these strips.
- The heating surface is made of a strong, non-porous material. However, should it crack or break, stop using

and immediately unplug the unit. Cleaning solutions and spills could penetrate the broken cook-top and create a risk of electrical shock.

- Do not operate this equipment with a damaged cord or plug or if it is not functioning properly.
- Do not operate unattended. Closely supervise units operating in public areas and/or around children.
- Do not place any objects inside the air intake or exhaust panels.
- Do not attach any accessory objects to this equipment.


Item No.	Description	Plug
59500	Mirage® Countertop Induction Range, US	NEMA 5-15P
59510	Mirage® Countertop Induction Range, US, Canada	
59650	Mirage® Countertop Induction Range	Schuko
59651		UK
59652		China
59655		AU
<a href="#">59501</a>	Mirage® Drop-in Induction Range	NEMA 5-15P
59601		Schuko
59602		UK
59603		China
59605		AU

## FUNCTION AND PURPOSE


This equipment is intended for use in commercial food service operations only. It is not intended for household, industrial or laboratory use. It is intended to be used with induction-ready cookware.

## COOKWARE REQUIREMENTS

### Compatible

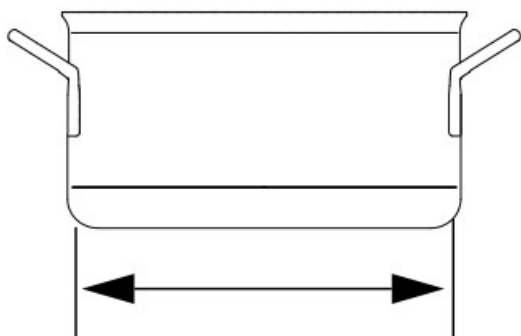

### Incompatible

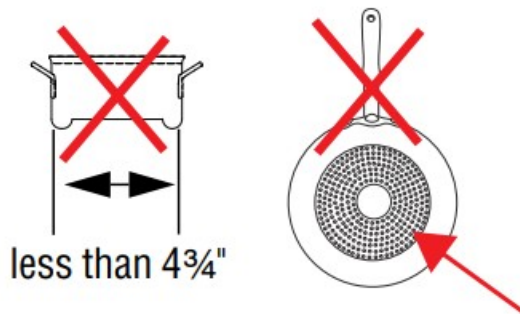

- Drop-in Ranges: Flat base 4 $\frac{3}{4}$ " to 12" (12.1 to 30.5 cm) in diameter
- Countertop Ranges: Flat base 4 $\frac{3}{4}$ " to 10 $\frac{1}{4}$ " (12.1 to 26.0 cm) in diameter
- Ferrous stainless steel, iron, cast iron
- Base is not flat

- Base is less than 4¾" (12.1 cm) in diameter
- Pottery, glass, aluminum, bronze or copper cookware
- Metal disk on bottom of pan

**Note:** Cookware with inferior construction or material may not perform well. Cookware with a larger base diameter can be used, however only the area of the cookware above the induction coil will heat. The more cookware extends past the coil, the more the overall performance will be reduced.



**NOTICE: Equipment Damage Hazard**

Not intended for use with aluminum pans with a metal disk on the bottom. Under high heat, the metal disk will separate from the pan. These pans may damage your unit and void your warranty.


## FCC STATEMENT

This equipment has been tested and found to comply with Part 18 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

To assure continued compliance, any changes or modifications not expressly approved by the party Responsible for compliance could void the user's authority to operate this equipment.

## COUNTERTOP RANGE INSTALLATION

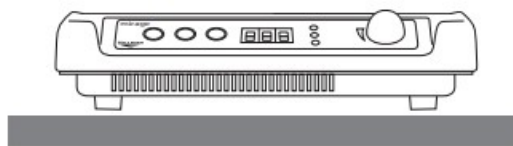

### Clearance and Environment Requirements

**NOTICE:** This unit is not designed to be enclosed or built into any area. Sufficient airflow must be allowed around the unit. Blocking the airflow could cause the unit to overheat.

- Rear of the range to any surrounding surface: 4" (10 cm)
- Bottom of the range to any surrounding surface: ½"(2cm)
- Indoor use only.
- Do not place the equipment on or near heat-producing equipment.

### Installation


1. Place the induction range/warmer on a flat stable surface.

2. Plug the power cord into a grounded electrical outlets that match the voltage on the rating label.

**NOTICE:** This equipment requires a dedicated circuit.

**NOTICE:** Using a voltage other than the nameplate rated voltage will cause damage to the unit. Incorrect voltage, modification to the power cord or electrical components can damage unit and will void the warranty.

## DROP-IN RANGE INSTALLATION

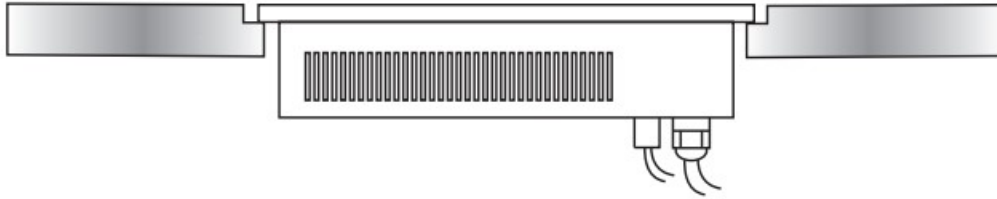

### Before you begin

1. Download the specification sheet for your drop-in from Vollrath.com. You will need to refer to this document for dimensions, clearance, venting and power requirements.
2. Verify the proper electrical outlet is available at the installation site.

**NOTICE:** This equipment requires a dedicated circuit.

**NOTICE:** Do NOT modify the cord or plug on the drop-in. Modifying any component may damage the drop-in or cause injury, and will void the warranty. See the specification sheet on Vollrath.com for electrical specifications.

3. Know the countertop manufacturer's requirements for preparing and installing equipment into the countertop prior to starting installation.

### Prepare the Countertop and Cabinet

**NOTICE:** Refer to the drop-in specification sheet for cutout dimensions, air flow and venting requirements, minimum clearance distances and environment requirements.

**NOTICE:** Countertop materials require specific preparation. Refer to the countertop manufacturer for instructions regarding proper installation of equipment into the material.

**NOTICE:** Exposed wood or particle board edges must be sealed with an appropriate waterproofing material. Seal the edge between the glass and the countertop with silicone or similar material. Failure to do so may result in damage to the countertop.

1. Cut required openings in the countertop and cabinet.
2. Clean debris from the cut out area(s).
3. Reinforce the countertop support as needed per the countertop manufacturer guidelines and the weight of the equipment.

### Mount the Drop-in

1. Choose a flat, level countertop for the mounting surface.
2. Measure the area for the cutout, including the countersink area. The unit is designed to be countersunk. The depth of the surface around the cutout must be reduced to allow for the countersink. See the specification sheet.


### Mount the Control Box

1. Measure the area for the control box cutout.


2. Apply sealant to the space between the control box and the mounting surface to prevent moisture penetration.
3. Secure the control box to the mounting surface.
4. Plug the USB cable from the control box into the bottom of the range.

## FEATURES AND CONTROLS

### Drop-in Range Control Panel

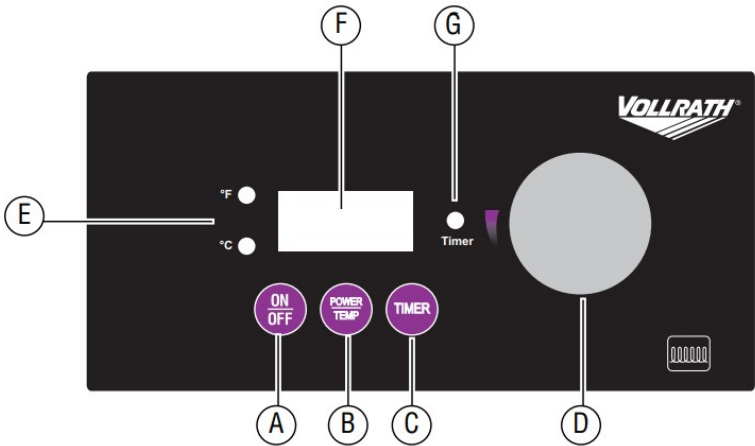



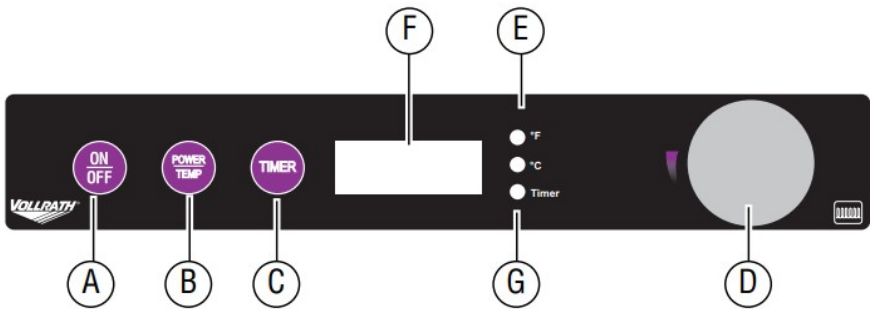

### Countertop Range Control Panel



- A On/Off button.
- B Power/Temp button. Press to toggle between power level (1-100) and temperature control, and Fahrenheit and Celsius.
- C Timer button. Starts the timer.
- D Control knob. Selects the temperature, power level or time, depending on the mode.
- E °F and °C LEDs. Illuminate to indicate which temperature is displaying.
- F Display panel. Displays the power level, temperature, timer time or an error code.
- G Timer LED. Illuminates when timer function is operating.

## OPERATION

	<div data-bbox="438 1675 632 1731">  <b>WARNING</b> </div> <div data-bbox="438 1765 748 1794"> <b>Electrical Shock Hazard</b> </div> <div data-bbox="438 1800 1474 1865">           Keep water and other liquids from entering the inside of the equipment. Liquid inside the equipment could cause an electrical shock.         </div>
	<div data-bbox="438 1951 624 2007">  <b>CAUTION</b> </div> <div data-bbox="438 2040 601 2069"> <b>Burn Hazard</b> </div> <div data-bbox="438 2076 1469 2141">           Do not touch hot food, liquid or heating surfaces while equipment is heating or operating.         </div>


**NOTICE:** Do not preheat empty cookware. Because of the speed and efficiency of the induction range, cookware can very quickly overheat and be damaged.

**NOTICE:** Do not drop cooking utensils or other objects onto the cooking surface. The strong, non-porous surface will break. The warranty does not cover this type of abuse.

**NOTICE:** Do not leave an empty pan on an operating unit.

**NOTICE:** Do not heat sealed cans or containers as they may explode.

**Turn on the Induction Range**

Press and release .

**Adjust the Power Level or Temperature Increase or decrease**

Rotate the control knob.

- Clockwise increases the numbers.
- Counterclockwise decreases the numbers.

**Switch between power and temperature modes**

Press and release .



**Switch between Fahrenheit and Celsius**

Press and release .two times.

**Cook Food**





The display should remain constant during operation. If the display is flashing, see the Troubleshooting section in this manual. Removing cookware from the cooking surface for more than ten minutes will cause the unit to automatically turn off. Removing cookware for less than ten minutes will not interrupt operation.

**Use the Timer**

1. Press and release . The timer LED will flash.
2. Rotate the control knob to set the time in full minutes (1-180).
3. When the timer cycle is complete, the range turn off.
4. To cancel the timer, press . The range will return to power or temperature mode.


**CLEANING**

To maintain the appearance and increase the service life, clean your induction range daily.

	 <b>WARNING</b>
	<b>Electrical Shock Hazard</b> Do not spray water or cleaning products. Liquid could contact the electrical components and cause a short circuit or an electrical shock.
	 <b>CAUTION</b>
	<b>Burn Hazard</b> Allow equipment to cool before moving or cleaning.

**NOTICE:** The cooking surface remains hot even when this equipment is turned off.

**NOTICE:** Do not use abrasive materials, scratching cleansers or scouring pads to clean the equipment. These can damage the finish.

1. Press and release .
2. Unplug the cord from the wall outlet.
3. Allow the equipment to cool.
4. Wipe the exterior with a clean damp cloth.
5. Thoroughly wipe off any mild soap or chemical cleaners.

**NOTICE:** Residue could corrode the surface of the unit.

## TROUBLESHOOTING

Problem	Might be Caused By	Course of Action
The unit turned off after 10 minute(s).	There is not a pot/pan on the induction range or the pot/pan is not induction-ready cookware. The induction range turned off. This is normal.	Make sure the pot/pan is induction ready. See the Function and Purpose section of this manual.
The unit is on, but not heating.	The cookware may be too small or may not be induction-ready.	Make sure the pot/pan is induction ready. See the Function and Purpose section of this manual.
The digital display is flashing F2.	The overheat-protection feature may have activated.	Remove cookware. Let cooking surface cool.
The unit suddenly stopped working.	The unit may be too close to an external heat source or the air intake may be restricted.	Relocate the unit away from any external heat source. Clear any obstructions to the air intake.

## SERVICE AND REPAIR

Serviceable parts are available on [Vollrath.com](http://Vollrath.com).

To avoid serious injury or damage, never attempt to repair the unit or replace a damaged power cord yourself. Do not send units directly to The Vollrath Company LLC. Please contact Vollrath Technical Services for instructions. When contacting Vollrath Technical Services, please be ready with the item number, model number (if applicable), serial number, and proof of purchase showing the date the unit was purchased.

## WARRANTY STATEMENT FOR THE VOLLRATH CO. L.L.C.

This warranty does not apply to products purchased for personal, family or household use, and The Vollrath Company LLC does not offer a written warranty to purchasers for such uses.

The Vollrath Company LLC warrants the products it manufactures or distributes against defects in materials and workmanship as specifically described in our full warranty statement. In all cases, the warranty runs from the date of the end user's original purchase date found on the receipt.

Any damages from improper use, abuse, modification or damage resulting from improper packaging during return shipment for warranty repair will not be covered under warranty.


For complete warranty information, product registration and new product announcement, visit [www.vollrath.com](http://www.vollrath.com).



<p>The Vollrath Company, L.L.C. Headquarters  1236 North 18th Street  Sheboygan, Wisconsin  53081-3201 USA  Main Tel: <a href="tel:800-624-2051">800-624-2051</a> or <a href="tel:920-457-4851">920-457-4851</a>  Main Fax: <a href="tel:800-752-5620">800-752-5620</a> or <a href="tel:920-459-6573">920-459-6573</a>  Canada Customer Service: <a href="tel:800-695-8560">800-695-8560</a>  Tech Services: <a href="mailto:techservices@vollrathco.com">techservices@vollrathco.com</a>  <a href="http://www.vollrath.com">www.vollrath.com</a></p>	<p>Pujadas  Ctra. de Castanyet,  132 P.O. Box 121  17430 Santa Coloma de Farners  (Girona) – Spain  Tel. +34 972 84 32 01  <a href="mailto:info@pujadas.es">info@pujadas.es</a></p>	<p>Vollrath of China  Vollrath Shanghai Trading Limited  23A, Time Square Plaza    500 Zhang Yang Road  Pudong, Shanghai 200122  Tel: 86-21-50589580</p>	<p>Vollrath de Mexico S. de R.L. de C.V.  Periferico Sur No. 7980 E  edificio 4-E  Col. Santa Maria Tequepan  45600 Tlaquepaque, Jalisco    Mexico  Tel: (52) 333-133-6767  Tel: (52) 333-133-6769  Fax: (52) 333-133-6768</p>
---	---	--	--

©2020 The Vollrath Company L.L.C.  
Part No. 351044-1 ml  
1/10/20

## Documents / Resources

	<p><a href="#">VOLLRATH VOL-59601 Mirage Countertop and Drop In Induction Ranges</a> [pdf] Instruction Manual  VOL-59601, VOL-59601 Mirage Countertop and Drop In Induction Ranges, Mirage Countertop and Drop In Induction Ranges, Countertop and Drop In Induction Ranges, Drop In Induction Ranges, Induction Ranges, Ranges</p>
--	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.