

[Skip to content](#)

Manuals+

User Manuals Simplified.

VOLTCRAFT DSP Series Single Channel DC Power Supply User Manual



[Home](#) » [VOLTCRAFT](#) » VOLTCRAFT DSP Series Single Channel DC Power Supply User Manual

VOLTCRAFT DSP Series Single Channel DC Power Supply User Manual



Contents [hide](#)

[1 General Safety Requirements](#)

[2 Safety Terms and Symbols](#)

[3 Quick Review](#)

[4 Panel Operation](#)

[5 Troubleshooting](#)

[6 Technical Specification](#)

[7 Appendix](#)

[8 Documents / Resources](#)

[9 Related Posts](#)

General Safety Requirements

Before use, please read the following safety precautions to avoid any possible bodily injury and to prevent this product or any other connected products from damage. To avoid any contingent danger, ensure this product is only used within the ranges specified.

Only a qualified person should perform internal maintenance.



To avoid Fire or Personal Injury:

- **Use Proper Power Cord.** Use only the power cord supplied with the product and certified to use in your country.
- **Product Grounded.** This instrument is grounded through the power cord grounding conductor. To avoid electric shock, the grounding conductor must be grounded. The product must be grounded properly before any connection with its input or output terminals.
- **Check all Terminal Ratings.** To avoid fire or shock hazard, check all ratings and markings on this product. Refer to the user manual for more information about ratings before connecting to the instrument.
- **Do not operate without covers.** Do not operate the instrument with covers or panels removed.
- **Use the Proper Fuse.** Use only the specified type and rating fuse for this instrument.
- **Avoid exposed circuit.** Be careful when working on exposed circuitry to avoid risk of electric shock or other injury.
- **Do not operate if any damage.** If you suspect damage to the instrument, have it inspected by qualified service personnel before further use.
- **Use your instrument in a well-ventilated area.** Please keep well ventilated and inspect the intake and fan regularly.
- **Do not operate in damp conditions.** To avoid short circuiting to the interior of the device or electric shock, please do not operate in a humid environment.
- **Do not operate in an explosive atmosphere.** To avoid damages to the device or personal injuries, it is important to operate the device away from an explosive atmosphere.
- **Keep product surfaces clean and dry.** To avoid the influence of dust or moisture in air, please keep the surface of device clean and dry.

Safety Terms and Symbols




 
 
Safety Terms

Terms in this manual (The following terms may appear in this manual):

-  **Warning:** Warning indicates conditions or practices that could result in injury or loss of life.
-  **Caution:** Caution indicates the conditions or practices that could result in damage to this product or other property.
- Terms on the product.** The following terms may appear on this product:
 - Danger:** Indicates an immediate hazard or injury possibility.
 - Warning:** Indicates a possible hazard or injury.
 - Caution:** Indicates potential damage to the instrument or other property.

Safety Symbols

Symbols on the product. The following symbols may appear on the product:

-  Hazardous Voltage
-  Refer to Manual
-  Protective Earth Terminal
-  Chassis Ground
-  Public Ground

Quick Review

Panel and Interface

Front Panel

Figure 3- 1 Front Panel Overview (take DSP-6010 as example)




- | | | |
|----|--------------------------|---|
| 1 | Over Voltage Setting Key | Set over voltage protection parameters, press to move the cursor when editing parameters |
| 2 | Voltage Key | Set voltage parameters, press to move the cursor when editing parameters |
| 3 | Current Key | Set current parameters, press to move the cursor when editing parameters |
| 4 | Over Current Setting Key | Set over current protection parameters, press to move the cursor when editing parameters |
| 5 | Knob | Select the main menu or change the value, function equals to the confirmation key. |
| 6 | Memory Key | 5 sets of channel parameters can be stored for quick output, or long press to enter the List waveform output editing interface. |
| 7 | On/Off Key | Turn on/off the channel, or long press to turn on or turn off the power-on automatic startup function. |
| 8 | Channel Output Terminal | Output access of channel. |
| 9 | Display Key | Number display and curve display switch key |
| 10 | USB Port | USB charging port (no read/write function) |
| 11 | Display Area | Display user interface. |

Button light instruction

On/Off key: The key lights up when the channel turns on.

Rear Panel


Figure 3- 2 Rear Panel Overview (take DSP-6010 as example)

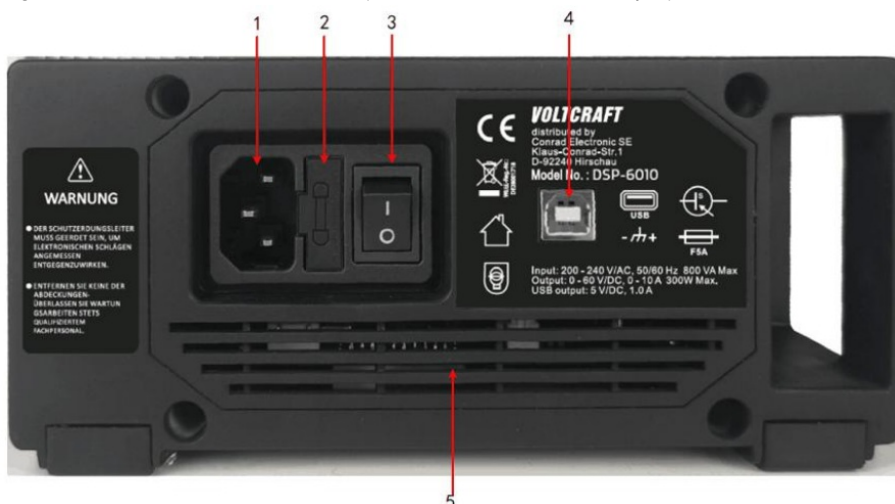

- | | | |
|---|---------------------|--|
| 1 | AC Power Input Jack | AC power input interface. |
| 2 | Fuse | Power fuse. |
| 3 | Power Button | Turn on/off the instrument. |
| 4 | Device USB Port | Update the firmware, PC software control port. |
| 5 | Air Vent | Air vent. |

User Interface

Figure 3- 3 User Interface

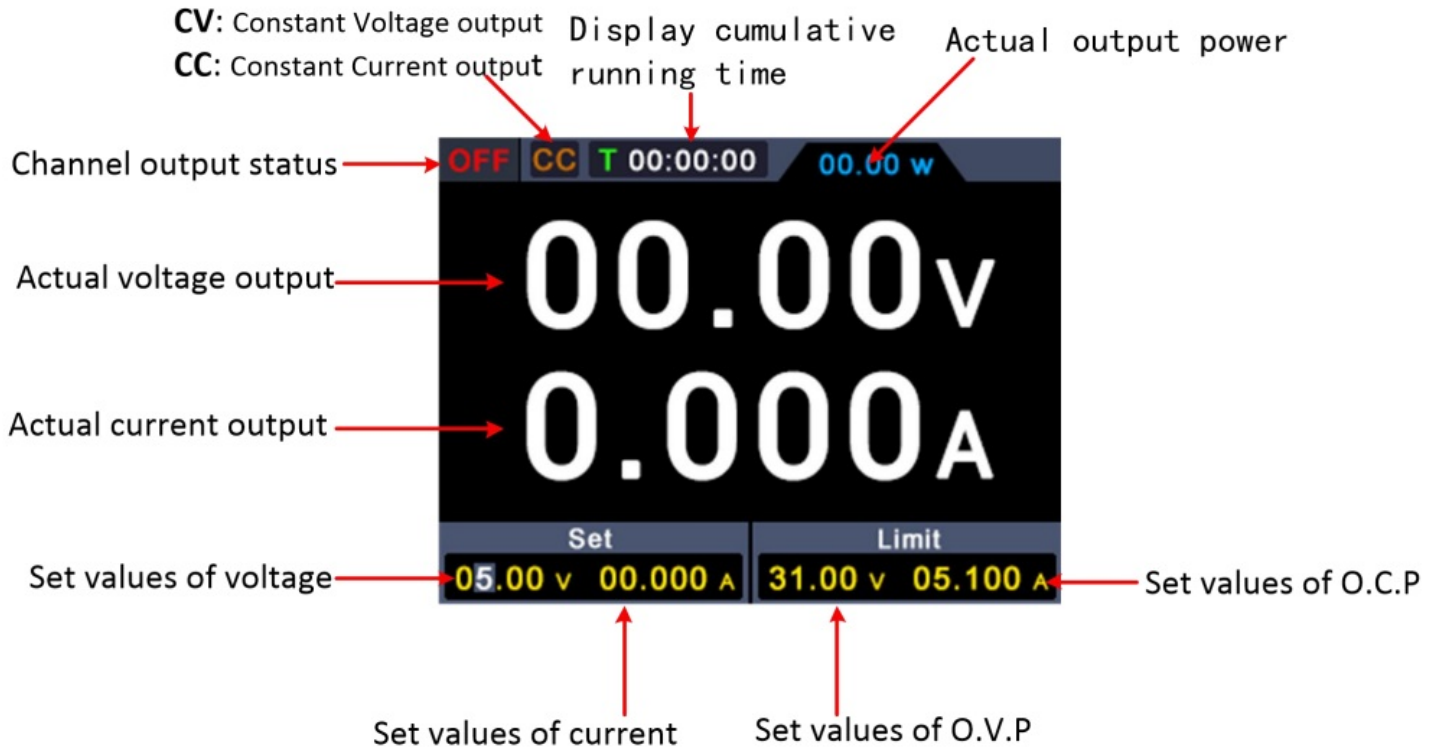

General Inspection

After you get a new power supply, it is recommended that you should make a check on the instrument according to the following steps:

1. Check whether there is any damage caused by transportation.
If it is found that the packaging carton or the foamed plastic protection cushion has suffered serious damage, do not throw it away first till the complete device and its accessories succeed in the electrical and mechanical property tests.
2. **Check the Accessories**
The supplied accessories have been already described in the "Appendix A: Accessories" of this Manual. You can check whether there is any loss of accessories with reference to this description. If it is found that there is any accessory lost or damaged, please get in touch with the distributor of our responsible for this service or our local offices.
3. **Check the Complete Instrument**
If it is found that there is damage to the appearance of the instrument, or the instrument can not work normally, or fails in the performance test, please get in touch with our distributor responsible for this business or our local offices. If there is damage to the instrument caused by the transportation, please keep the package. With the transportation department or our distributor responsible for this business informed about it, a repairing or replacement of the instrument will be arranged by us.

Power Inspection

1. Use the power cord supplied with the accessories to connect the instrument to the AC power.



Warning:

To prevent electric shock, make sure that the instrument is properly grounded.

2. Press the power button on the front panel, the button light will be on, and the startup screen will be displayed on the screen.

Output Inspection

Output inspection is to ensure that the instrument can achieve its rated outputs and properly respond to operation from the front panel. For the procedures below, it is suggested that you read "Turn On/Off the Channel Output" on page 8 and "Set the Output Voltage/Current" on page 8.

Voltage Output Inspection

The following steps verify basic voltage functions without load:

1. When the instrument is under no load, select a channel and ensure the output current setting for this channel is not at zero.
2. Turn on the channel output, then ensure the channel is in Constant Voltage output mode.
3. Set some different voltage values on this channel; check if the actual voltage value displayed is close to the set voltage value, and also that the actual current value displayed is nearly to zero.
4. Check that if the output voltage can be adjusted from zero to the maximum rating. When it is set to the maximum or minimum, a beep is heard, indicating that the limit has been reached.

Current Output Inspection

The following steps check basic current functions with a short across the power supply's output:

1. Connect a short across (+) and (-) output terminals with an insulated test lead on this channel. Use a wire size sufficient to handle the maximum current.
2. Set the output voltage to the maximum rating on this channel.
3. Turn on the channel output. Ensure the channel you used is in Constant Current output mode.
4. Set some different current values on this channel; check if the actual current value displayed is close to the set current value, and to check if the actual voltage value displayed is nearly zero.
5. Check that if the output current can be adjusted from zero to the maximum rating. When it is set to the maximum or minimum, a beep is heard, indicating that the limit has been reached.
6. Turn off the channel output and remove the short circuit from the output terminals.


Panel Operation

Turn On/Off the Channel Output

Press the On/Off key to turn on/off the channel;

Set the Output Voltage/Current

In the channel setting area, press the V/I key to move the blue cursor between different positions of the voltage/current value. After pressing the output voltage/current setting value, turn the knob to change the value of the current cursor, and press the knob or press the V/I key to move the cursor.

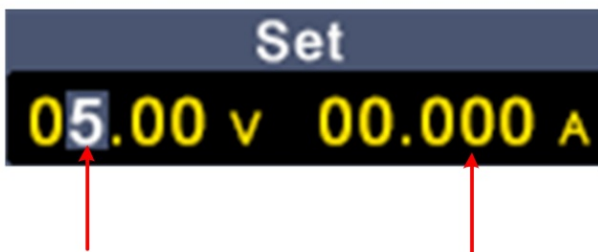

Set values of voltage

Set values of current

Over Voltage/Current Protection

Overvoltage protection (O.V.P) or overcurrent protection (O.C.P): after the output is turned on, once the output voltage/current reaches the set value of O.V.P/O.C.P, the instrument will cut off the output, a warning will show on the screen.

Note:

When the instrument disables the output due to protection, after you make some adjustments, the channel must be restarted to output normally.

This function can keep the power output from exceeding the load rating to protect the load.

In the channel setting area, press the Δ / ∇ keys to move the red cursor between parameters. After selecting the overvoltage/overcurrent protection value, turn the Knob to change the current cursor value, and press the \rightarrow / \leftarrow direction key to move the cursor position.



Set values of O.V.P Set values of O.C.P

Memory key shortcut settings

Press the **Memory** key on the front panel to store 4 sets of channel parameters M1, M2, M3, and M4 respectively for quick output.

Quick output

To output a set of parameters from M1 to M4, follow these steps:

1. Press **Memory** key on front panel, the shortcut interface will display.
2. Turn the knob and a gray selection box appears. Turn the knob to move the gray selection box.
3. After selecting the certain parameter, press the knob to confirm the input value.

Set values of voltage Set values of O.V.P

	U	I	OVP	OCP
M1	04.94 v	02.000 A	05.50 v	02.100 A
M2	09.00 v	02.000 A	09.50 v	02.500 A
M3	12.00 v	02.500 A	12.50 v	02.600 A
M4	24.00 v	03.000 A	24.50 v	03.500 A
Set	05.00 v	0.000 A	Limit	05.00 v 0.000 A

Set values of current Set values of O.C.P

Edit

To edit the channel parameters of M1 to M4, follow these steps:

1. Press Memory key on front panel, the shortcut interface will display.
2. Turn the knob and a gray selection box appears.
3. Press the V/I/OVP/OCP key to set the voltage / current / over voltage protection / over current protection value.
4. Turn the knob to change the value of the current cursor, press the knob or press the V/I/OVP/OCP key to move the cursor.

Set values of voltage Set values of O.V.P

	U	I	OVP	OCP
M1	04.94 v	02.000 A	05.50 v	02.100 A
M2	09.00 v	02.000 A	09.50 v	02.500 A
M3	12.00 v	02.500 A	12.50 v	02.600 A
M4	24.00 v	03.000 A	24.50 v	03.500 A
Set	05.00 v	0.000 A	Limit	05.00 v 0.000 A

Set values of current Set values of O.C.P

Set List Waveform Output

The user can edit and output the waveform. A set of waveforms contains 10 editable points.

The four editable parameters of each point include output voltage, output current, waveform duration and whether the point is selected. When the editing is completed, the instrument can output the expected waveform according to the time sequence edited by the user.

List waveform editing

To edit the List output waveform, the steps are as follows:


1. Long press the **Memory** function key on the front panel for 3 seconds to enter the “List waveform editing interface”;
2. In the non-parameter setting state, turn the knob to display a gray selection frame, turn the knob to select the editable point
3. Press the V/I/OVP/OCP key to enter the parameter setting state, and set the U / I / T / Y/N
4. In the parameter setting state, turn the knob to change the value of the current cursor, press the knob or press the V/I/OVP/OCP key to move the cursor position; short press the **Memory** function key on the front panel to exit the parameter setting status
5. In the non-parameter setting state, press the **knob** for 3 seconds to confirm, enter the “List Waveform Output Mode”, and at the same time, switch back to the main interface;
6. Long press the **Memory** function key on the front panel for 3 seconds to exit the “List waveform editing interface”.

OFF CC T 00:00:00 00.00 w				
	U	I	T	Y/N
1	04.94 v	02.000 A	00:00:00	✓
2	09.00 v	02.000 A	00:00:00	✓
3	12.00 v	02.500 A	00:00:00	✓
4	24.00 v	03.000 A	00:00:00	✓
Set		Limit		
05.00 v 0.000 A		05.00 v 0.000 A		

List waveform output

To perform List waveform output, the steps are as follows:

1. Follow the steps described in 1.1 to edit the List waveform;
2. Enter “List output mode”, at this time, the first point of the List waveform pre-output is displayed in the upper right corner, such as “List1”;
3. Short press the **On/Off** function key on the front panel, the instrument will output according to the List editing time sequence, and the status bar at the top of the main interface will display the current List output point and the countdown of the duration of this point;
4. In the List output mode, press and hold the **Memory** function key on the front panel for 3 seconds to exit the “List output mode”.

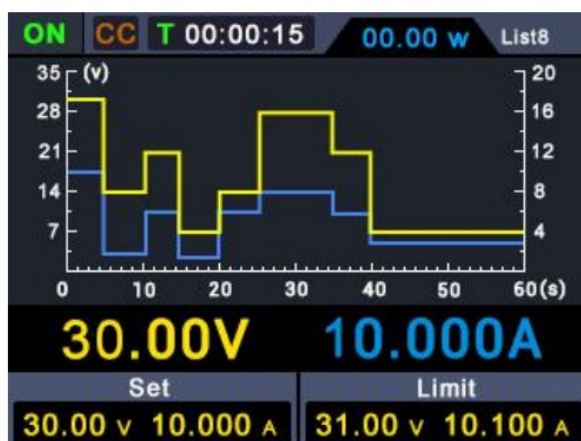

Set Automatic Output at Power-on

The user can turn on or turn off the “automatic output at power-on” function by pressing and holding the **On/Off** function key for 3 seconds.

1. The steps are as follows. The user can turn on or turn off the “automatic output at power-on” function by pressing and holding the On/Off function key for 3 seconds. The steps are as follows:
2. When the “automatic output at power-on” is turned off, after power on, the instrument is in the standby state. The user needs to manually perform the “On/Off” operation, then the instrument will output.




Display

Press the **Display** function key to choose to display the measurement data in number or curve.

Number

Press the **Display** function key to set the display mode to Number. When the power supply is powered on, the default display mode is Curve.

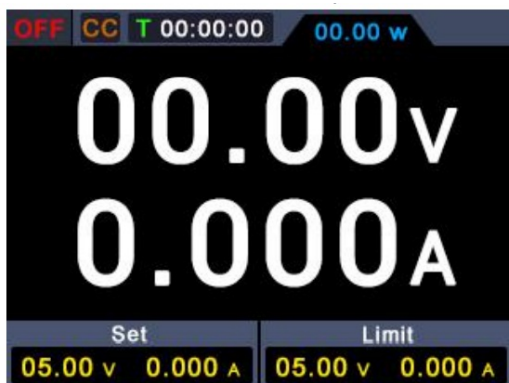

Curve

Press the **Display** function key to set the display mode to Curve.



Troubleshooting

1. The instrument is powered on but no Display.
 - Check if the power is connected properly.
 - Check if the fuse which is below the AC Power socket is used appropriately and in good condition (the cover can be pried open with a straight screwdriver).
 - Restart the instrument after the steps above.
 - If the problem still exists, please contact us for our service.
2. The output is abnormal:
 - Check if the output voltage is set to 0V. If so, set it to other value.
 - Check if the output current is set to 0A. If so, set it to other value.
 - When in programmable output status, check if there is any voltage/current value is set to 0. If so, set it to other value.

- If the problem still exists, please contact us for our service.

Technical Specification

The instrument must be operated continuously for more than 30 minutes at the specified operating temperature to achieve the following specifications.

Input Characteristics

Supply Voltage 220Vac±15%, please supply power according to the mark on the left of the power input socket on the rear panel of the instrument

Input Frequency 45~65Hz

Input Parameter (220Vac±15%)

Input Voltage Range 187~253Vac

Input active power 300W

Input maximum apparent power DSP-3005 400 VA Max

DSP-3010 DSP-6010 800 VA Max

DSP-3005 ≤1.4A

Full Load Input Current

DSP-3010
DSP-6010 ≤2.8A

DSP-3005 ≤100mA

No-Load Input Current

DSP-3010
DSP-6010 ≤150mA

	DSP-3005	250V, F3A
Input Fuse	DSP-3010	
	DSP-6010	250V, F5A

Rated Output

(Note: For DSP-6010, constant power is 300W, when voltage reaches max 60V, current can reach max 5A, and when current reaches max 10A, voltage can reach max 30V.)

	DSP-3005	0~30V
Voltage	DSP-3010	0~30V
	DSP-6010	0~60V
	DSP-3005	0~5A
Current	DSP-3010	0~10A
	DSP-6010	0~10A
Max output power	DSP-3005	150W
Max output power	DSP-3010	
	DSP-6010	300W
Efficiency (220Vac, rated load)	85%	
Regulation(CV)		
Load	≤30mV	

Line ≤20mV

Regulation(CC)

Load ≤30mA

Line ≤20mA

Ripple & Noise (Noise bandwidth 20MHz, ripple bandwidth 1MHz, connect 10uF electrolytic capacitor in parallel with 0.1uF ceramic capacitor to the output terminal for testing)

	DSP-3005	
	DSP-3010	≤30mV

Voltage (Vp-p)

DSP-6010	≤50mV
----------	-------

DSP-3005	
DSP-3010	≤3mV

Voltage (rms)

DSP-6010	≤5mV
----------	------

Current (Ap-p) ≤30mA

Setting Resolution

Voltage 10mV

Current 1mA

Readback Resolution

Voltage10mV

Current1mA

Setting Accuracy

DSP-3005
DSP-3010≤0.1%±20mV

Voltage

DSP-6010≤0.1%±30mV

Current≤0.1%±10mA

Readback Accuracy

DSP-3005
DSP-3010≤0.1%±20mV

DSP-6010≤0.1%±30mV

Current≤0.1%±10mA

Response time

Transient recovery time≤1ms

(50%~100% rated load)

Protective function

DSP-30050~31V

OVP	DSP-3010	0~31V
	DSP-6010	0~61V
OCP	DSP-3005	0~5.1A
	DSP-3010	0~10.1A
	DSP-6010	0~10.1A
OTP	85°C	

Temperature coefficient of output

Voltage 100ppm/°C

Current 200ppm/°C

Temperature coefficient of readback value

Voltage 100ppm/°C

Current 200ppm/°C

Display

Display Type 2.8inches color LCD

Resolution 240 × 320 pixels

Color 65536 color, TFT

Environment

Temperature	Working Temperature:0°C 40°C
	Storage Temperature:-20°C 60°C
Relative Humidity	≤90%RH; no condensation
Height	2,000 meters
Cooling	Fan cooling, temperature intelligent speed control
Other	
Communication Port	USB communication, compatible with SCPI
USB Charging Port	5V/1A USB charging
Dimension	82mm(Width)×142mm(Height)×226mm(Length)
Weight	Approx. 1.5 kg

Appendix

Appendix A: Accessories

(The accessories subject to final delivery.)

Power cord x 1
User manual EN x 1
User manual DE x 1
Safety Hintsheet x 1
Fuse x 1
CD ROM x 1
USB Cable x 1

Appendix B: General Care and Cleaning

General Care

Do not store or leave the instrument where the liquid crystal display could be exposed to direct sunlight for long periods of time.


Caution: To avoid any damage to the instrument, do not exposed it to any sprays, liquids, or solvents.

Cleaning

Inspect the instrument as often as operating conditions require. To clean the instrument exterior, perform the following steps:

Wipe the dust from the instrument surface with a soft cloth. Take care not to scratch the transparent LCD protection screen when cleaning.

Disconnect power before cleaning your instrument. Clean the instrument with a damp soft cloth (not dripping with water). It is recommended to clean with soft detergent or fresh water. To avoid damage to the instrument, do not use any corrosive chemical cleaning agents.

 **Warning:** Before re applying power, ensure that the instrument is completely dry, avoiding any electric shock or electrical shortcircuit resulting from moisture.

VOLTCRAFT[®]

Documents / Resources

VOLTCRAFT

Single Channel
DC Power Supply
User Manual

• DSP-3005
• DSP-3010
• DSP-6010

[VOLTCRAFT DSP Series Single Channel DC Power Supply](#) [pdf] User Manual

DSP-3005, DSP-3010, DSP-6010, DSP Series Single Channel DC Power Supply, DSP Series, Single Channel DC Power Supply, DC Power Supply, Power Supply

Manuals+,

- [home](#)
- [privacy](#)