



VonShef 2000121 4 Slice Deep Fill Toasted Sandwich Maker Instruction Manual

[Home](#) » [Vonshef](#) » VonShef 2000121 4 Slice Deep Fill Toasted Sandwich Maker Instruction Manual 

VonShef




2000121 4 Slice Deep Fill Toasted Sandwich Maker
Instruction Manual



Contents

1	2000121 4 Slice Deep Fill Toasted Sandwich Maker
2	INTENDED USE
3	GENERAL SAFETY
4	CABLES AND PLUGS
5	RISK OF PERSONAL INJURY
6	CLEANING & MAINTENANCE
7	TECHNICAL SPECIFICATION
8	COMPONENT LIST
9	COMPONENTS
10	OPERATION
11	CLEANING
12	DISPOSAL INFORMATION
13	CUSTOMER SERVICE
14	WARRANTY
15	Documents / Resources
16	Related Posts

2000121 4 Slice Deep Fill Toasted Sandwich Maker

	Please read all instructions carefully before use and retain for future reference.
	CAUTION Do not immerse in water.
	CAUTION hot surfaces



Please read all instructions carefully before use and retain for future reference.

INTENDED USE

Only operate the appliance for its intended purpose and within the parameters specified in this manual. This appliance is for domestic use only. Do not use it outdoors or on wet surfaces. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless supervised or given appropriate instruction concerning the product's use by a person responsible for their safety. The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

GENERAL SAFETY

Do not allow to be used as a toy. Children should be supervised to ensure they do not play with the appliance. If the appliance is not functioning properly, has been dropped, damaged, left outdoors, or immersed in liquid, do not use it, contact DOMU Brands Customer Services.

Do not use the appliance if any parts appear to be faulty, missing or damaged.

Ensure all parts are securely attached as instructed by this instruction manual before use.

CABLES AND PLUGS

Check to ensure your electricity supply matches that shown on the rating plate. This product should only be used as rated. Preferably, the socket-outlet should be protected by a Residual Current Device RCD (UK/EU) Ground Fault Indicator (US). Do not use a damaged cable or plug. If the supply cable is damaged, it must be replaced by a qualified engineer or authorized service agent in order to avoid a hazard. The use of an extension cable is not recommended.

Do not handle the plug or appliance with wet hands.

Keep the cable away from heated surfaces.

Do not let the cable hang over the edge of the table or countertop where it could be pulled on inadvertently by children or pets.

Do not pull the cable around sharp edges or corners.

Do not leave it unattended when plugged in. Unplug from the outlet when not in use.

Turn off all controls before unplugging.

Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable.

Always unplug before performing user maintenance, connecting or disconnecting attachments, or changing accessories.

Ensure the cable is stored safely to prevent hazards.

RISK OF PERSONAL INJURY

Always locate your appliance away from the edge of the worktop, on a firm, flat, heat-resistant surface with sufficient space around all sides. Do not insert any objects into openings or cover the appliance.

Do not place any cardboard, plastics, or paper inside or on the appliance unless stated in the instructions. Do not use the appliance near any combustible surfaces. Only use suitable cookware where applicable. Do not use outdoors or near heat sources. Take care not to touch any surfaces that may get hot when in use. Take care not to touch any surfaces that may remain hot for a period of time after use. Never operate the appliance when empty.

Do not overload/overfill the appliance.

When used for the first time your appliance may give off a 'new' smell or vapor. This will dissipate after a few uses.

Do not lift or move the appliance whilst in use. Do not operate continuously for periods longer than those marked on the product or indicated in the instructions.

Ensure the appliance is switched off and unplugged before changing accessories or cleaning. Use only as described in this manual and with DOMU Brands' recommended attachments only.

CLEANING & MAINTENANCE

Never soak or immerse electrical or heating components and or a component that has a plug attached.

Hand washing is recommended; soak in warm soapy water and wipe down using a soft sponge. To remove stubborn stains, use a non-abrasive cleaning brush. Do not use abrasive, harsh cleaning solutions or metal scouring pads.

Never wash any electrical or heating components or a component that has a plug attached in a dishwasher.

TECHNICAL SPECIFICATION

Rated Voltage 220-240V

 
Rated Power 1600W

Rated Frequency 50/60Hz


COMPONENT LIST

1. Handle.
2. Handle Storage Clip.
3. Ready Light (Green)
4. Power Light (Red)
5. Sandwich Plates.

COMPONENTS

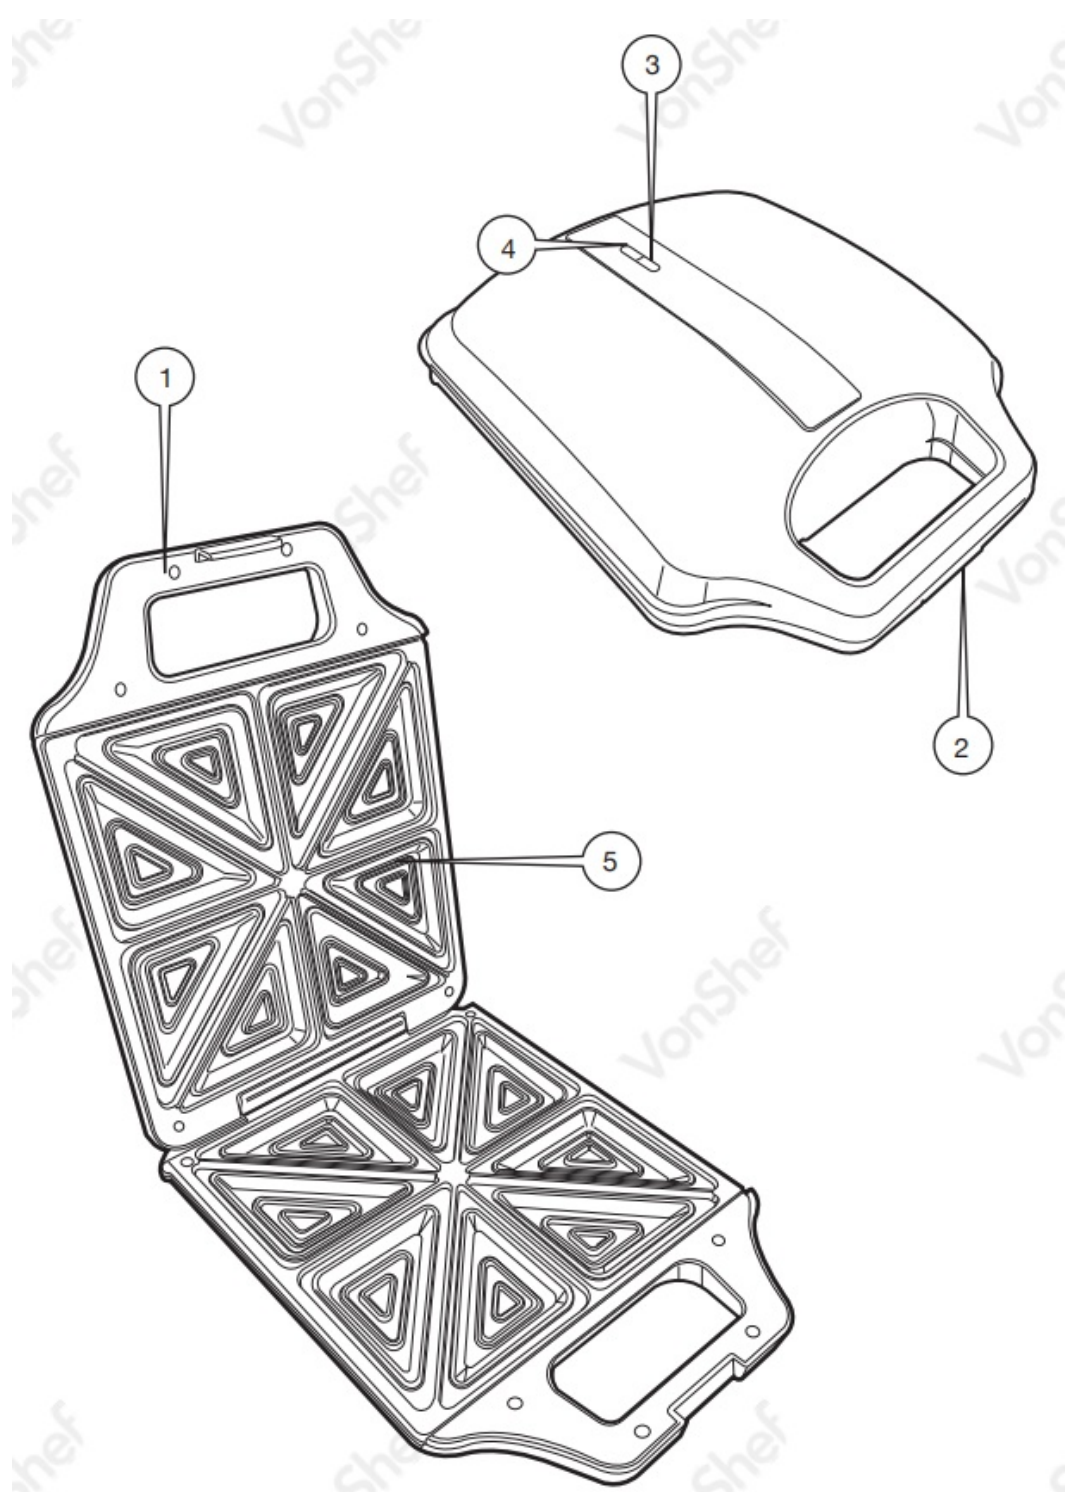


BEFORE FIRST USE

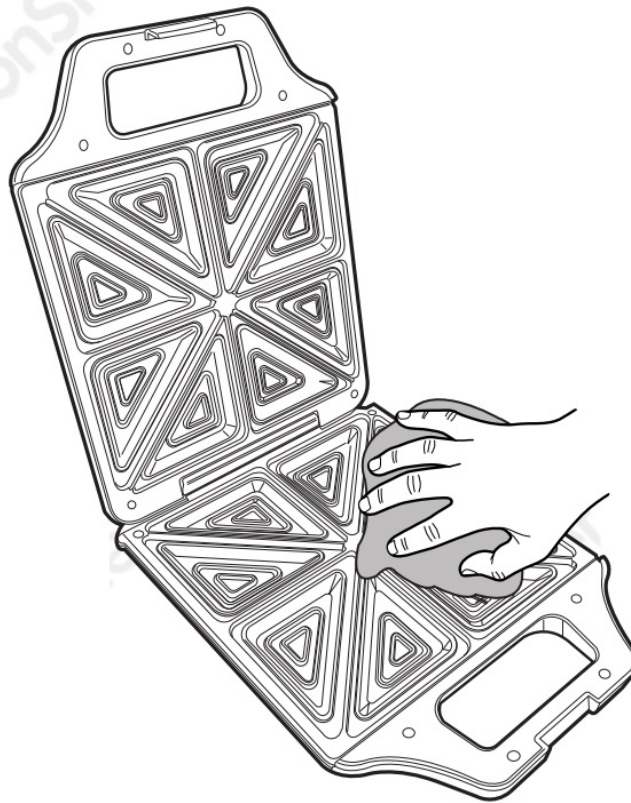 

Clean the NON-STICK PLATES NON-STICK PLATES using a damp cloth or sponge and mild detergent. Wipe dry with a soft dry cloth.


OPERATION

 1

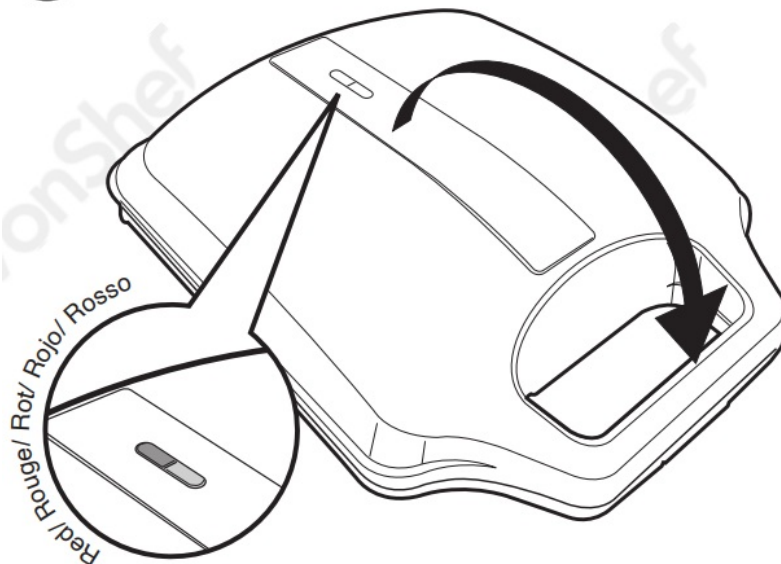


Close the LID and connect to a mains outlet to pre-heat.

 2

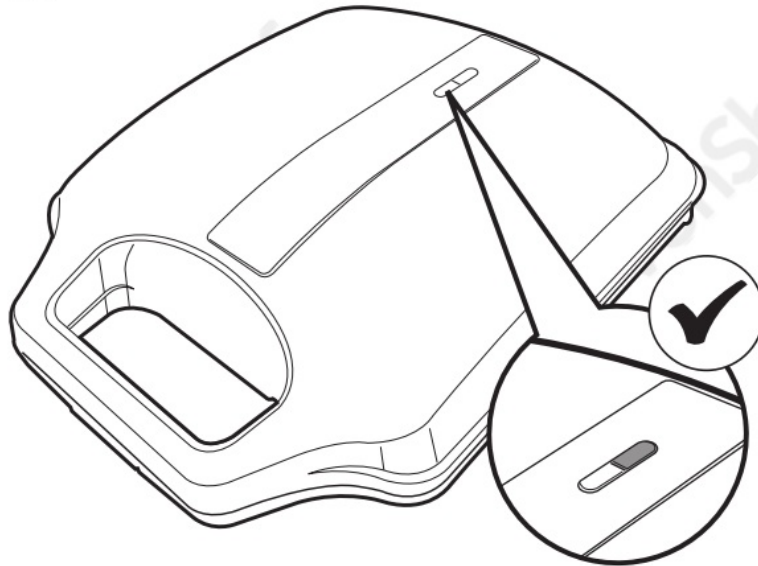


When the READY LIGHT (Green) illuminates, the appliance is heating up. When the light goes out, the appliance is ready to use.

 3

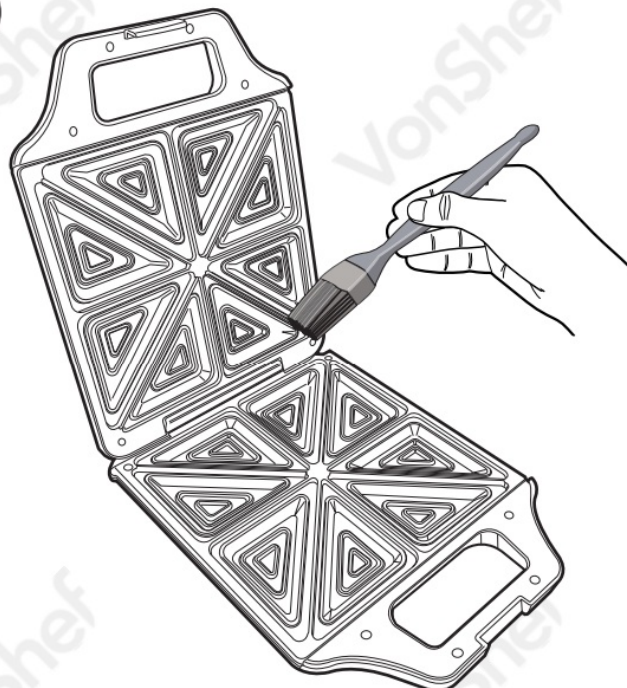


Lightly coat the Plates with cooking oil or butter.

 4

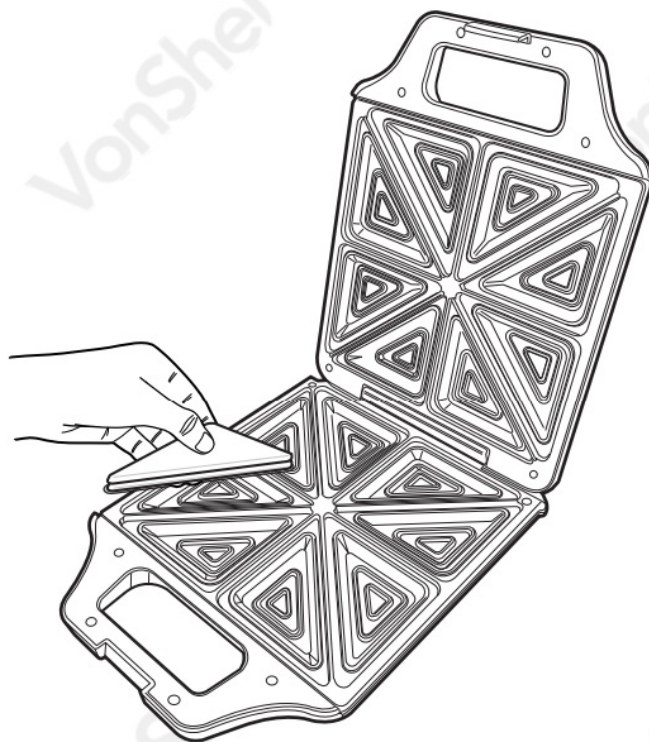

Place chosen ingredients into LOWER PLATES.

 5

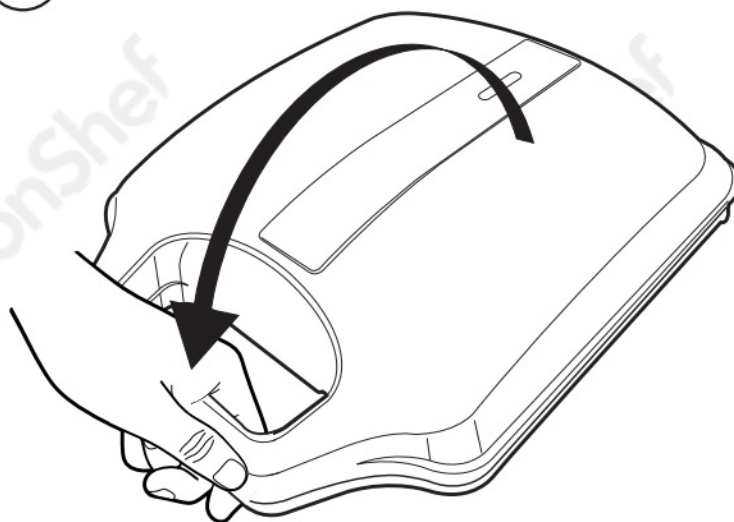

Close and press down slightly until cooked. Do not use force

6



Remove the food with the help of a plastic or wooden spatula.

 
Always store the appliance when it has completely cooled down.

Take extra care when opening the Lid, steam may be emitted. If you intend on making batches, close the lid in between batches to conserve heat.


Resist opening the Lid too early to check the progress of your food. Lifting too early could result in the mixture sticking or splitting.

Overfilling may cause the mixture to overflow. The ready light will cycle on and off during operation. This is completely normal.

CLEANING

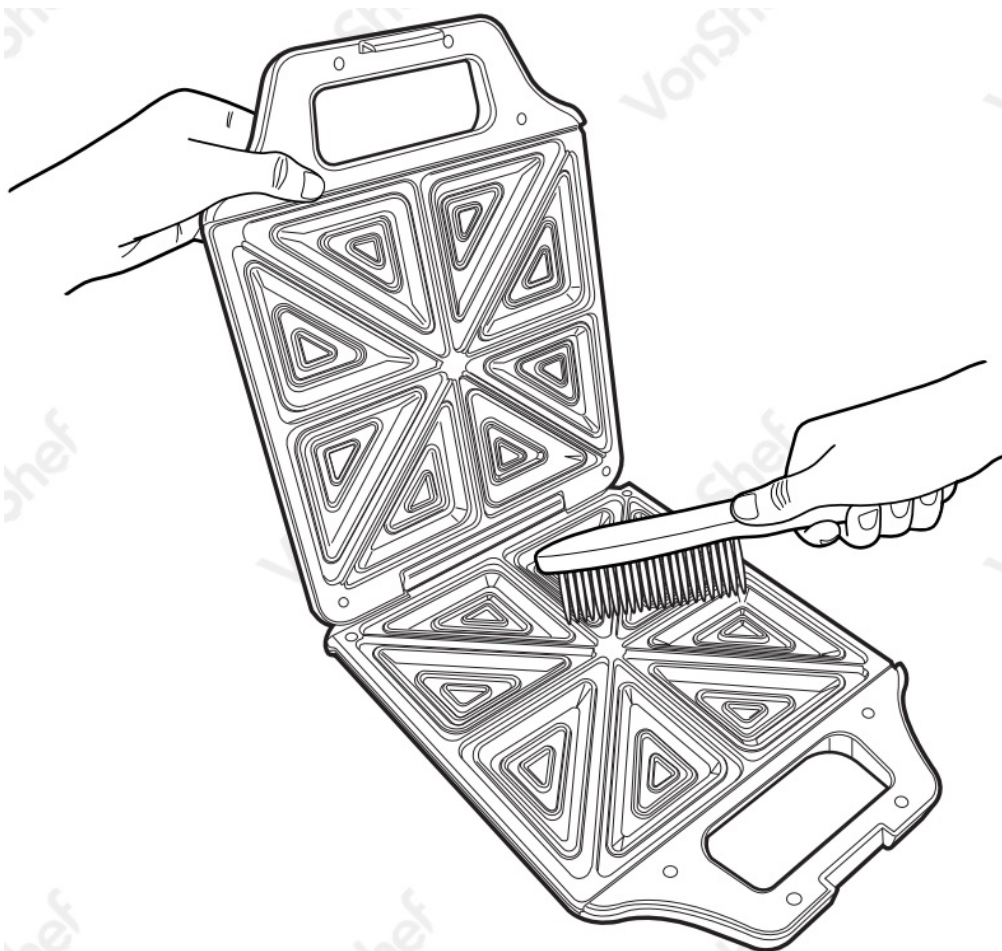

 Use the Handle Storage Clip to lock the appliance before storing it.

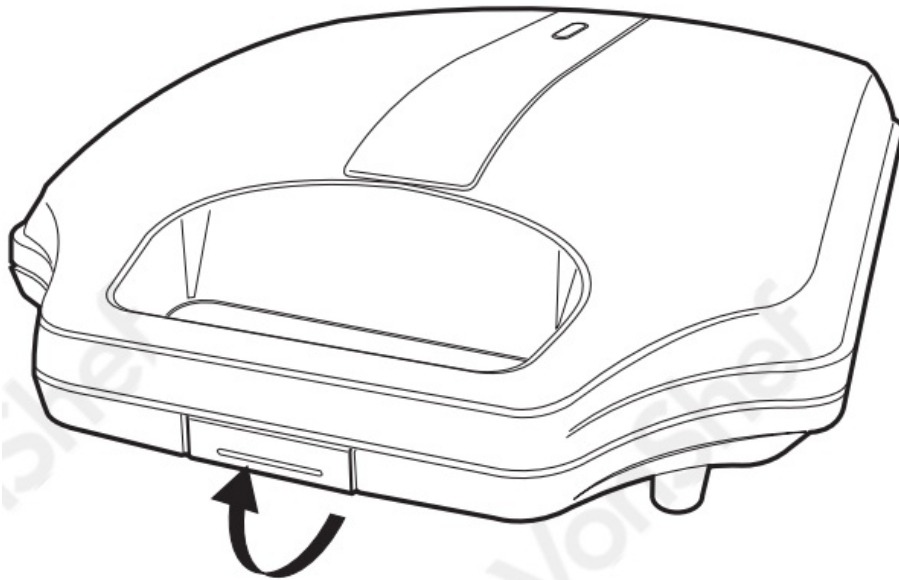

DISPOSAL INFORMATION

Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE

If you are having difficulty using this product and require support, please contact support@domu.co.uk

WARRANTY

To register your product and find out if you qualify for a free extended warranty please go to www.vonshef.com/warranty.

Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in their original packaging and accompanied by a relevant and completed returns form.

This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT

All material in this instruction manual is copyrighted by DOMU Brands. Any unauthorized use may violate worldwide copyright, trademark, and other laws.


THANK YOU

Thank you for purchasing your product/appliance.

Should you require further assistance with your purchase, you can contact us at support@domu.co.uk



Documents / Resources

	<p>VonShef 2000121 4 Slice Deep Fill Toasted Sandwich Maker [pdf] Instruction Manual 2000121 4 Slice Deep Fill Toasted Sandwich Maker, 2000121, 4 Slice Deep Fill Toasted Sandwich Maker, 4 Slice Sandwich Maker, 4 Slice Toasted Sandwich Maker, Sandwich Maker</p>
-----------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------