

VONYX
MEG025 Portable
Megaphone Loudhailer



VONYX MEG025 Portable Megaphone Loudhailer Instruction Manual

[Home](#) » [VONYX](#) » VONYX MEG025 Portable Megaphone Loudhailer Instruction Manual 

Contents

- 1 VONYX MEG025 Portable Megaphone Loudhailer
- 2 Instruction
- 3 PARTS AND FUNCTIONS
- 4 OPERATIONAL INSTRUCTIONS
- 5 RECORD INSTRUCTION
- 6 TECHNICAL SPECIFICATION
- 7 Frequently Asked Questions
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

VONYX

VONYX MEG025 Portable Megaphone Loudhailer



Instruction


Congratulations to the purchase of this Fuzzix product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the product is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The product contains voltage carrying parts. Therefore, do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the product on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the product with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the product into a mains outlet and DO NOT switch the unit on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.

- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the product out of the reach of children. Do not leave the product unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Do not force the controls.
- If this product is with speaker inside which can cause magnetic field. Keep the product at least 60cm away from computer or TV.
- If the product has built-in lead-acid rechargeable battery. Please recharge the battery every 3 months if you are not going to use the unit for a long period of time. Or the battery may be damaged.
- If the battery is damaged please replace with same specifications battery. And dispose the damaged battery environment friendly.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions.
- This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.
- This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.
- The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!
- NOTE: To make sure that the product will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



-  Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.
- Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Fuzzix cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

WARNING

- Do not place in direct sunlight or in a high temperature environment for a long period of time.
- Avoid exposure to rain, water or heavy humidity.
- When cleaning the megaphone body only use a neutral detergent. Never use thinner or benzene.
- Never point the megaphone directly at persons or animals. To avoid damaging of the ears, ensure sufficient distance to other persons and ensure a reasonable volume adjustment!
- Keep the device away from children and unauthorized users.
- If not in use for a long period of time, remove the batteries and store them separately to prevent leaking batteries and damaging the circuits inside the megaphone.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any defect or problem.
- Unauthorized conversion and/or modification of the product is inadmissible because of safety and approval reasons (CE).
- Do not leave packaging material unattended. Plastic foils or bags etc. might become a dangerous toy for children.

Attention

Watch out near people and animals! This item can cause hearing damage!

PARTS AND FUNCTIONS

1. Power/REC Indicator

Indicator will light up when the power or recording is on REC indicator flashes when it is in playback function

2. SD Slot

SD card can be inserted here

3. USB Slot

USB card can be inserted here

4. On/Off

5. Siren

Press to activate/deactivate siren

6. Record

Press to start/end recording

7. Play


Press to play media source

8. ⏮ Previous track media source Decrease volume

9. ⏸ Play/Pause media source


10. ⏭ Next track media source Increase volume

11. Built in Microphone

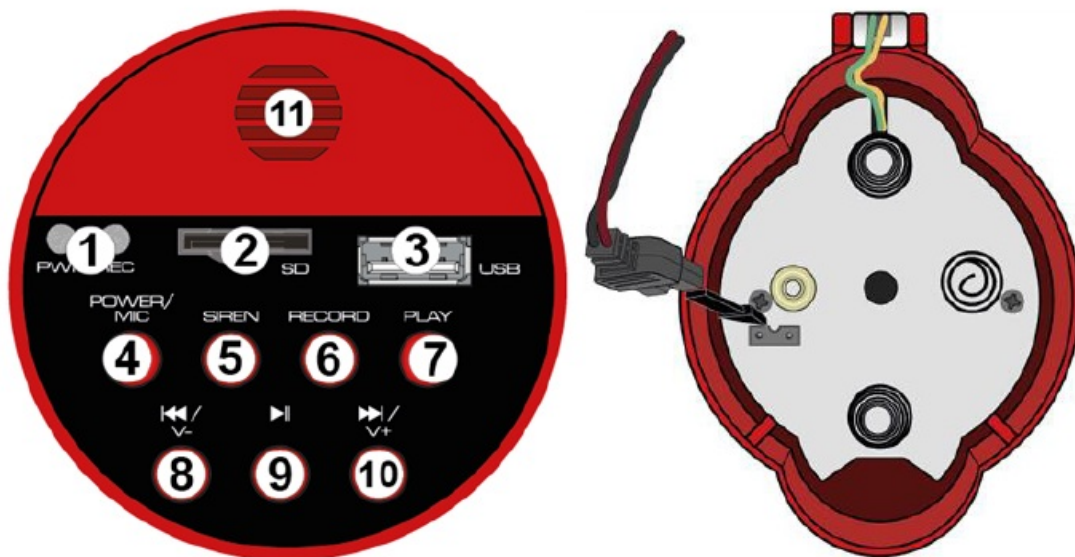

OPERATIONAL INSTRUCTIONS

1. Installing the batteries: Press the battery unlock button to open the top cover. Put 4 D batteries properly (+/- terminals must match) into the battery compartment and close the top cover. If you choose to use the rechargeable battery, plug it in as shown on the picture above.
2. Press [POWER] to activate the microphone.
Position the horn opening towards the audience and speak through the microphone.
3. Bring the microphone close to your lips and speak normally.
3. Press [V-] or [V+] to adjust the volume level to optimum without causing howling or feedback. Please note that the closer the sound source is to the microphone the better the amplification is.
4. Press [SIREN] to activate emergency siren/alarm. Press [SIREN] again to deactivate
5. The playback/recording source is the external device you choose to plug in. (USB, SD or AUX)
6. Press [PLAY/PAUSE]. The led indicator on the megaphone will blink green indicating it is ready to be paired via BT with your telephone or other device. When pairing is successful, the indicator will stop blinking. When a USB disk is inserted, BT cannot be used.
7. If the megaphone is activated and the volume of the speaker is weak, the batteries might be empty. Follow step 1 to replace the batteries.
8. When the megaphone is not use for a long period, remove the batteries.
9. Empty batteries or rechargeable battery will not give sufficient sound volume. Replace cells or charge the battery at regular intervals, for optimum result.

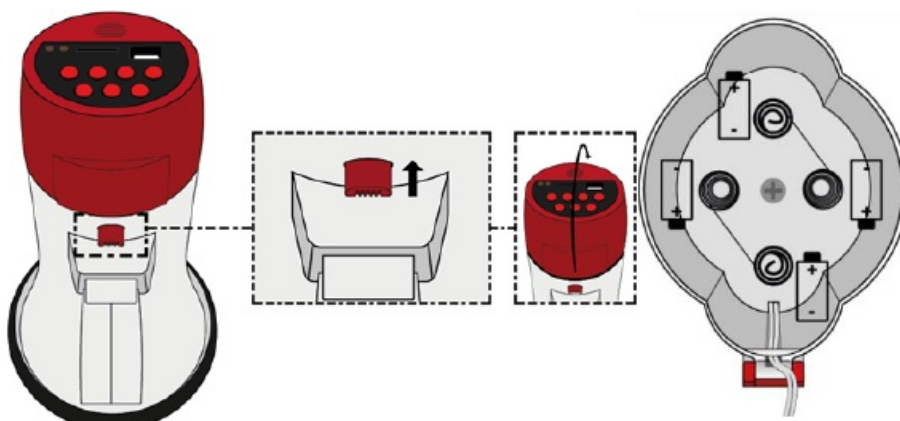

RECORD INSTRUCTION

1. Press [RECORD]. The led indicator will light up to indicate the device is recording.
2. Maximum record time is about 60 seconds.
3. Press [RECORD] again to finish the recording.
4. Press [PLAY] to activate the recorded materials circularly. The led will flash during playback. Press [PLAY] again and the playback will deactivate.

TECHNICAL SPECIFICATION

- Audible range: 500 m Batteries: 6V (4x D cel)
- Output power max: 25W Dimensions (L x W x H): 260 x 140 x 158mm
- Weight: 1,50 kg

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject:

- Tronios B.V., Bedrijvenpark
- Twente Noord 18, 7602KR Almelo,
- The Netherlands



2014/35/EU

2014/30/EU

2011/65/EC

United Kingdom

- Tronios Ltd.,
- 130 Harley Street,
- London W1G 7JU, United Kingdom



S.I. 2016:1101

S.I. 2016:1091

S.I. 2012:3032

Specifications and design are subject to change without prior notice.

www.tronios.com

Copyright © 2024 by TRONIOS the Netherlands

Frequently Asked Questions


- **Q: Can I repair the product myself if an issue arises?**

A: No, repairs should only be carried out by a qualified technician to avoid electrical shock and warranty invalidation.






- **Q: What should I do if I encounter a malfunction with the product**

A: Seek advice from a specialist and do not attempt to force controls or make repairs yourself.

Documents / Resources

	<p>VONYX MEG025 Portable Megaphone Loudhailer [pdf] Instruction Manual MEG025, 952.005, MEG025 Portable Megaphone Loudhailer, MEG025, Portable Megaphone Loudhailer, Megaphone Loudhailer, Loudhailer</p>
---	---

References

-  [Samen zijn we open. Samen staan we sterk. - Stichting OPEN](#)
-  [Samen zijn we open. Samen staan we sterk. - Stichting OPEN](#)
-  [Sound & Light distributor - Tronios.com](#)
-  [Homepage Wecycle - Wecycle](#)
-  [Homepage Wecycle - Wecycle](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.