

Vorago KBW-400 Wireless Keyboard



# Vorago KBW-400 Wireless Keyboard Instruction Manual

[Home](#) » [Vorago](#) » Vorago KBW-400 Wireless Keyboard Instruction Manual 

## Contents

- [1 Vorago KBW-400 Wireless Keyboard](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 KNOW YOUR DEVICE](#)
- [5 INSTRUCTIONS FOR USE](#)
- [6 Wireless connection](#)
- [7 Keyboard functions](#)
- [8 TROUBLESHOOTING](#)
- [9 DATA SHEET](#)
- [10 Limited product warranty](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)



**Vorago KBW-400 Wireless Keyboard**



## Product Information

### Specifications

- **Operating Systems:** Windows Vista/Windows 7/8/10/11
- **Working Voltage:** 3V-5V
- **Working Current:** 50mA
- **Power Consumption:** 0.25 mA
- **Product Size:** 290 x 130 x 20mm
- **Product Weight:** 310g
- **Interface:** USB A Wireless nano receiver
- **Operating Frequency Range:** 2402.65 – 2480.65 MHz
- **Battery:** Rechargeable 400 mAh BT (2 options)
- **Additional Connectivity:** Bluetooth (BT), Type C
- **Range:** 10m

### Product Usage Instructions

#### Charging the Keyboard

- Charge the keyboard using the Type C to USB cable. Wait until the red charging light stops turning on before removing the cable.

#### Turning On the Keyboard

- Switch on the keyboard by moving the power button located on the front left side to the right.

#### Wireless Connection

- To establish a wireless connection, insert the dongle (USB included) into your device and press and hold the Wireless key (F4).

## **Bluetooth Connection**

- Press and hold either the BT1 or BT2 key for 3 seconds as needed. The BT indicator will flash. Search for the device name “KBW-400” on your computer to pair.

## **Sleep Mode**

- If there is no activity for 5 minutes, the keyboard will enter sleep mode. Press any key to wake it up.

## **Keyboard Functions**

- **F1:** Connect with device 1
- **F2:** Connect with device 2
- **F3:** Activate 2.4G mode
- **F4:** Previous
- **F5:** Pause/play
- **F6:** Next
- **F7:** Mute
- **F8:** Volume down
- **F9:** Volume up
- **F10:** Adjust brightness down
- **F11:** Adjust brightness up

## **FAQ**

**Q:** How do I know if the keyboard is charging?


**A:** The red light indicates that the keyboard is charging.

**Q: How can I switch between connected devices?**

**A:** Use the function keys F1 and F2 to switch between connected devices.

## **KNOW YOUR DEVICE**

1. Type C charging port
2. Switch On / Off
3. Choose BT device
4. Conexión Wireless 2.4G
5. Indicator light
6. Keyboard
7. Direction buttons

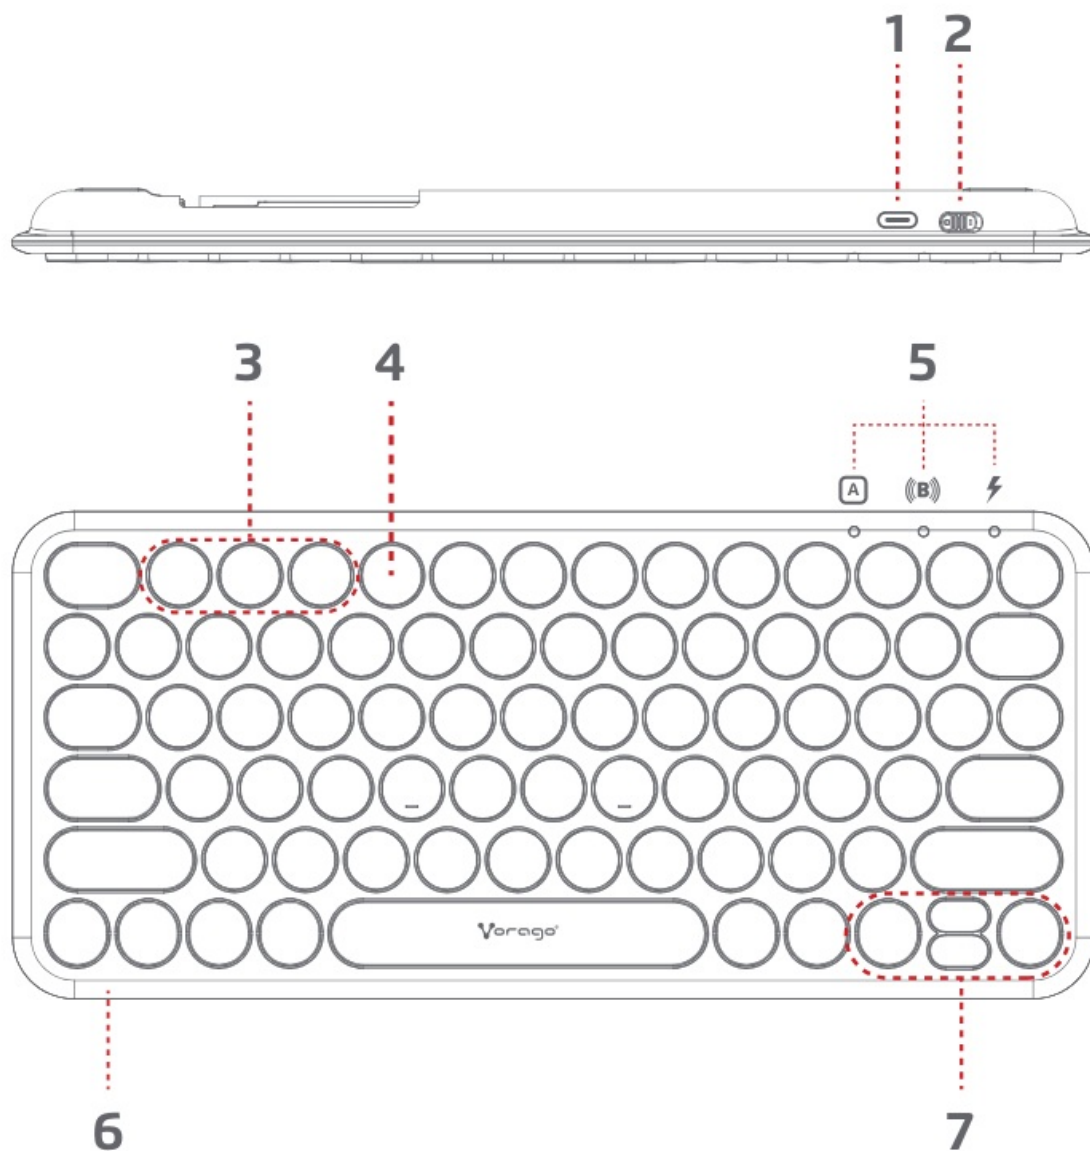

## INSTRUCTIONS FOR USE

- Charge the keyboard with the Type C to USB cable from either a powered device or charger.
- The time may vary until the red charging light (upper right) stops turning on, then the cable can be removed.
- Subsequently, turn on the keyboard on the button that is on the front, left side, you have to move it to the right.

## Wireless connection

- It is necessary to connect the dongle (USB included) to the port of the device and keep the Wireless (F4) key pressed.









## Connection BT

- Press and hold the BT1, and BT 2 keys as required for 3 seconds, the BT indicator flashes, and search the device name “KBW-400” on your computer, in total there are 3 different devices you can connect.

## Sleep mode

- After no operation for 5 minutes, the device enters the power-saving Sleep mode.
- Sleep / Wake: Press any key to wake up.

## Keyboard functions

- F1 Connect with device 1
- F2 Connect with device 2
- F3 Activate 2.4G
- F4 Previous
- F5 Pause/play
- F6 Next
- F7 Mute
- F8 Volume-
- F9 Volume+
- F10 Brightness-
- F11 Brightness+
-   **White light**, Caps Lock indicator
-   **Blue light**, BT indicator
-   **A red light on** Charging
-   **Red light off**: Keyboard charged 100%

## TROUBLESHOOTING

### If your keyboard or mouse doesn't work at all:

- Make sure the USB receiver is well connected to the USB port of your computer.
- Make sure your computer is working properly.
- Try to change the receiver to another USB port.
- If it is by BT, try deactivating and activating the Bluetooth connectivity of the computer.
- Verify that the keyboard is correctly charged.

## PRECAUTIONS AND WARNINGS

- Avoid spilling liquids on your keyboard, since it can cause a malfunction.
- Clean your keyboard with a dry cloth.
- Do not attempt to operate this product in conditions other than normal, failure to do so may cause equipment damage or cause electric shock.

## DATA SHEET

Operating systems	Windows Vista/Windows 7/8/10/11
Working voltage	3V-5V
Working current	50mA
Power consumption	0,25 mA
Product size	290 x 130 x 20mm
Product weight	310g
Interface	USB A Wireless nano receptor
Operating frequency range	2402,65 2480,65 MHz
Battery	Rechargeable 400 mAh
Additional connectivity	BT (2 options)
Charging port	Type C
Reach	10m

### Limited product warranty

Vorago equipment and/or accessories are covered by a limited warranty for the time indicated in the annexed validity table, counting from the date of acquisition, against any manufacturing and operation defect, provided they have been used under normal conditions of use during the warranty period and for which it was manufactured. Vorago warranty the buyer the absence of anomalies regarding the materials.

Products	Validity
PCs, tablets, cell phones, audio, keyboards, mice, networks, and accessories	12 Months
LCD Monitor * Except in panel (screen display) for which it will only be 12 months.	36 Months*
Computer equipment 3 years including Nanobay 3. * Except for computer equipment where the processor is integrated into the motherboard it will only be 12 months.	36 Months *

**Important warranty policy:** Please read and complete this warranty policy and seal it in the store when purchasing the product.

Product: Wireless keyboard	<b>Dealer stamp</b>
Model: KBW-400	
Brand: Vorago	
Serial number:	
Invoice number:	
Delivery date:	

## Responsibilities

- The total responsibility of Vorago will be to repair or replace the product, including labor and parts, at no cost to the buyer when it is returned to the point of sale, presenting this warranty policy properly completed and stamped by the establishment where it was purchased. The product or copy of the receipt or receipt or invoice, in which data of the product and the date of purchase is specified, to verify the times within the warranty.
- Vorago may use new parts, restored or used in good condition to repair or replace any product, at no additional cost to the consumer.
- In the case of equipment and/or accessories that can not be repaired, the change will be generated by a similar product or with superior characteristics.
- This warranty covers the transportation expenses of the product derived from its fulfillment; which will be directly attributable to the supplier of the product.
- In all replacement products, the original warranty period will be renewed.
- Vorago is governed by international standards for the manufacture of products.

## How to obtain warranty support

- Warranty claims are processed through the point of sale, during the first 15 days after the purchase, as long as they meet the requirements. Guarantee claims that can not be processed through the point of sale and any concerns related to the product purchased should be sent with the prepaid guide by Vorago to the address of the Vorago headquarters in Francisco Villa No. 3, Col. San Agustín, CP 45645, Tlajomulco de Zúñiga, Jalisco, Mexico.
- Except in situations of force majeure or fortuitous events, the repair time in no case will be greater than 30 calendar days from the date of receipt of the equipment in Vorago.

## Exclusions

### This warranty is as valid in the following cases:

- **a)** When the product had been used in conditions other than normal.
- **b)** When the product has not been operated under the instructions for use.
- **c)** When the product has been altered or repaired by unauthorized persons by Vorago.
- Vorago does not offer any other express warranty for this product.
- To make the warranty valid, as well as the acquisition of parts, components, consumables, and accessories
- To validate a warranty, the following information must be sent to the email: [garantias@voragolive.com](mailto:garantias@voragolive.com)

1. Model and color
2. Product failure
3. Ticket or purchase invoice (digitized)
4. Your address with CP, telephone and full Name.

Available in the establishment where the product was purchased and/or in our central offices:

## Returns

- In the case of product return, it will only be the place of purchase by the end customer.
  - Subject to the return policies established by the same seller.
- 

## Documents / Resources

	<a href="#">Vorago KBW-400 Wireless Keyboard</a> [pdf] Instruction Manual KBW-400 Wireless Keyboard, KBW-400, Wireless Keyboard, Keyboard
---	--

## References

- [User Manual](#)

### Manuals+, [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.