



VORNADO STRATA Oscillating Tower Circulator with Alexa User Guide

[Home](#) » [Vornado](#) » VORNADO STRATA Oscillating Tower Circulator with Alexa User Guide 

Contents

- 1 VORNADO STRATA Oscillating Tower Circulator with Alexa Product Information
- 2 Features
- 3 Warranty
- 4 Product Usage Instructions
- 5 IMPORTANT SAFETY INSTRUCTIONS
- 6 INSTALLATION WARNING
- 7 SAFE USE WARNING
- 8 SERVICING WARNING
- 9 User Servicing Instructions
- 10 FCC Compliance Statement
- 11 FEATURES
- 12 GETTING STARTED
- 13 HOW TO USE
- 14 REMOTE CONTROL
- 15 CLEANING
- 16 TROUBLESHOOTING
- 17 WARRANTY
- 18 IMPORTANT SAFETY INSTRUCTIONS
- 19 FCC Compliance Statement
- 20 IC Statement
- 21 Documents / Resources
 - 21.1 References
- 22 Related Posts



VORNADO STRATA Oscillating Tower Circulator with Alexa



Product Information

- **Model:** STRATA Oscillating Circulator
- **Manufacturer:** Vornado
- **Intended Use:** This product is intended to circulate the air in indoor living spaces only in the United States. It is designed for floor use only and is not intended for commercial or industrial use.
- **Safety Instructions:** Please read and follow the safety instructions provided in the user manual to ensure safe usage of the product.

Features

- Oscillating feature to circulate air effectively
- Includes a remote control for convenient operation
- Easy to clean

Warranty

The product comes with a warranty. Please refer to the warranty section in the user manual for more details.

Product Usage Instructions

Facility

To ensure safety and reduce the risk of fire, electrical shock, and injury, please follow these installation guidelines:

- Place the product away from curtains, draperies, tablecloths, and other fabrics to prevent them from being drawn into the product and causing damage or fire.
- Avoid placing the product near furnaces, fireplaces, stoves, or other high-temperature heat sources.

- Do not use the product in a window, on an uneven or unstable surface, or near water.
- Ensure that the appliance, power supply, power cord, and plug do not come into contact with water or wet surfaces.
- Avoid using the product in a bathtub, shower, or any location where it may fall into water.
- Do not use the product outdoors or expose it to weather or elements.
- Avoid running the cord under carpeting or covering it with throw rugs or similar coverings.
- Route the cord away from traffic areas and where it will not be tripped over.
- Ensure that the cord does not hang over edges of counters or get crimped or closed in doors.
- Place the appliance near an easily accessible outlet for quick unplugging during emergencies.

Use

To use the STRATA Oscillating Circulator:

1. Ensure that the product is plugged into a suitable power outlet.
2. Turn on the product using the power button located on the device or using the remote control.
3. Adjust the speed settings as per your preference using the control buttons on the device or remote control.
4. To enable oscillation, press the oscillation button on the device or remote control.
5. The product will start circulating air in the room. Adjust the direction and angle of the product as desired.

Cleaning

Regular cleaning is important to maintain the performance and longevity of the product. Follow these steps to clean the STRATA Oscillating Circulator:

1. Ensure that the product is turned off and unplugged from the power outlet.
2. Wipe the exterior surfaces of the product with a soft, damp cloth.
3. For deeper cleaning, remove the front grille by following the instructions provided in the user manual.
4. Use a soft brush or vacuum cleaner attachment to remove dust and debris from the grill and fan blades.
5. Once clean, reattach the front grille securely.

IMPORTANT SAFETY INSTRUCTIONS

This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on, together with the product, to any future owner. See www.vornado.com/circulators-manuals to view, download and print the most current version of these instructions.

INTENDED USE

This product is intended to circulate the air in indoor living spaces only in the United States. This product is intended for floor use only. This product is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty.

WARNING:

Risk to Children and Impaired Persons Supervision is required during the installation, operation, cleaning and maintenance of this product by children 12 years of age and younger and anyone with reduced physical, sensory or mental capabilities. Children should be supervised to ensure that they do not play with the appliance, its parts and packaging material.

INSTALLATION WARNING

To reduce risk of fire, electrical shock and injury to persons, observe the following:

- Place this product away from curtains, draperies, tablecloths and other fabrics, since they may be drawn into the product, damage the motor and/or cause a fire.
- No part of this product (the appliance, power cord, plug, packaging, etc.) should be placed near furnaces, fireplaces, stoves or other high temperature heat sources. Do not use this product in a window, on an uneven or unstable surface, or near water.
- The appliance, power supply, power cord and plug cannot come into contact with water. Do not use this product on wet surfaces. Do not use this product in a bathtub or shower or position product where it may fall into a bathtub, laundry, swimming pool or other water container. Do not use this product outdoors or expose it to weather or elements.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over. The cord should not hang over edges of counters or be placed where it can be crimped or closed in doors. Place appliance near an easily accessible outlet so the product can be unplugged quickly during an emergency.

SAFE USE WARNING

To reduce risk of fire, electrical shock and injury to persons, observe the following:

- **WARNING:** To reduce likelihood of circuit overload, fire and electric shock, do not operate with a solid state speed device, such as a dimmer control switch.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not operate unit if the unit has been dropped or damaged. Do not use this product if it has a damaged power cord or plug. To avoid risk of electrical shock, do not attempt to repair or replace parts. Only original replacement parts may be used. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Contact Vornado Consumer Service at 1-800-234-0604 (phone) or consumerservice@vornado.com (email) for further instructions about replacement and repair.
- Before plugging power cord into electrical outlet, be sure that all electrical information on the rating label, including voltage, is compatible with your outlet's power supply.
- Do not sit or stand on product.
- Never use the cord as a handle or otherwise yank, strain or stretch the power cord.
- While the product is plugged in, do not insert or allow foreign objects to enter any input or output opening as this may cause risk of electric shock or fire, or damage the product.
- A loose fit between wall outlet (receptacle) and plug may cause overheating and distortion of the plug. Discontinue use of the product in this outlet. Contact a qualified electrician to replace loose or worn outlets.
- This appliance has a polarized plug (one blade is wider than the other.) To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

- Before moving, repositioning, servicing, cleaning and when not in use, use the product controls to turn off the power and then unplug. To disconnect from outlet, grasp and pull only the plug. Also, power off and unplug if the product will be left unattended for an extended period of time or during electrical storms.

 
 
SERVICING WARNING

To reduce risk of fire, electrical shock and injury to persons, observe the following:

- Clean your product regularly, only as is instructed in this manual. Prior to cleaning, turn off the power on your product and unplug. Do not use gasoline, thinners, solvents, ammonias or other chemicals for cleaning. Refer to the CLEANING instructions provided.
- Do not open appliance housing. To avoid risk of shock, all service and/or repairs must be done by a Vornado Authorized Service Center.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

User Servicing Instructions

1. Using the product controls, turn off the appliance.
2. Grasp the plug (not the cord) and disconnect from the outlet.
3. Risk of Fire. Replace fuse only with 2.5 Amp, 125 Volt fuse as approved by Vornado Consumer Service. For an authorized replacement fuse, please contact Vornado Consumer Service.
4. Once the replacement is received, use a small flat-head screwdriver to slide open the fuse cover (located on the plug) (See Fig. A).
5. Remove fuse by using the screwdriver to gently lift each end of the fuse (See Fig. B).
6. Install the replacement fuse by using the screwdriver to gently push each metal end of the fuse into the receptacle one at a time. Do not push on the center of the fuse—it is fragile and may break.
7. Slide the fuse cover closed using the screwdriver. When closed, the cover should fit completely in the plug. No part of the cover should stick out (See Fig. C).
8. Plug your appliance into the outlet and turn the power on.
9. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

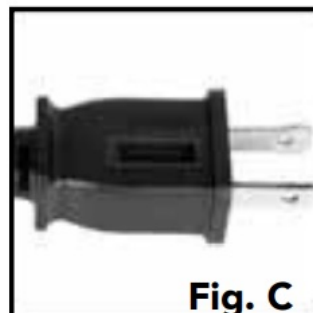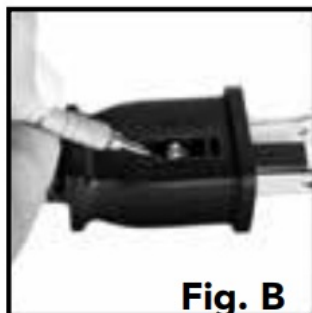

Risk of fire. Do not replace attachment plug. Contains a safety device (fuse, AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.

FCC Compliance Statement

- **NOTE:** This equipment has been tested and complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference
 2. this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the product and the receiver.
 - Connect the product into an outlet on a circuit different from that to which the receiver is connected.
 - Contact Vornado Consumer Service or dealer or an experienced radio/TV technician for help.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Supplier's FCC Declaration of Conformity

- **Unique Identifier:** Vornado Model STRATA
- **Responsible Party:** Vornado Air LLC
- **Mailing Address :** 415 E. 13th St., Andover, KS 67002
- **Contact:** www.vornado.com

RF Exposure Statement:

This product complies with the FCC RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

IC Statement

- This device complies with Canada Industry licence-exempt RSS standard(s). Operation is subject to the following two conditions:
 1. this device may not cause interference; and
 2. this device must accept any interference. Including interference that may cause undesired operation of the device.
- **Radiation Exposure Statement:** This product complies with the IC RF exposure limit set forth for an

uncontrolled environment and is safe for intended operation as described in this manual.

- **WARNING:** Batteries may pose a choking hazard. Do not let children handle batteries.

BATTERY DISPOSAL:

Please dispose of batteries according to the local laws and regulations of your region, and while keeping them away from children. Some batteries may be recycled and accepted for disposal at your local recycling center. DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY

EXPLODE OR LEAK.

- New and used batteries may cause injury. Keep new and used cells (or batteries) away from children.
- **WARNING:** Chemical burn hazard. Keep batteries away from children.
- **WARNING:** KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. In the US call the National Poison Control Center at 1-800-222-1222 or 202-625-3333.

FEATURES

TOUCH-SENSITIVE CONTROLS

Simple controls with a sleek aesthetic.

MULTIPLE SPEEDS

5 speed settings for every comfort level.

ADJUSTABLE OSCILLATION

90° or 180° oscillating airflow.

AIR OUTLET

Finger-friendly design.

SILICONE FEET

Non-marking feet added for stability.



DC MOTOR

Quiet and energy efficient.

 
REMOTE CONTROL

Convenience at your finger tips. When not in use, remote can be magnetically stored on the metal side grills or inside the air outlet at the top.

 


GETTING STARTED

BASE AND LEG ASSEMBLY

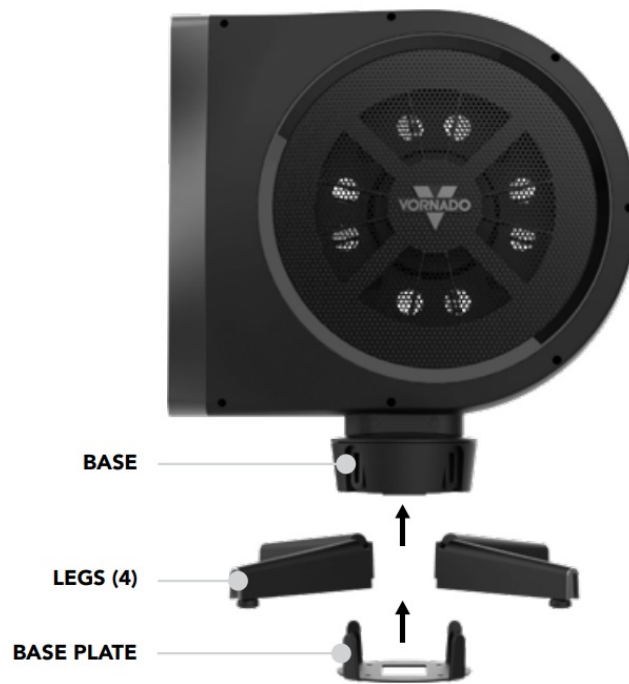



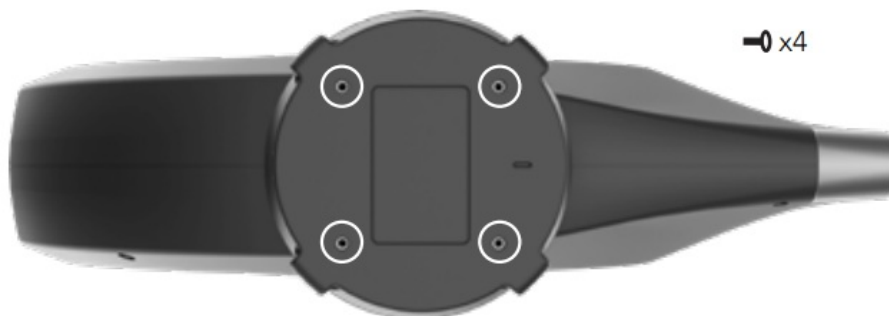

1. Remove the base plate.
2. Insert a leg into the slot. Repeat until all four legs are inserted. Legs are universal and can fit in any slot.
3. Align base plate to bottom of unit. There is an alignment pin located on bottom of unit and an alignment recess on base plate. To ensure correct assembly, position base plate onto bottom of unit with pin and recess aligned.
4. Attach base plate using four screws provided (included in bag with this manual).

 


WARNING – Choking hazard. Keep small parts, like screws, away from children and pets.

HOW TO USE


1. Touch  to power on/off. When unit is powered ON, the green LED will illuminate.
2. Select desired fan speed by pressing  to increase fan speed or  to decrease fan speed. Speeds are Low, Medium Low, Medium, Medium High and High.
3. Press  to turn Oscillation on/off. The default oscillation range is 90°. To activate 180° oscillation range, press and hold oscillation button for 3 seconds. The green LED will flash when oscillation angle has successfully been changed.

Note: After unit is unplugged and then plugged in again, the unit will oscillate until it locates its “default” position centered between the two front legs.

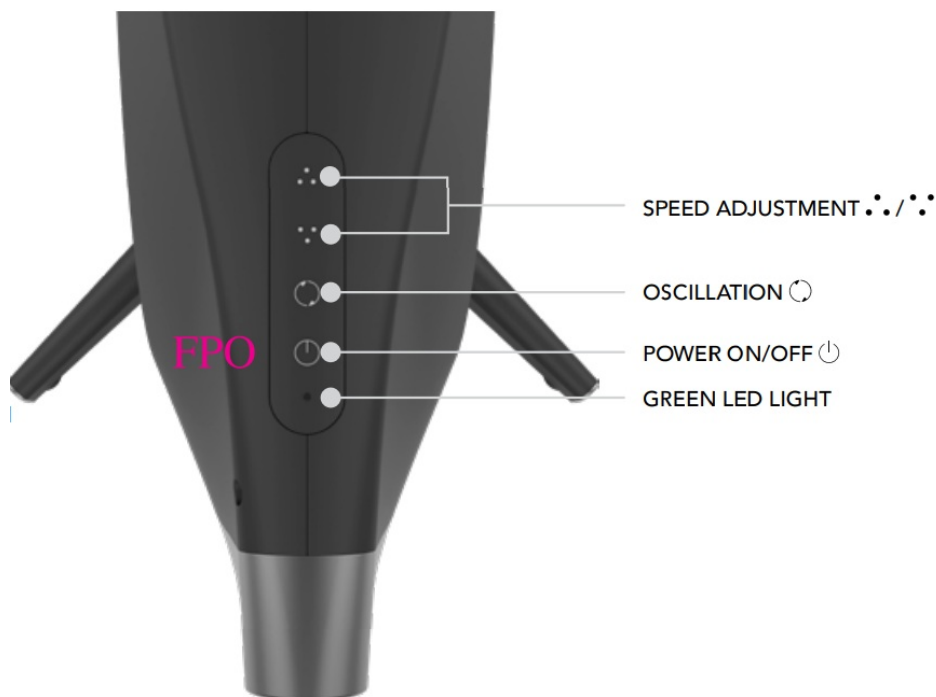

REMOTE CONTROL

 REMOTE FUNCTIONS

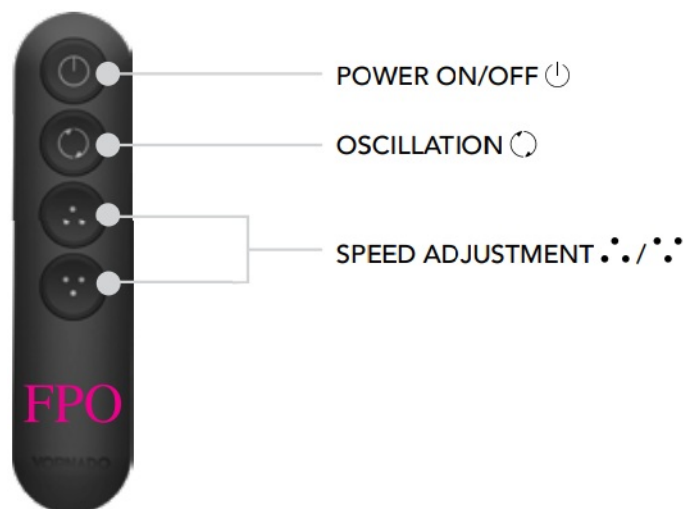

1. Press ⏻ to power on/off.
2. Select desired fan speed setting by pressing ⋯ or ⋯.
3. Press ↻ to turn Oscillation on/off. Press and hold for three seconds to change oscillation angle to 180°.

REMOTE SETUP

The remote that comes with your unit is paired and ready to use out of the box. If you need to pair a remote, follow these steps:

1. Plug the unit in, but do not press ⏻ to turn product on.
2. Remove pull tab completely from the remote.
3. Press ⋯ on the unit.
4. Press and hold ⋯ on remote for 3 seconds.

5. Your remote is now paired.

BATTERY REPLACEMENT

Your remote includes (1) coin style 3V CR2032 battery. Battery comes pre-installed. Remove battery pull tab before first use. Pre-installed battery has a one-year life expectancy (dependent on use) after pull tab has been removed from remote.

1. For battery replacement, the remote requires one coin style 3V CR2032 battery. Always use the correct size and grade of battery for this product.
2. To replace battery, open battery door on the back side of the remote control (you will need to loosen the small screw on door using a #1 Phillips screwdriver). If necessary, clean the battery contacts and also those of the device prior to battery installation. Remove any plastic protection from the battery and place it in the remote with the + side facing out. Ensure the battery is installed correctly with regard to polarity. Replace the battery door and screw.

Note: Remove battery from the remote control when not in use for an extended period of time and always remove dead battery immediately and replace with fresh. Do not store dead battery in remote.

WARNING: This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.

CLEANING

Because your circulator moves a substantial amount of air, it will need regular cleaning. If service is required, return your circulator to Vornado (see WARRANTY for instructions).

WARNING: To reduce the risk of electrical shock and injury to persons, unplug the tower before cleaning.

1. Unplug unit before cleaning.
2. Use the brush attachment on your household vacuum cleaner to vacuum any accumulated dust off the tower.
3. Wipe down the entire tower with a soft cloth.

Note: Do not use gasoline, thinners, solvents or other chemicals for cleaning.

TROUBLESHOOTING

• Unit fails to power on.

- Unit is not plugged in. Plug Power Cord into electrical outlet.
- Unit is damaged or in need of repair. Cease usage and unplug. Contact Consumer Service for assistance.
- Fuse needs to be replaced. See IMPORTANT SAFETY INSTRUCTIONS for how to replace the fuse or contact Consumer Service.

• Unit is not producing sufficient amount of air.

- Ensure unit is set to highest setting for maximum air circulation.
- Allow the unit to fully circulate the air throughout the room, this may take several minutes.
- Ensure all air inlets and outlet grille are unobstructed.

• Remote Control is not working.

- The battery is dead. Replace with new 3 volt CR2032 battery. Refer to REMOTE CONTROL – BATTERY REPLACEMENT for instructions.

- Remote has not been successfully paired. Refer to REMOTE SETUP for instructions.

WARRANTY

We expect this product to be perfect. If you're not satisfied with this product, let us know

- Vornado Air LLC ("Vornado") warrants to the original consumer or purchaser this Vornado® Whole Room Circulator ("Product") is free from defects in material or workmanship for a period of five (5) years from the date of purchase. If any such defect is discovered within the warranty period, Vornado, at its discretion, will repair or replace the Product at no cost.
- For warranty service: Call 1-800-234-0604 or email help@vornado.com to obtain a Return Authorization ("RA"). Please have or include your Product's model number and serial number, as well as your name, address, city, state, zip code, e-mail, and phone number when contacting Vornado for warranty service. To file a contactless warranty claim, visit vornado.com/contact-us.
- After receiving the RA form, ship your Product to: Vornado Air LLC Attn: Warranty & Repair 415 East 13th Street Andover, KS 67002. For your convenience, please have your model number and serial number when contacting Vornado with service inquiries. To assure proper handling, packages must be clearly marked with the RA number. Packages not clearly marked with the RA number may be refused at the receiving dock. Please allow 2-3 weeks for warranty service and return of your Product after the Product is received.
- This warranty does not apply to defects resulting from abuse of the Product, modification, alteration, mishandling, improper maintenance, commercial use or repair or service of the Product by anyone other than Vornado; damages which occur in shipment or are attributed to acts of God. Improper product use, which includes using an external device that alters or converts the voltage or frequency of electricity, or shipping a Vornado product to a country not intended for use will void all warranties. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts is not recommended and any consequences will not be covered by support services or product warranties. The product warranty will be honored only on models that are being used in the country intended. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VORNADO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state. The manufacturer assumes no responsibility for damage caused by failure to follow these instructions or improper product use. Any such actions will invalidate the product warranty.
- All company names and product names are trademarks of their respective owners. © All rights reserved. All technical information, data, and instructions for the installation, connection, and operation contained in these instructions for use correspond to the latest available information at time of printing. The contents of this manual may differ slightly from the actual product. Observe any additional supplements.

IMPORTANT SAFETY INSTRUCTIONS

- This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on, together with the product, to any future owner. See our website www.vornado.com/circulators-manuals to view, download and print the most current version of these instructions.
- **INTENDED USE:** This product is intended to circulate the air in indoor living spaces only in the United States and Canada. This product is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty.
- **WARNING: Risk to Children and Impaired Persons**
- Supervision is required during the installation, operation, cleaning and maintenance of this product by children 12 years of age and younger and anyone with reduced physical, sensory or mental capabilities. Children should be supervised to ensure that they do not play with the appliance, its parts and packaging material.
- **CAUTION: TIP OVER HAZARD.** Do not allow small children to hang on or climb on unit.
- **INSTALLATION WARNING:**
 - To reduce risk of fire, electrical shock and injury to persons, observe the following:
 - Place this product away from curtains, draperies, tablecloths and other fabrics, since they may be drawn into the product, damage the motor and/or cause a fire.
 - No part of this product (the appliance, power cord, plug, packaging, etc.) should be placed near furnaces, fireplaces, stoves or other high temperature heat sources. Do not use this product in a window, on an uneven or unstable surface, or near water.
 - The appliance, power supply, power cord and plug cannot come into contact with water. Do not use this product on wet surfaces. Do not use this product in a bathtub or shower or position product where it may fall into a bathtub, laundry, swimming pool or other water container. Do not use this product outdoors or expose it to weather or elements.
 - Do not run cord under carpeting. Do not cover cord with throw rugs, runner or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will be tripped over. The cord should not hang over edges of counters or be placed where it can be crimped or closed in doors. Place appliance near an easily accessible outlet so the product can be unplugged quickly during an emergency.
- **SAFE USE WARNING**
 - To reduce risk of fire, electrical shock and injury to persons, observe the following:
 - **WARNING:** To reduce likelihood of circuit overload, fire and electric shock, do not operate with a solid state speed device, such as a dimmer control switch.
 - Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
 - Do not operate unit if the unit has been dropped or damaged. Do not use this product if it has a damaged power cord or plug. To avoid risk of electrical shock, do not attempt to repair or replace parts. Only original replacement parts may be used. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Contact Vornado Consumer Service at 1- 800-234-0604 (phone) or consumerservice@vornado.com (email) for further instructions about replacement and repair.
 - Before plugging power cord into electrical outlet, be sure that all electrical information on the rating label,

including voltage, is compatible with your outlet's power supply

- Do not sit or stand on product.
- Never use the cord as a handle or otherwise yank, strain or stretch the power cord.
- While the product is plugged in, do not insert or allow foreign objects to enter any input or output opening as this may cause risk of electric shock or fire, or damage the product.
- A loose fit between wall outlet (receptacle) and plug may cause overheating and distortion of the plug. Discontinue use of the product in this outlet. Contact a qualified electrician to replace loose or worn outlets.
- This appliance has a polarized plug (one blade is wider than the other.) To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Before moving, repositioning, servicing, cleaning and when not in use, use the product controls to turn off the power and then unplug. To disconnect from outlet, grasp and pull only the plug. Also, power off and unplug if the product will be left unattended for an extended period of time or during electrical storms.

• **SERVICING WARNING**

- To reduce risk of fire, electrical shock and injury to persons, observe the following:
- Clean your product regularly, only as is instructed in this manual. Prior to cleaning, turn off the power on your product and unplug. Do not use gasoline, thinners, solvents, ammonias or other chemicals for cleaning. Refer to the cleaning instructions provided.
- Do not open appliance housing while product is plugged in. To avoid risk of shock, all service and/or repairs must be done by a Vornado Authorized Service Center.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

• **User Servicing Instructions**

1. Using the product controls, turn off the appliance.
2. Grasp the plug (not the cord) and disconnect from the outlet.
3. Risk of Fire. Replace fuse only with 2.5 Amp, 125 Volt fuse as approved by Consumer Service. For an authorized replacement fuse, please contact Consumer Service.
4. Once the replacement is received, use a small flat-head screwdriver to slide open the fuse cover (located on the plug) (See Fig. A).
5. Remove fuse by using the screwdriver to gently lift each end of the fuse (See Fig. B).
6. Install the replacement fuse by using the screwdriver to gently push each metal end of the fuse into the receptacle one at a time. Do not push on the center of the fuse—it is fragile and may break.
7. Slide the fuse cover closed using the screwdriver. When closed, the cover should fit completely in the plug. No part of the cover should stick out (See Fig. C).
8. Plug your appliance into the outlet and turn the power on.
9. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse, AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.

FCC Compliance Statement

- **NOTE:** This equipment has been tested and complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference
 2. this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the product and the receiver.
 - Connect the product into an outlet on a circuit different from that to which the receiver is connected.
 - Contact Vornado Consumer Service or dealer or an experienced radio/TV technician for help.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Supplier's FCC Declaration of Conformity

- **Unique Identifier:** Vornado Model (NAME)
- **Responsible Party:** Vornado Air LLC
- **Mailing Address:** 415 E 13th St, Andover, KS 67002
- **Contact:** www.vornado.com

RF Exposure Statement:

This product complies with the FCC RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual.

IC Statement

- This device complies with Canada Industry license-exempt RSS standard(s). Operation is subject to the following two conditions:
 1. this device may not cause interference; and
 2. this device must accept any interference. Including interference that may cause undesired operation of the device.
- **Radiation Exposure Statement:** This product complies with the IC RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual.
- **WARNING:** Batteries may pose a choking hazard. Do not let children handle batteries.

- **BATTERY DISPOSAL:**

Please dispose of batteries according to the local laws and regulations of your region, and while keeping them away from children. Some batteries may be recycled and accepted for disposal at your local recycling center. DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK. New and used batteries may cause injury. Keep new and used cells (or batteries) away from children.

- **WARNING:** Chemical burn hazard. Keep batteries away from Children.
- **WARNING:** KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. In the US call the National Poison Control Center at 1-800-222-1222 or 202-625-3333. In Canada call 416-813-5900.

SAVE THESE INSTRUCTIONS

Documents / Resources



[VORNADO STRATA Oscillating Tower Circulator with Alexa](#) [pdf] User Guide
WOT-STRATA, WOTSTRATA, STRATA Oscillating Tower Circulator with Alexa, STRATA, Oscillating Tower Circulator with Alexa, Tower Circulator with Alexa, Circulator with Alexa, Alexa

References

- [▼ Home - Vornado](#)
- [▼ Contact Us - Vornado](#)
- [▼ Home - Vornado](#)
- [▼ Home - Vornado](#)
- [▼ Circulator Manuals - Vornado](#)
- [▼ Circulator Manuals - Vornado](#)
- [User Manual](#)