



## Vortex TAB10 TFT Display User Guide

[Home](#) » [VORTEX](#) » Vortex TAB10 TFT Display User Guide 

### Vortex TAB10 TFT Display



## Contents

### 1 Attention

### 2 Desk

#### 2.1 Touch panel

#### 2.2 POWER

#### 2.3 BACK

#### 2.4 MIC

#### 2.5 Volume +, Volumethe

#### 2.6 earphone jack

#### 2.7 TF card

#### 2.8 Mini USB

#### 2.9 DC Adapter

### 3 First use

#### 3.1 Battery management and charge

#### 3.2 Connection with PC

### 4 Equipment operation interface

#### 4.1 Main interface describe

#### 4.2 status bar describe

#### 4.3 Use touch panel

### 5 Equipment basic set

#### 5.1 Application

#### 5.2 Privacy

#### 5.3 Storage

#### 5.4 Language\_ & keyboard

#### 5.5 Date & time setting

#### 5.6 Developer options

#### 5.7 About tablet

### 6 Apps Install and manage

#### 6.1 App installer

### 7 Problem solution

#### 7.1 Device can't to open

#### 7.2 After startup the screen or the opening picture has been appear , the the device appear shutdown

#### 7.3 Can copy file or paly music and so on

### 8 Documents / Resources

### 9 Related Posts

## Attention

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. PLs make sure to reading the manual carefully before use the device.

- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- please charge In the following condition,
  - A**, The battery power ICONS shows have no power
  - B**, The system automatically shut off, startup after power off soon

**C,** Operation buttons no response

**D,** The machine that the top right corner show red icons

- When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol, Thinner or benzene to scrubbing products
- • Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
  - Please don't using the Tablet PC when you in driving or walking down the street,
  - USB just only be used for data transmission The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

**(This tablet is no waterproof function)**

[ Remark] All pictures in this manual is just for your reference. products specification and design have any change, The information is subject to changes without prior notice.

## Desk



## Touch panel

Capacitive touch panel: In The Operation, to click, dragging on the touch panel

## POWER

startup: Long Press and hold the power button, the system will enter the main interface

shutdown: In the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Clicke "ok". you can safely shut down

Lock screen: Short press Power button to lock screen or unlock screen. Remark 1. When power is empty, system will shut down automatically. 2. Illegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into system

## **BACK**

Short Press BACK button will return the last interface,

## **MIC**

Recording

## **Volume +, Volume -**

buttons on top Volume+, Volume- achieve changes in the volume.

## **earphone jack**

3.5 mm standard earphone jack

## **TF card**

TF-CARD slot: external T-FLASH card

## **Mini USB**

MiniUSB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive

## **DC Adapter**

For charging. your tablet battery

1.1 O Recovery

When the Tablet under the condition of the crash, upgrade firmware.

## **First use**

### **Battery management and charge**

Before first use, please set the device's battery is fully charged Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

[ Remark ) : This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110-240V 50/60Hz Max, 180MA .. Output: DC5.0-5.5V/1.5A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger During the charging, the battery icon will scroll When finished charging, battery icon will become green and stop rolling In order to prolong the service life of the machine, suggest use out battery power before charge it [ Remark ) :

 
1. If you long time don't to use this Tablet, ,in order to avoid power consumption caused damage, pls charge/play the battery once a month.
2. After low battery shut down . connect DC adaptor, device will remind low battery , charging, need to wait some

time until the battery is enough power to enter into main menu.

3. Device charging should be in standby status for reach normal charging time. Because with device and screen consumption.it may cause longer

### Connection with PC

Use USB cable to connect device to PC, device will pop up the USB connection window ,click Turn on USB storage to connect to PC

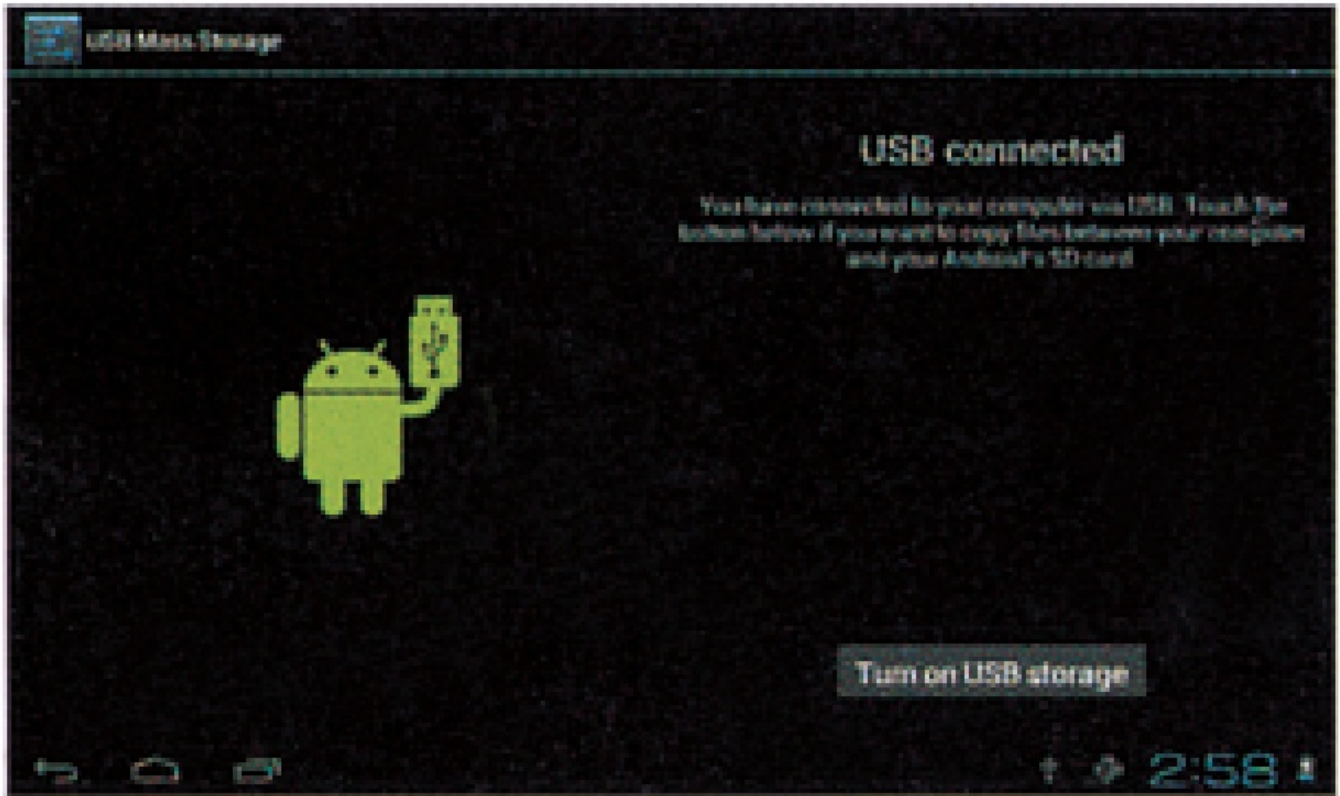


Into the load mode, you can copy, delete the file on the device and the file on the memory card.

### Equipment operation interface
 
#### Main interface describe


After startup will enter the main interface



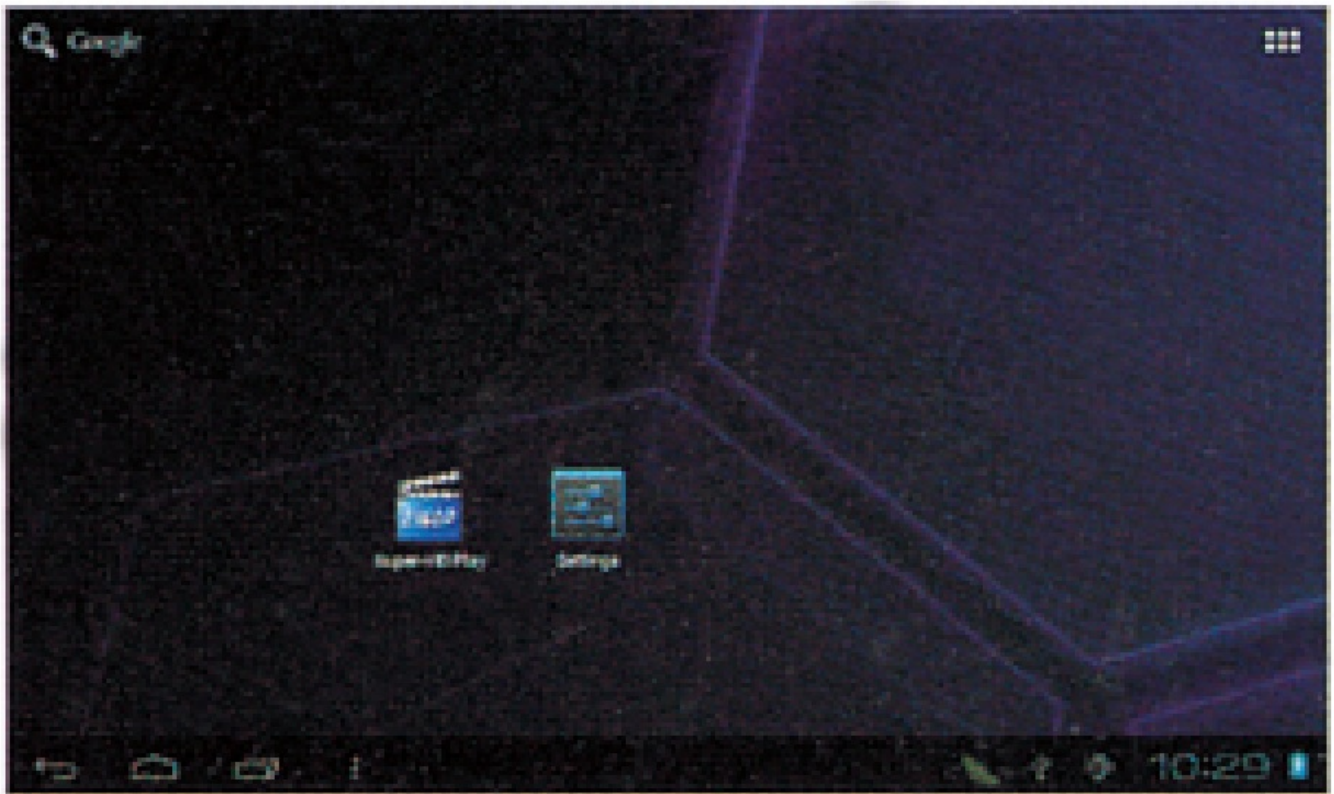


**In the main interface, you can :**

 Management main interface software ICONS: long press the icons 3 second, after the icons will bigger. then you can drag anywhere in the interface

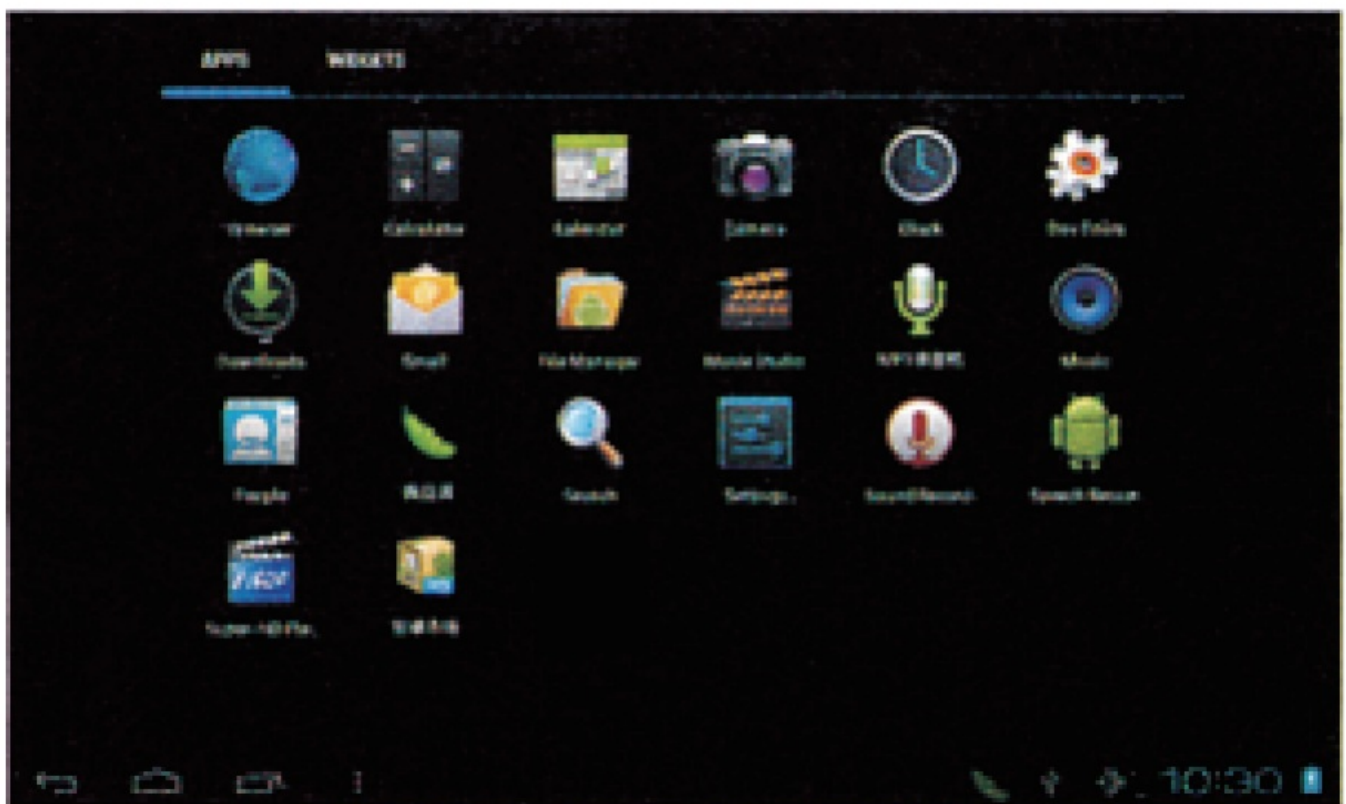

 Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon You touch the screen keep a time, appear the dialog box "Add yo Home screen" as shown below:

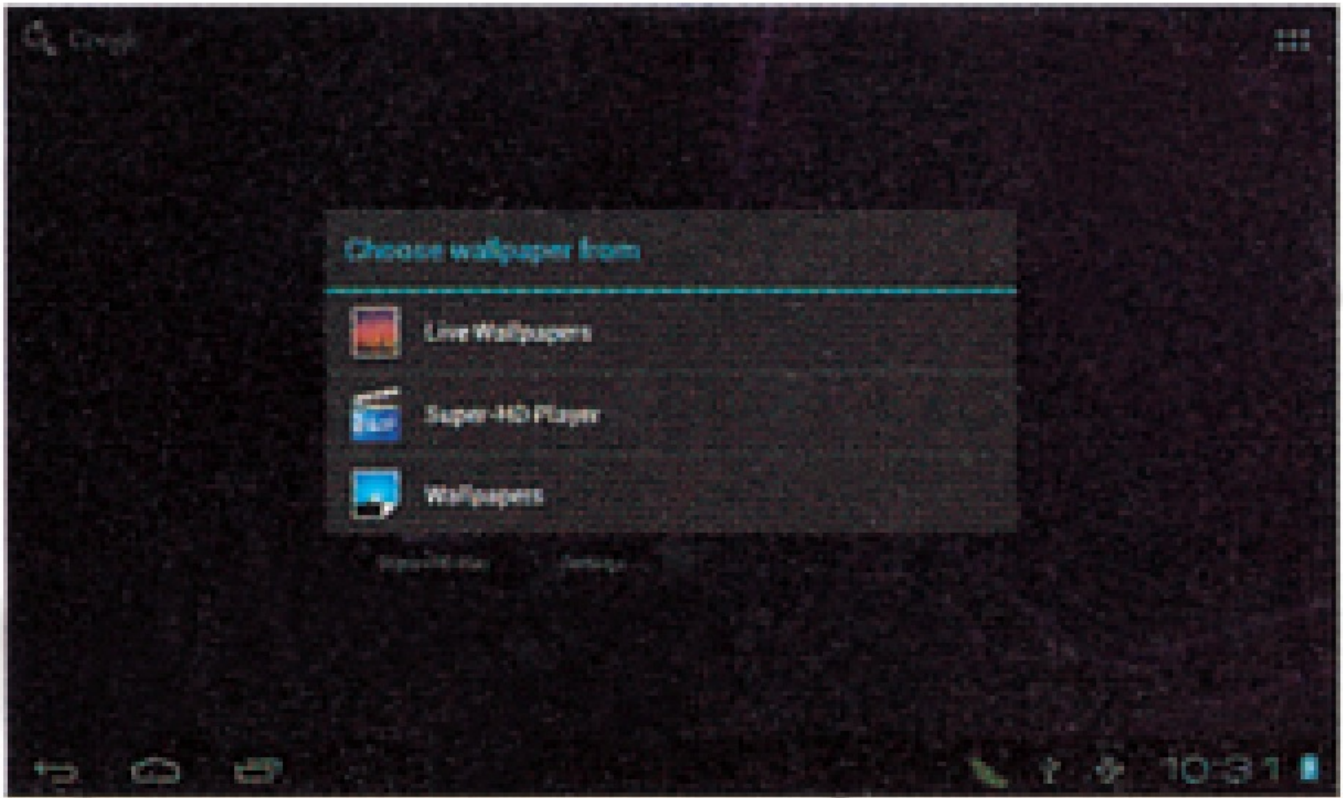

#### status bar describe



#### • The status bar above of the screen

Top left display main interface software, T-Flash card, USB connection status and so on

Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.

#### Use touch panel

Device equipped with a touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key



on the bottom right corner of the main screen.

[ Attention )The main screen soft key



Functions as the machine back key



In different applications, by tapping the back soft key



 
on the bottom right corner on the touch screen,

you can return to its interface on the upfloor.

In different applications, by tapping the menu key on the upper right corner of touch screen, the screen will appear the operation setting interface as follows, (**Remark**) : The main screen soft key functions as the machine manu





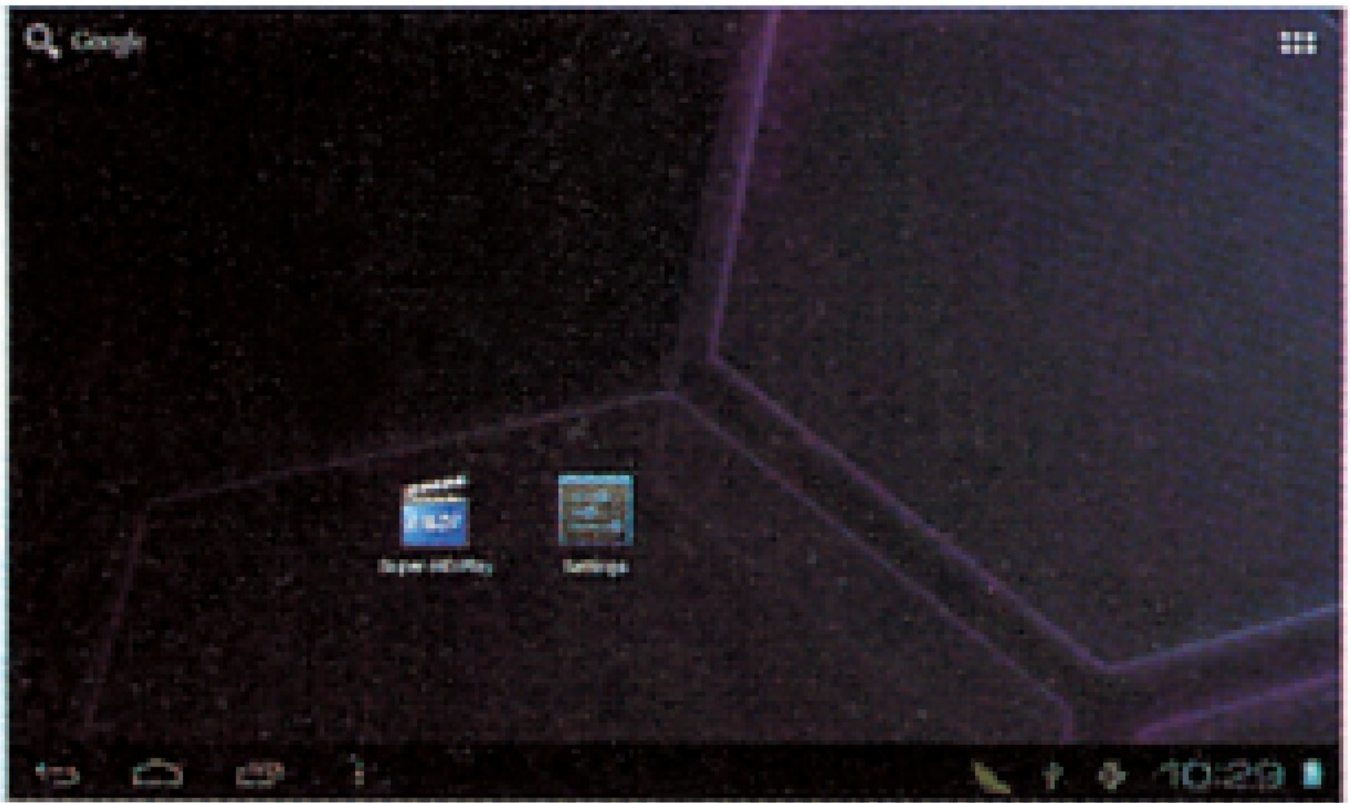


In the main interface, you can touch the icon to open the APPs in different browser(file, music, video, pictures). You shift and drag the scroll bar, so that the file list can up or down to roll.


## Equipment basic set



  
Setting: Click setting icons, enter setting interface

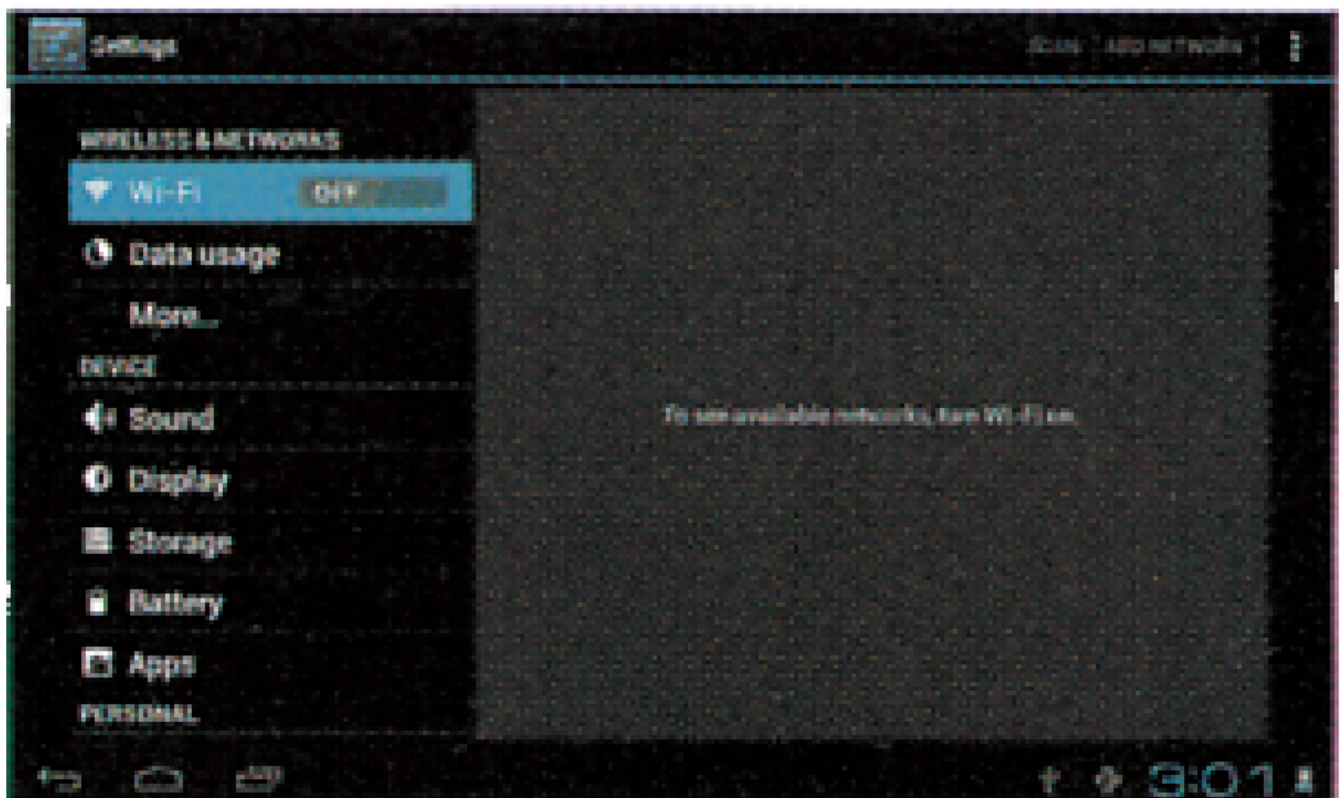




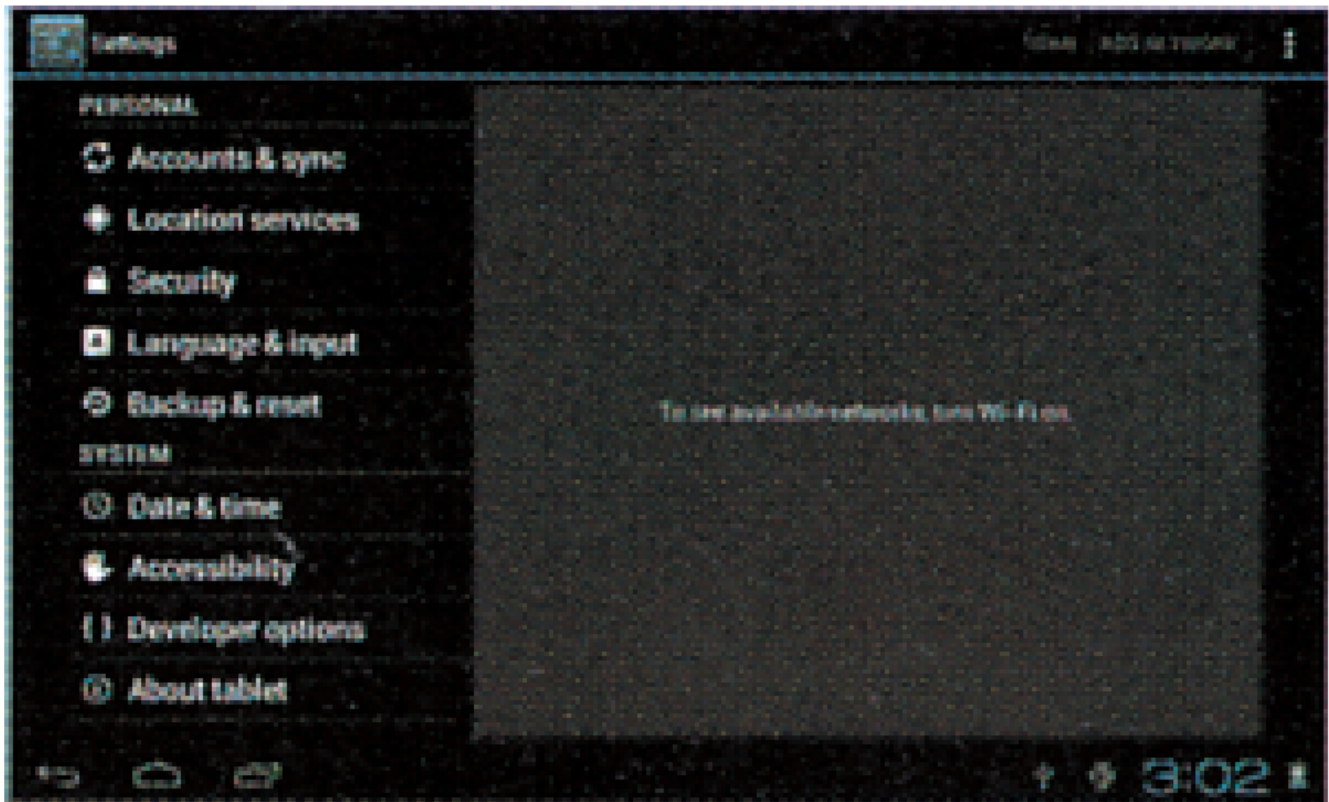

  
Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds

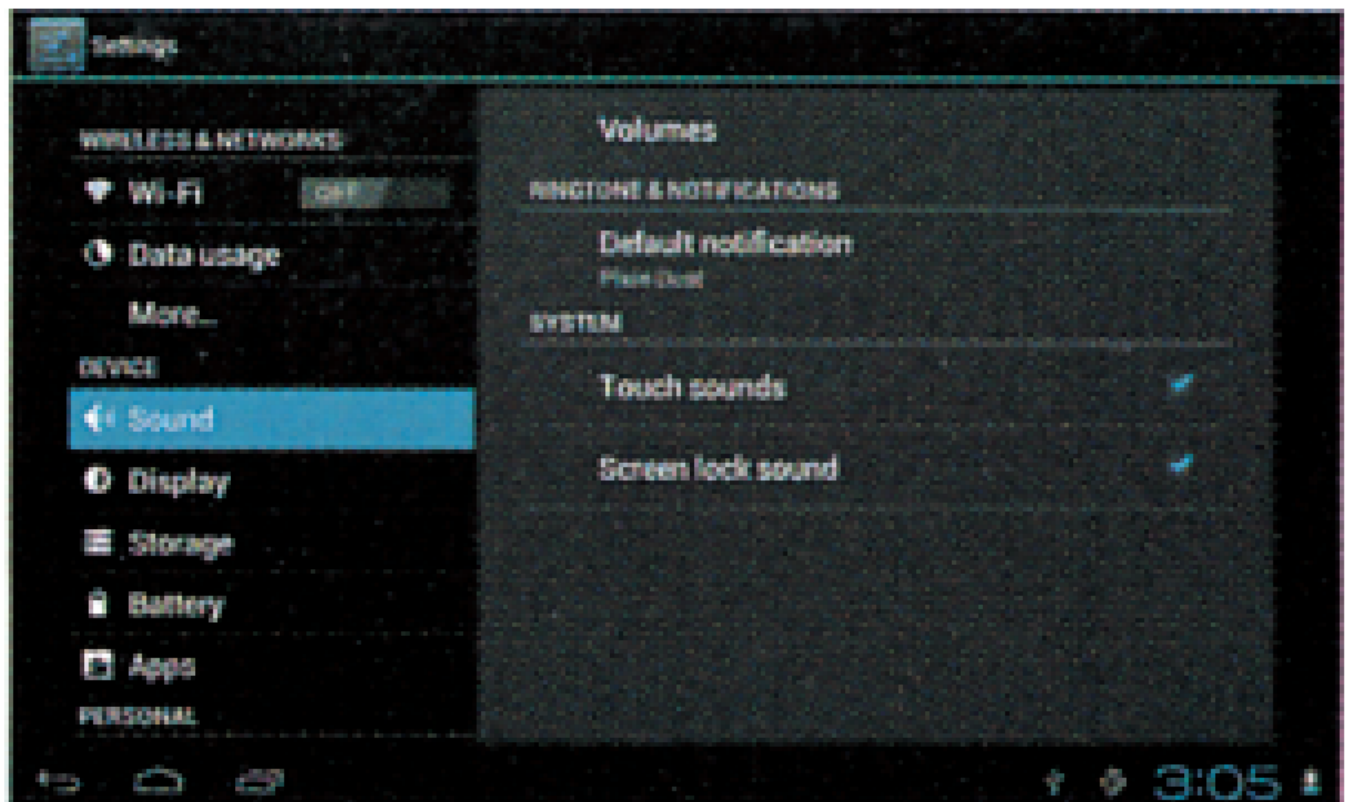

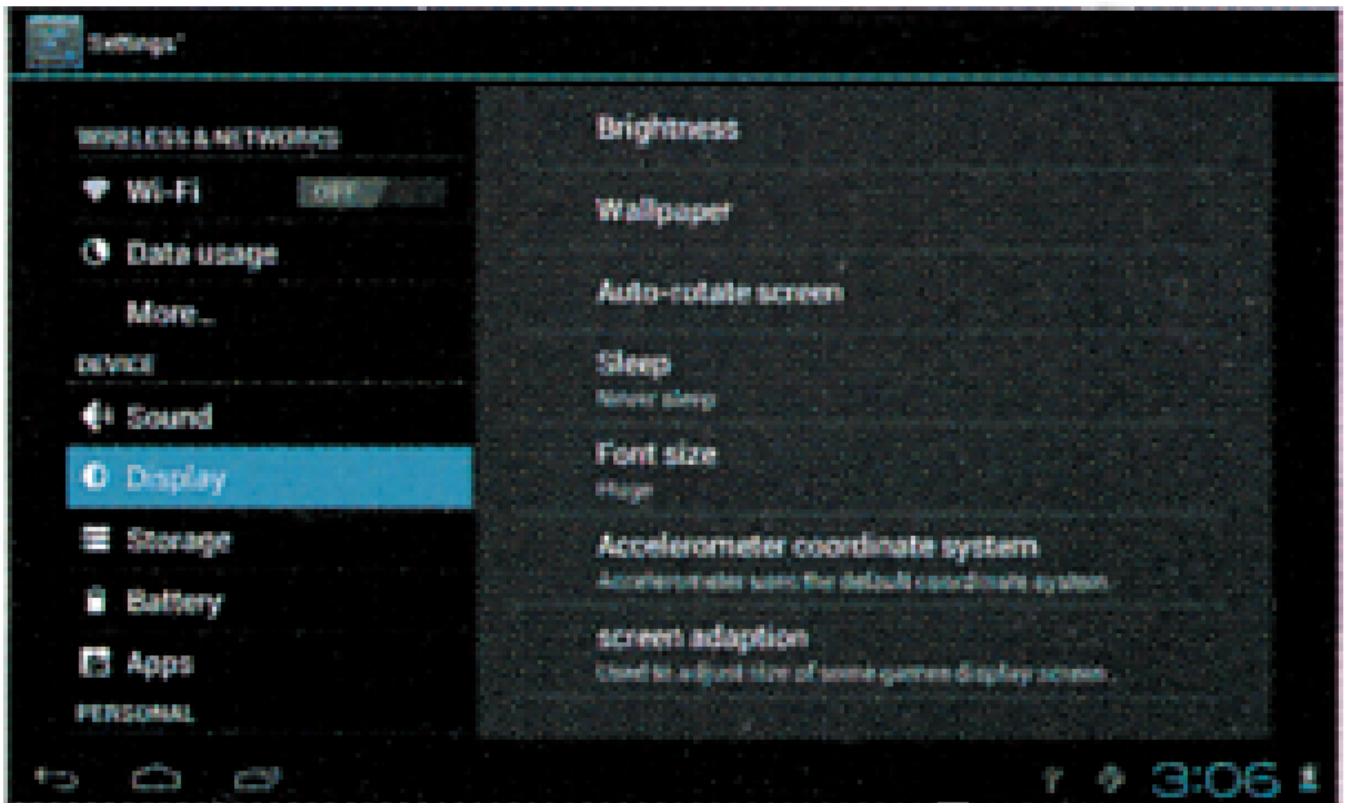


Application

 
Manage Application

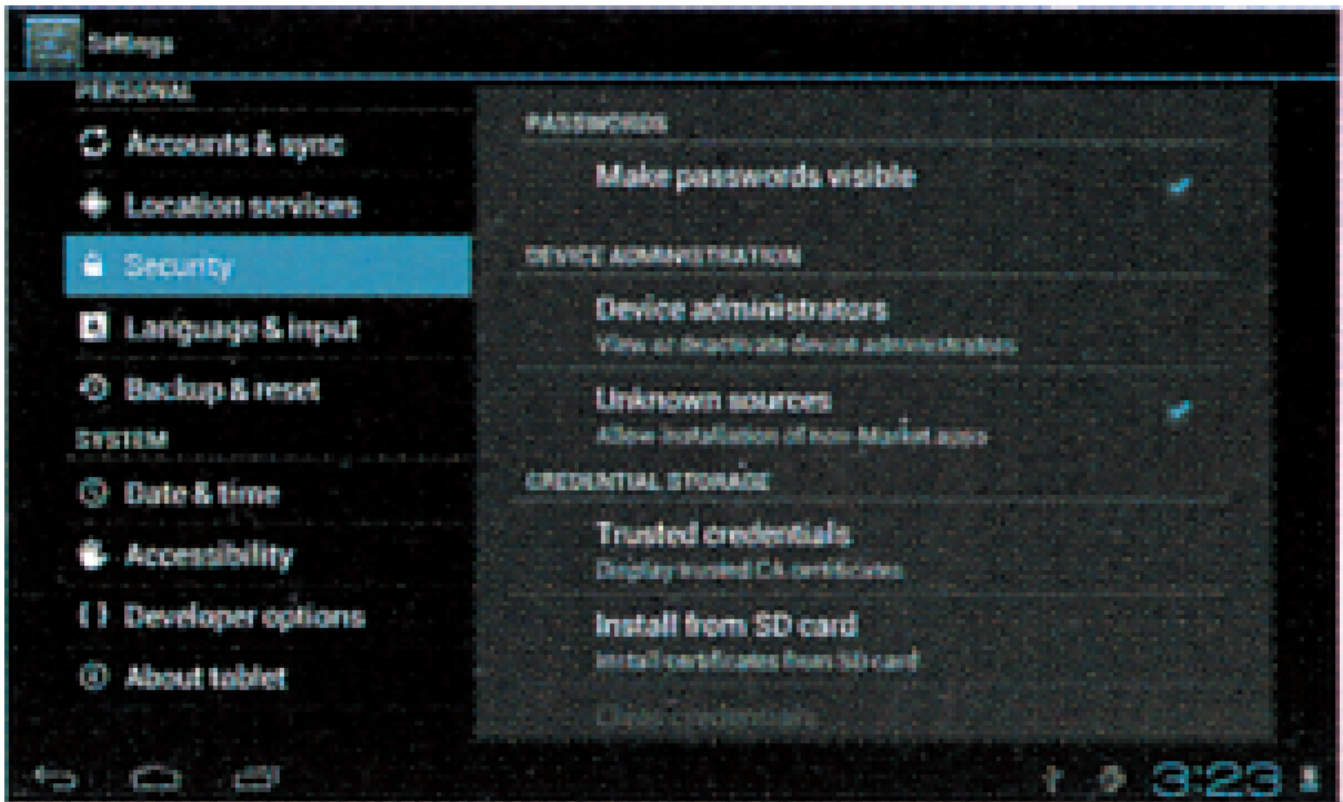

Unknown sources: Click "Unknown Sources", then click OK  
 Manage application: manager and uninstall Application


[ Remark ] : when you Firmware Upgrade, pls close the USB connect How to ~stall?

 1. enter  "setting .. >"Application">"Manage application" And then there will be installed the program list
2. Click you want to uninstall icons, will enter the following interface
3. Click Uninstall, then you can Delete the application

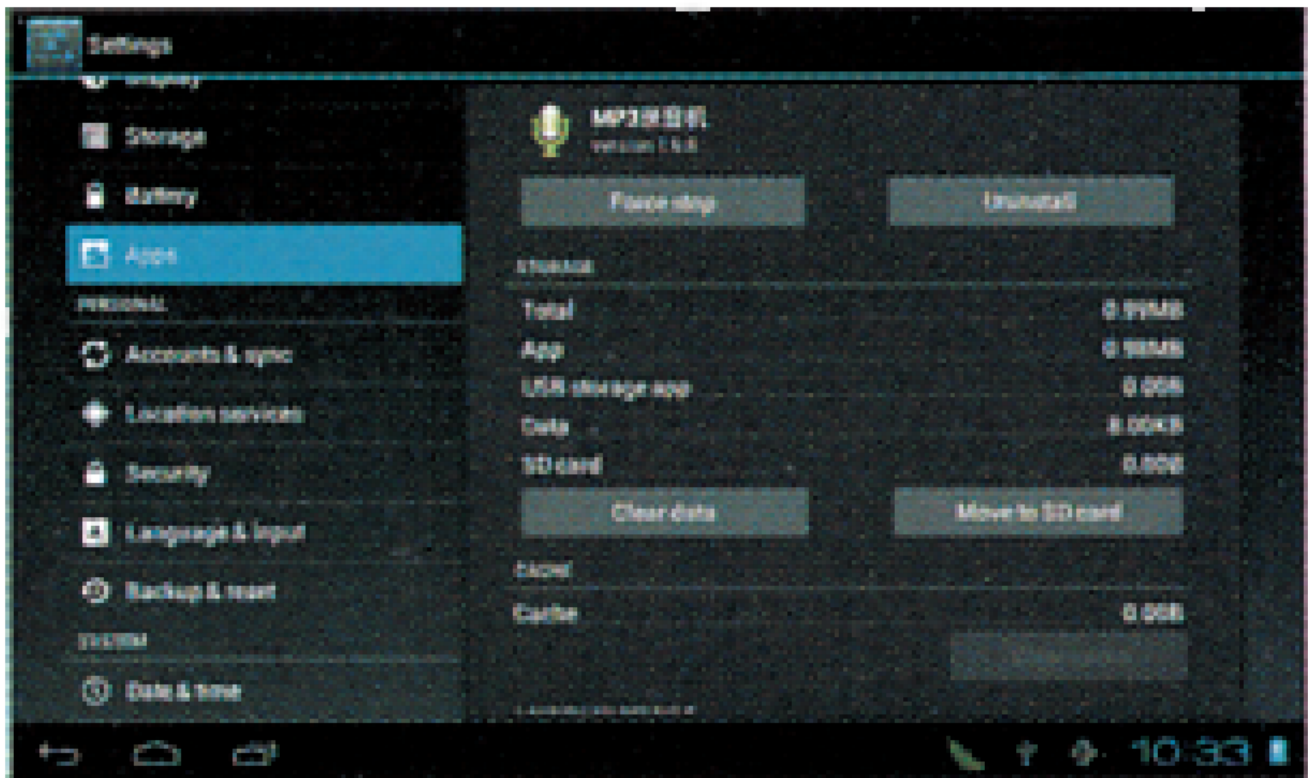


## Privacy
 
### Factory data reset

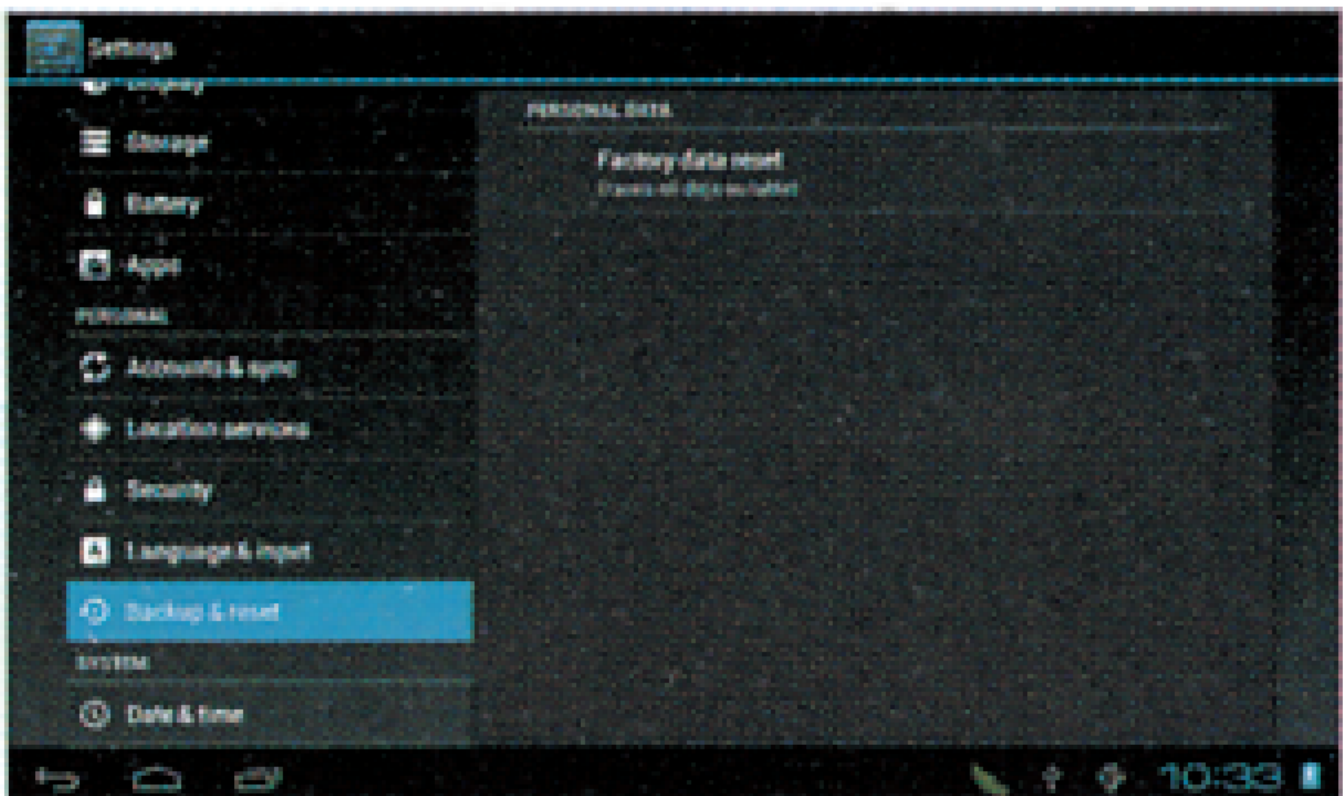

## Storage

 Remove TF card, view of the available storage space [ Remark ] : pls touch option “delete SD card”, so that can safety to Remove SD card

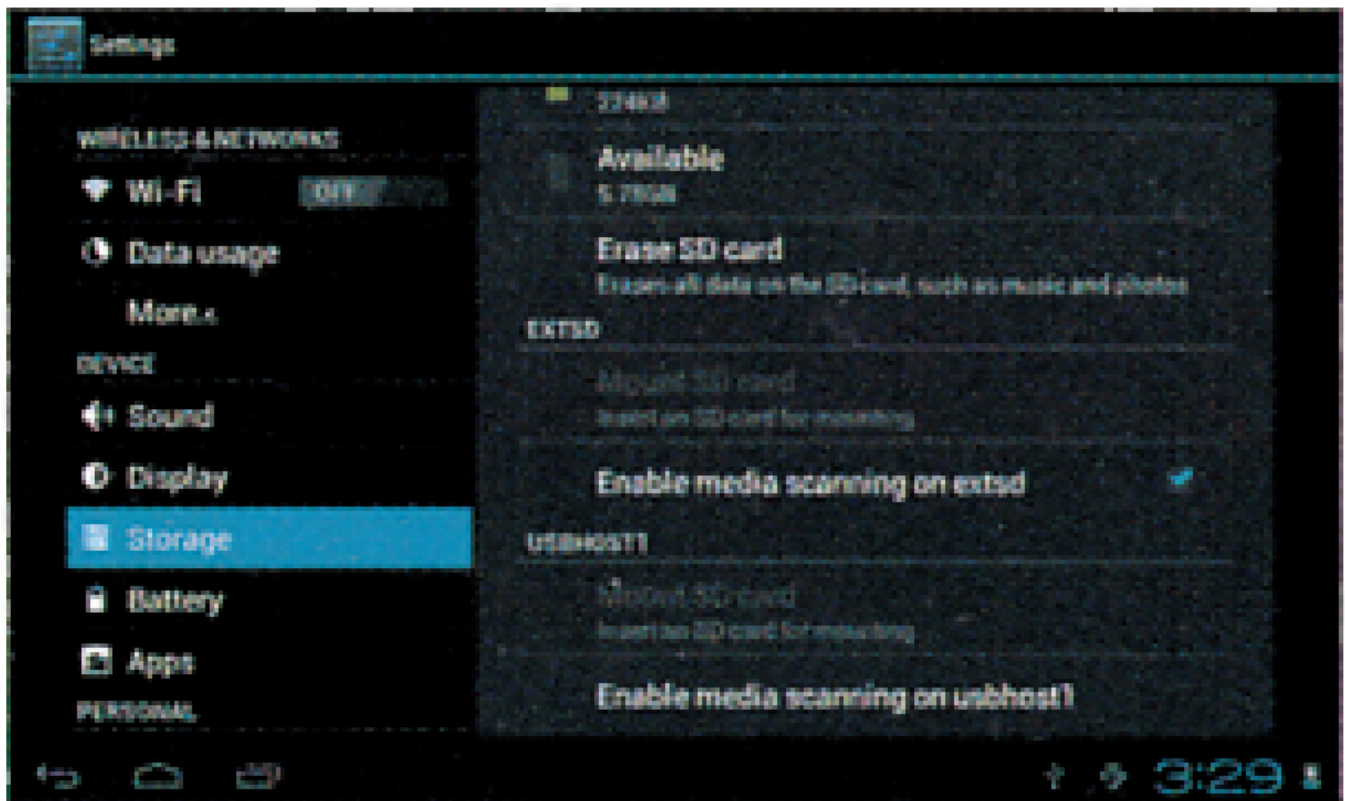


## Language\_ & keyboard

Setting: (Language), text input and automatic error correction options; Select Language: 54 kind of national languages are available Remark: Android system can support 54 kind of language, now Manu interface just support 14 language, Android keyboard: Android keyboard setting Sound on Key-press Auto-capitalization Show suggestions: Display suggested words while typing Auto-complete: Spacebar and punctuation automatically insert highlighted word.

## Date & time setting

 
Set date, set time, Select time zone and select date format



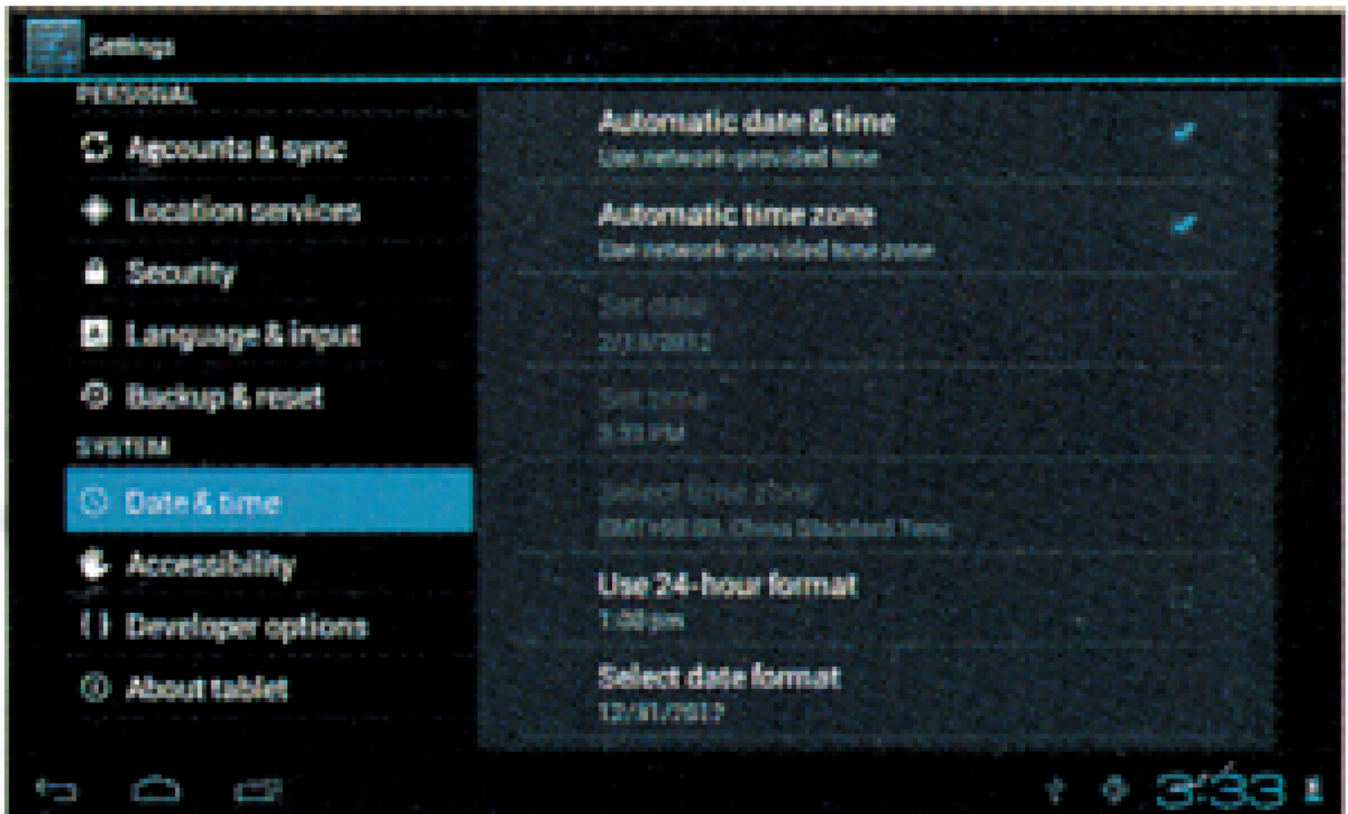


## Developer options

 Choose USS work attention OTG/HOST/SLAVE ..

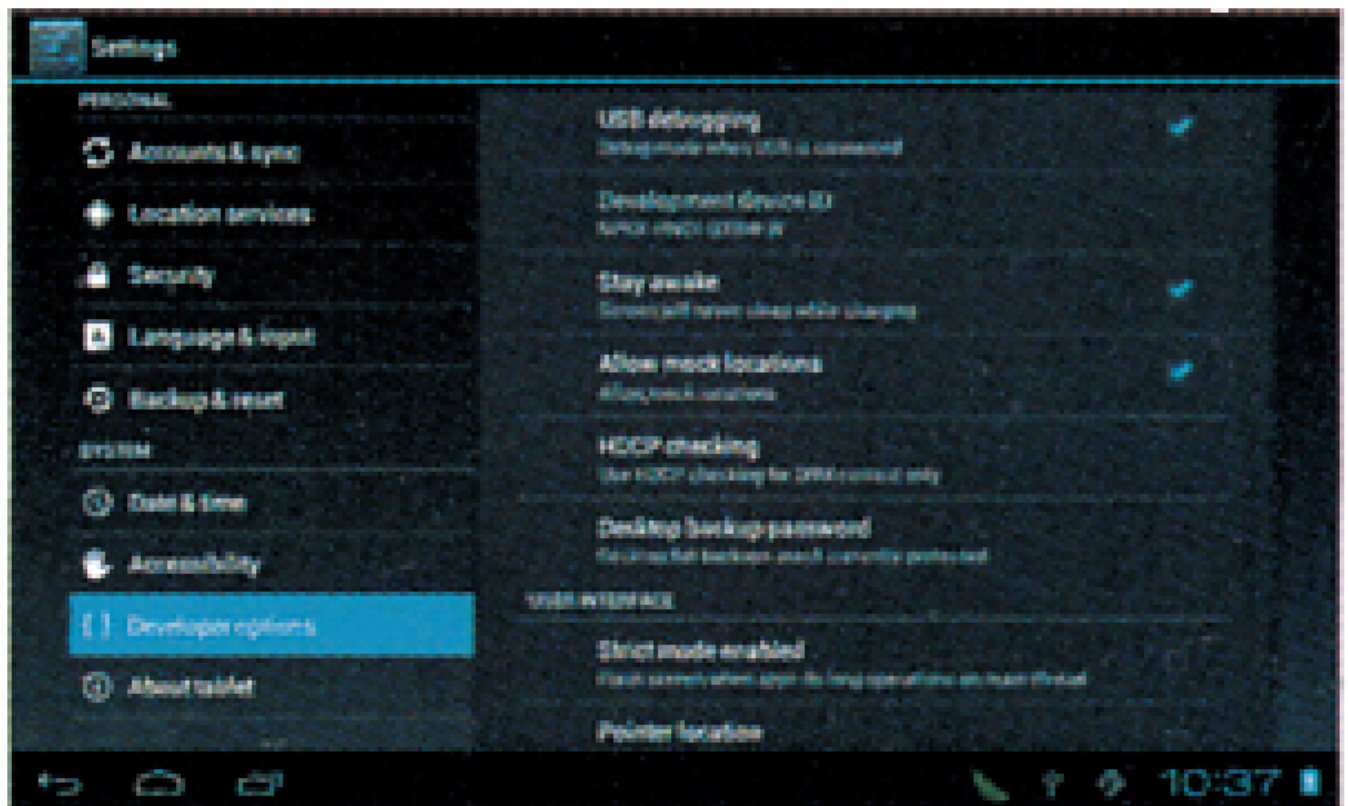

## About tablet

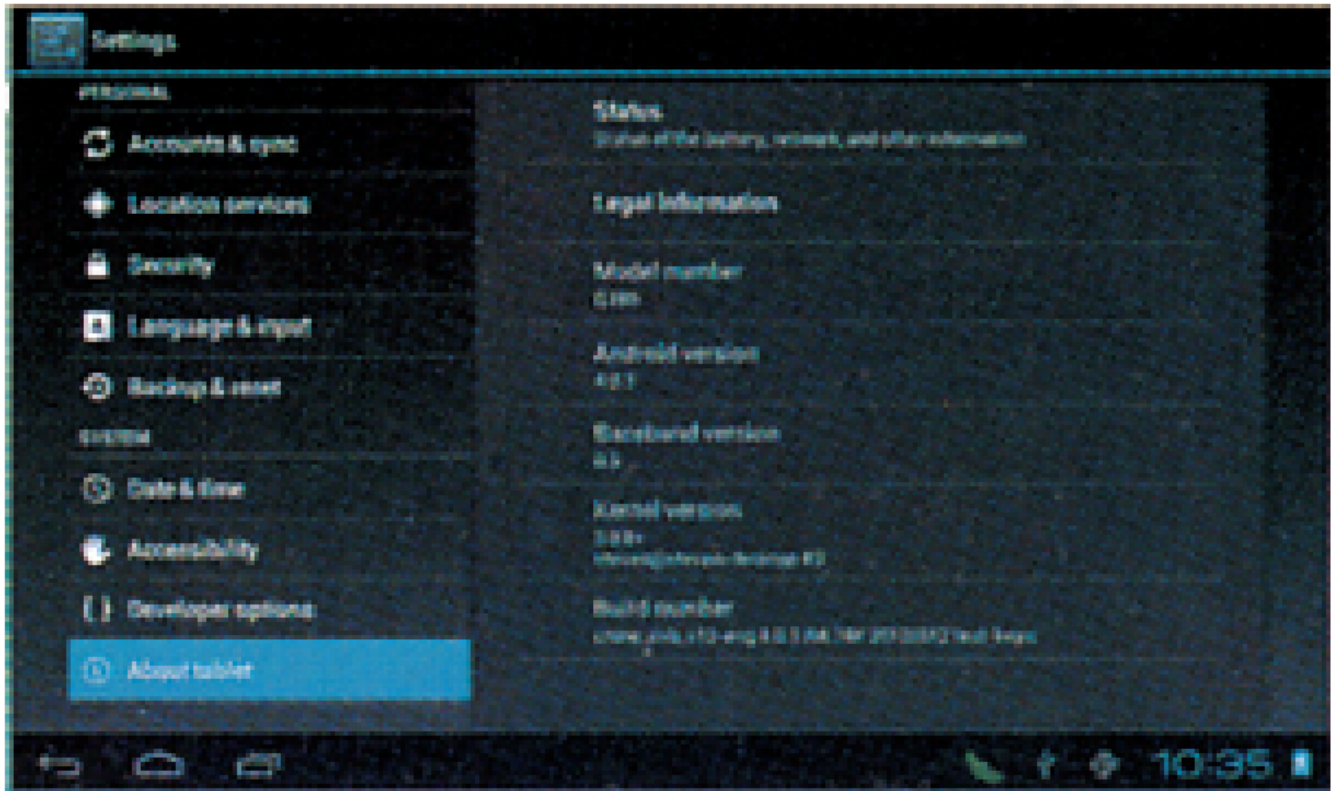 

## Apps Install and manage

## App installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NANO FLASH or SD card.

Click App installer icon, will appear Install, manage, Exit options. Install: Click install, enter Apk install interface Separately for Internal Memory disk and SD Card disk.

Select the APK you would like to install, click it to install. go back to main menu. will display the installed app you just selected. Remark: some 3rd APP must install properly by memory card, downloaded 3rd party app may not install properly on device. Manage: click manage, enter third party interface Click install icon, will enter Action interface

## Problem solution

## Device can't to open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, pls contacty with the supplier

**After startup the screen or the opening picture has been appear , the the device appear shutdown**

1. Power is not enough, please charge Headset can't hear the voice
2. Pls check the volume whether set to 0
3. Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

## Can copy file or paly music and so on

1. Pis check between computer and device is correct connection
2. check the memory storage space is already full
3. check the USB cable is good or not
4. USB connection is disconnected

Model	TAB10	
CPU	Type	MTK6755
	Speed	1.5GHz
RAM	Capacity	4GB
EMMC	Capacity	32GB
Camera	Front	5.0MP
	Rear	13.0MP
2G/3G/4G LTE	Support	
Speaker	Size	Built-in 80 speaker x 1
WIFI	WIFI module	WIFI 2.4G & 5G
Battery	Built-in	5000mAh
Memory card socket	External memory	Support TF Card
Screen	10.1inch IPS	10.1 inch 1280*800
Headphone jack	Music output	3.5mm standard headphone jack
Connector	Charging/data	Type C



## Documents / Resources

	<a href="#">Vortex TAB10 TFT Display</a> [pdf] User Guide TAB10 TFT Display, TAB10, TFT Display, Display
--	---