

Vortex QWERTY Mobile Phone



Vortex QWERTY Mobile Phone User Manual

[Home](#) » [VORTEX](#) » Vortex QWERTY Mobile Phone User Manual 

Contents

- [1 Vortex QWERTY Mobile Phone User Manual](#)
- [2 BASIC INFORMATION](#)
- [3 FUNCTION MENU INTRODUCTION](#)
- [4 FUN](#)
- [5 ADVANCED SETTINGS](#)
- [6 ORGANIZER](#)
- [7 SETTINGS](#)
- [8 NETWORK SETTINGS](#)
- [9 SERVICES](#)
- [10 References](#)



Vortex QWERTY Mobile Phone User Manual

**FCC ID: 2ADLJPQWERTY**

The device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

BASIC INFORMATION**BRIEF INTRODUCTION**

Thank you for choosing the QWERTY mobile phone. You can read the manual, a comprehensive understanding of the use of mobile phones and enjoy their perfect functionality and simple method of operation. In addition to basic call functions, but also provides you with a phone book, personalized ring tones, alarm, camera, image viewer, video recorder, video player, audio player, FM, One Memory Card (T-Flash card), calculator, calendar, torch etc. A variety of practical features to facilitate your work and leisure activities, in addition, the QWERTY interface with personalized mobile phone design, is the perfect functionality to meet your needs. Our Company reserves without any prior notice the contents of this manual under the right to make changes.

SAFETY NOTICE

If your phone is lost or stolen, immediately notify the telecommunications sector, or its outlet, to disable the SIM. This will allow you to take phone calls from other economic losses arising. To make you more secure use of mobile phones, please take precautionary measures, such as: Setting up a mobile phone SIM card PIN password, and PIN password to prevent your SIM from being used by others.

CLEANING AND MAINTAINING

Do not use the bathroom where high humidity, cell phone, battery and charger, the same should also avoid the rain. Use a soft, dry cloth to clean the phone, battery and charger. Dirt outlets will lead to poor contact, power-down, which does not charge, and regular cleaning.

BEFORE USING**SIM**

Before using your phone you must insert a valid SIM (Subscriber Identity Module) card. SIM card provided by the network provider.

WARNING: Be sure to remove the SIM phone off before. It is prohibited in the case of an external power supply

connected to insert or remove the SIM, or SIM card and the mobile phone may be damaged.

PHONE UNLOCK

To prevent illegal use, your phone can set the phone lock password protected. To use this function you must enter the phone lock password so that you can unlock the phone into the normal use state. Enter the phone lock password, and press the LSK to confirm. For example, if the phone lock password is set to 1122, then the following input: 1122 OK

SIM UNLOCK

To prevent illegal use of your SIM with PIN (Personal Identification Number) password encryption protection. Use this function, if you have set the PIN password protection, every time you must enter the PIN password at boot time so that you can unlock the SIM card and phone for normal use. Enter the PIN password and press the LSK to confirm. For example, if the PIN is set to 1234, then the following input: 1234 OK If there are consecutive incorrect, your SIM will be network locked, and the phone will ask for a PUK password.

FUNCTION MENU INTRODUCTION

• FILE MANAGER

Into the File Manager menu, the menu displays PHONE and MEMORY CARD. The root directory, select "PHONE", and press the LSK to enter "OPTIONS" can be as follows:

• OPEN

Open the root directory and list the directories and files.

• FORMAT

Format the memory card, this action will remove all current flash memory data. In the root directory, select "MEMORY CARD", and press the LSK to enter. "OPTIONS" can be as follows:

• OPEN

Open the root directory and list the directories and files.

• FORMAT

Format the memory card, this action will remove all current flash memory data.

• DETAILS

More information you can view, such as Name, Total size, and free size. You can play music or video files, view Photos, copy/move/delete files, rename files and so on. You can send the file through Bluetooth.

PHONEBOOK

Press RSK in the idle or from the main menu to enter the phonebook. You can use the phonebook to store records and can store the following: name and phone number. In the phonebook list, select a record, to make a call when you press the dial keys. Select a record in the phonebook, you can do the following:

- **VIEW** – View the details or edit the record.
- **SEND TEXT MESSAGE** – Send an SMS to this number.
- **SEND MULTIMEDIA MESSAGE** – Send MMS to this number.
- **CALL** – Make a call to the number.
- **EDIT** – Can edit and save records.
- **DELETE** – Delete the record.
- **COPY** – Copy the current record to the Phone/SIM.
- **MARK SEVERAL** – Mark several or all records can send text messages or delete

PHONEBOOK SETTINGS

- **PREFERRED STORAGE** – This can be in the SIM1, SIM2, Phone and All to switch, and the phonebook list will change accordingly, such as selecting SIM1, the phonebook list will only show SIM1 records.
- **SPEED DIAL** – Open the speed dial. If you long press the number keys on the dialling interface, you can call up.
- **EXTRA NUMBERS** – can be set SIM owner numbers and fixed dialling numbers.
- **MEMORY STATUS** – View the usage and free Phonebook capacity information.
- **COPY CONTACTS** – If you select SIM to phone, the SIM card records of all telephone numbers copied to the phone
- **MOVE CONTACTS** – You can select the SIM records of all mobile phone numbers and move to the phone, also you can switch the option to operate.
- **DELETE ALL CONTACTS** – You can delete all contacts in a SIM card or phone and all records are deleted.

FUN

MRP STORE

Press the enter key connecting to the main interface, Please insert the SIM card and memory card before use.

GAMES

This menu displays game and game settings.

FACEBOOK

Press the enter key connecting to the main interface, Please insert the SIM card and memory card before use.

YAHOO

Press the enter key connecting to the main interface, Please insert the SIM card and memory card before use.

TWITTER

Press the enter key connecting to the main interface, Please insert the SIM card and memory card before use.

GOOGLE

Press the enter key connecting to the main interface, Please insert the SIM card and memory card before use.

CALL HISTORY

MISSED CALLS

Enter the missed call menu, which will display the missed calls list. Select missed call records and press the OK key to enter "Options":

- **VIEW** – View the details.
- **CALL** – Call the record number.
- **SEND TEXT MESSAGE** – Send SMS to record number.
- **SAVE TO PHONEBOOK** – Save the number to the phone or SIM card.
- **ADD TO BLACKLIST** – Save the number to the phonebook block list.
- **DELETE** – Delete the number

DIALED CALLS

Enter the dialled calls menu to display the current record of the outgoing phone list of phone numbers. Please refer to Missed calls for details.

RECEIVED CALLS

Enter the received calls menu to display the current record that has been received mobile phone number list. Please refer to Missed calls for details.

ALL CALLS

Enter the all-call menu, which will display the all-call list. Please refer to missed calls for details.

DELETE CALL LOGS

Delete all calls from dialled calls missed calls receive calls and all calls.

CALL TIMERS

See SIM card 1 and SIM 2 call times.

CALL SETTINGS

Enter the call set up sub-menu, you can make the following settings:

CALL WAITING

Open this feature during the call if there is a new call, the network will notify you. Specific use with your network provider.

- **Activate** – Launch the function.
- **Deactivate** – Close the function.
- **Query status** – Query the function's status.

CALL DIVERT

Network Call Transfer service allows you to call a business case in a default transferred to a phone number you specify. The features include: Divert all voice calls Divert if unreachable, Divert if no answer, Divert if busy, Divert all data calls. Enter the corresponding Transfer menu, you can do the following:

- **ACTIVATE** – Transfer the current call forwarding setting number.
- **DEACTIVATE** – Call transfer prohibited.
- **QUERY STATUS** – Check the status of this function. After setup is complete, when, you do not need call forwarding, you can cancel all diverts to prohibit the use of the above functions.

CALL BARRING

Into the "Call barring" sub-menu, you can set the following call barring any combination to improve security. Some network providers may not provide this service call restrictions or specific use, please contact your network provider. The network provider will provide a four-digit password so that you can enable call restrictions. Change the password to enter the old call barring password, and set new restrictions on the password.

LINE SWITCHING

In line 1 and line 2 to switch between, choose line 1, which can be a normal call, send text messages and so on. Select line 2, you can receive a call but not make a call.

ADVANCED SETTINGS

- **AUTO REDIAL** – Through on/off settings, to activate or disable the feature. Turned on and when your phone call after another failed attempt to connect up to Redial 10 times. This feature can save you the trouble of repeated calls.
- **CALL TIME REMINDER** – This menu can prompt a certain length of time to set up the call, according to the

menu function mode to select the following tips:

- **OFF** – Close the function.
- **SINGLE** – Enter any numbers between 1-3000 sec , which arrived at the selected time (seconds) of talk time when prompted.
- **PERIODIC** – Enter any number between 30-60 sec , from the input time (in seconds), the intervals of 1 minute for talk time tips.
- **ANSWER MODE** – Any key and Auto answer when headset mode two choices for selecting. When you select any key, press any key outside the power key and RSK can answer the call.

MESSAGING

Make sure that the information in writing before the message centre number is set correctly. With access to an information menu, you can edit SMS and Multimedia messages.

WRITE MESSAGE

Make sure that the information is in writing before the message centre number is set correctly. Access to an information menu, you can edit the SMS press the LSK to enter the “Options” menu:

- **SEND TO** – After editing the information, select the operation, enter the number manually, or add records from the phonebook, you can do SEND, EDIT RECIPIENT, REMOVE RECIPIENT, REMOVE ALL RECIPIENTS, SAVE TO DRAFTS operations. Sent SMS to one or more persons, and storage to Drafts.
- **INPUT METHOD** – Offer many kinds of input methods to choose from.
- **SAVE TO DRAFTS** – SMS save to drafts. Enter the ADVANCED menu
- **INSERT NUMBER** – Insert the number into SMS from the phonebook.
- **INSERT NAME** – Insert the name of the record into the SMS from the phonebook.
- **INSERT BOOKMARK** – Insert bookmark from Bookmarks

INBOX

In the list of inboxes, you can press the OK key to read the message details, In the inbox interface, press LSK “Options” to enter the menu:

- **VIEW** – Enter the message reading interface to view the message’s details.
- **REPLY** – Send an SMS to the sender.
- **CALL SENDER** – Make a call to the sender.
- **FORWARD** – Send the message to other people.
- **DELETE** – Delete the message.
- **DELETE ALL** – Delete all messages.
- **SAVE TO PHONEBOOK** – Save the number to the phonebook.
- **SORT BY** – Sort by sender, subject, unread/read, message size
- **FILTER BY** – Filter by SIM1 SIM2 and ALL message
- **MARK SEVERAL** – Can mark several to delete

DRAFTS

Edit the SMS not sent but stored in the draft, For the detailed features, please refer to “Inbox”.

OUTBOX

Go to the Outbox list view your SMS are not sent successfully. The detailed features, please refer to “Inbox”.

SENT MESSAGES

Open the message set in the “Save sent message”, and send the information after the success of information stored in the Sent, detail features, please refer to “Inbox”.

SERVICE MESSAGES

It includes the following items: Enable push and Service loading.

SMS SETTINGS

- **SIM1\SIM2\SIM3\SIM4** – This menu can set SMSC address, validity period, message type, delivery report, reply path and voicemail server function.
- **MEMORY STATUS** – View the SIM and Phone capacity information.
- **SAVE SENT MESSAGE** – Open the “Save sent message”, messages sent after a successful save the sent message, if you turn off this feature, you will not be saved.
- **PREFERRED STORAGE** – Can set preferred storage as SIM or phone.
- **NOTE** – This function needs the network operator’s support

MULTIMEDIA

CAMERA

The phone includes a high-definition camera, so you can take pictures anytime, anywhere, and to save the photos to your phone or memory card. State in the preview, press the LSK to enter “Options” You can do this to conduct a more detailed set of parameters.

- **SWITCH TO VIDEO RECORDER:** Switch to the video recorder.
- **PHOTOS:** The photo album shows the current list of files.
- **CAMERA SETTINGS** – Including Anti-flicker, Delay timer setting operation contents of the regulation. After being adjusted, press the LSK “OK” to save the current settings.
- **IMAGE SETTINGS** – Include the Image size and image quality regulation.
- **WHITE BALANCE** – Set the white balance state.
- **SCENE MODE** – Including Auto and Night scene mode.
- **STORAGE** – storage location can be set as a Phone or memory card the captured image will be saved to the specified location.
- **RESTORE DEFAULT** – Set all parameters to default settings.

IMAGE VIEWER

Select an album sub-menu, you can easily view stored in the camera album picture list, and press the LSK to enter “Options” to choose the pictures to do the View, Image information, Browse style, Send, Use as, Rename, Delete, Sort by, Delete all files and change Storage operations. View pictures, by clicking on the left and right navigation buttons to switch pictures.

- **VIDEO RECORDER**
- **SWITCH TO CAMERA** – Switch to the camera.
- **CAMCORDER SETTINGS** – Recorder settings including Anti-flicker setting.
- **VIDEO SETTINGS** – Include video quality.
- **STORAGE** – Storage location can be set as a Phone and Memory card, shooting the video will be saved to the specified location.

- **RESTORE DEFAULT** – Set all parameters to default settings.

VIDEO PLAYER

Choose the video player sub-menu, you can easily view the saved video player in the video list, press the LSK to enter “Options” to select the video files to do the play, rename, delete, delete all files and change storage operation. Send the video via Bluetooth if you want.

AUDIO PLAYER

In the Audio player interface, you can press the left and right keys to switch the music; press and the # keys to adjust the play volume. In the Audio player interface, press the left soft key to enter the “list” menu and enter the current playlist to play in the option list can be any music file to play. Select a music file to enter the settings options you can top of the screen prompts for the items content specific settings of each item:

- **PRE.PLAYLIST** – Can select the preferred list, Phone or Memory card. If you choose a memory card, then show the all music files in memory.
- **LIST AUTO GEN.** – To switch to this setting. When this feature is set on, you can perform the “Refresh Playlist” operation.
- **REPEAT** – Can be set as off (no repeat), one all.
- **SHUFFLE** – Random order of play set, respectively, can be set to on and off.
- **BACKGROUND PLAY** – Set the background play on, you can make a mobile phone in other user interfaces and also play music. Set as off, the music will not play when out of the Audio player.

SOUND RECORDER

In the sound recorder interface click “option”, it shows the items of record.

- **NEW RECORD** – Start a new record. If you click stop it will pop up a dialogue box to prompt you to save it or not. If you click pause, it will suspend recording, and then click continue, it can record again.
- **LIST** – It displays the sound that you recorded and saved in the memory card.
- **SETTINGS** – You can set the file format and audio quality of the record.

FM RADIO

FM interface, press the OK key to turn on / off FM play, press the right navigation key to automatically search and press the *and # keys to adjust the FM playing volume. Press the left soft key “Options” can show the FM options menu, the content was:

- **CHANNEL LIST** – Shows FM channel list.
- **MANUAL INPUT** – Can their editors manually enter the channel frequency, the effective value of 87.5 ~ 108.0
- **AUTO SEARCH** – Auto search FM channels in the channel list.
- **SETTINGS** – Can on/off the background play.

ORGANIZER

CALCULATOR

Your phone provides you with the basic arithmetic operations that can be a function of the calculator, easy simple operation. Press the left soft key “Clear” or stylus to click on the “Clear” can be cleared. Press the right softkey “Back” to exit the calculator.

NOTE: This calculator has limited accuracy and rounding errors will be generated, especially in addition to endless time. When the calculation of range, the display area will use the letter “E” to represent.

BLUETOOTH

- **POWER** – Activate Bluetooth on or off the Bluetooth function.
- **VISIBILITY** – If set as On, other devices can search this Bluetooth device; if set as Off, other devices can not search this Bluetooth device.
- **MY DEVICE** – Can search for nearby Bluetooth devices.
- **SEARCH AUDIO DEVICE** – Free devices to search for near-free decoration, such as Bluetooth headsets.
- **MY NAME** – The Bluetooth device name can be modified.

ADVANCED OPTIONS

- **AUDIO PATH** – The sound path can be set to stay in the sound and go hands-free on cell phone devices. If set to go hands-free device, connected to the phone, the sound will be automatically transferred to the hands-free device.
- **STORAGE** – The file will be automatically transferred to the specified path, the path can be set as a phone or memory card.
- **MY ADDRESS** – Display the device's Bluetooth physical address.

CALENDAR

Enter the calendar sub-menu, the screen will show a calendar month, and other background box with the current date marked. Press the up, down, left, and right navigation keys to change the date, calendar information on the screen will be updated accordingly. Press the left soft key "Options" option to display the calendar menu, and content as follows:

- **JUMP TO DATE** – Can quickly jump to a specified date to a specified date.
- **GO TO TODAY** – Switch to the system today, setting the current date.
- **GO TO WEEKLY VIEW** – The calendar interface displays the weekly view format.

ALARM

Five alarms can be set up (turned off the alarm is still valid.)Select and edit an alarm clock: Can edit the setting of alarm on / off, Time, Repeat and Alert type. You can choose to set to repeat: Once, Everyday, Custom.

SETTINGS

PHONE SETTINGS

Into the phone settings sub-menu, you can make the following settings:

Time and Date

In this menu, you can move the phone time and date settings. The menu consists of three sub-menu:

- **SET HOME CITY** – The city has a total of 78 international cities by selecting different cities, change the mobile phone area.
- **SET TIME/DATE** – Set time and date are set according to the established format and on/off daylight saving function. The phone allows you to set a calendar from 2000 to 2030 between the dates. If daylight saving is set to open, then the phone time to the original time of one hour or one hour later.
- **SET FORMAT** – Set time and data format.

LANGUAGE

The phone supports many kinds of language for you to select. Set the current language type, then menu and interface refresh for the corresponding language.

PREF. INPUT METHOD

The phone supports many kinds of methods, so choose an input method as the default when the initial input.

- **DISPLAY WALLPAPER** – The wallpaper is set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user-defined, by browsing the [File Manager] photos folder identified as a wallpaper.
- **SCREEN AUTO LOCK** – Set the screen auto unlocked time.
- **POWER ON DISPLAY** – Power on display is set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user-defined, by browsing the [File Manager] photos folder identified as a wallpaper.
- **POWER OFF DISPLAY** – Power off display set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user-defined, by browsing the [File manager] photos folder identified as a wallpaper.
- **SHOW DATE AND TIME** – Display the date and time to do On / Off settings, to determine whether the date and time are displayed on the idle screen.
- **LCD BACKLIGHT** – Set the brightness. LCD brightness settings are divided into five levels.

DEDICATED KEY

Set up, down, left and right keys for any functions you want.

FLIGHT MODE

Turn On/Off the Normal or Flight mode. If you select Flight mode, the SIM card's function will not be active.

MISC. SETTINGS

Set the brightness and time. LCD brightness settings are divided into five levels, the time can be set to any time between 5-60 seconds. When you set the time interval without any operation, the LCD backlight will turn black light.

SECURITY SETTINGS

Into the "Security Settings" menu, you can set the phone's security options, mobile phone or SIM card to avoid unauthorized use.

SIM SECURITY SETTINGS

- **PIN LOCK** – SIM card PIN password to lock the completion of your SIM card to prevent unauthorized use. If the current SIM card lock is closed, select Open to open the SIM card, and enter the PIN lock password, the next boot requires that you enter the correct PIN password.; If the current SIM card lock is On, select Off to close the PIN lock protection.
- **CHANGE PIN:** If the current PIN password lock has been activated, you can re-set the PIN password
- **CHANGE PIN2:** PIN2 is old to enter the correct password, you can set the PIN2 password.

PHONE SECURITY

- **PHONE LOCK** – A phone lock password can prevent your mobile phone stolen by others. Select On to open

the phone lock password to enter the correct password-protected phone lock, the next boot requires that you enter the correct password to enter the phone lock.

- **CHANGE PASSWORD** – Change the phone password, enter the old password and then enter a new password. The phone's default password is 1122.

NETWORK SETTINGS

NETWORK SELECTION

Press the left soft key to select automatic or manual mode. Automatic, mobile phone SIM card information is automatically selected according to the service provider; manually, choose select the network services, and mobile phone search to get the current list of service providers for users to select the service provider SIM card type.

GPRS TRANSFER PREF.

Press the left soft key to select data to prefer or call prefer.

CONNECTIVITY

Into the connectivity menu, it displays the data account press the OK option into the data account list and press option including edit, add PS account, delete and set as default

DATA ACCOUNTS

For network access points may choose to modify settings.

RESTORE SETTINGS

In this menu, enter the phone lock password, once determined, the phone automatically reboots the phone after the relevant parameters can be set to return to the case of the mobile phone factory. The default password is 1122.

PROFILES

Profile including General, Silent, Meeting and Outdoor. First, based on the current scene, select a different profile, then you only need a personal profile that can be set and activated.

- **GENERAL** – General environment.
- **SILENT** – For a Silent environment.
- **MEETING** – For meeting the environment, to be pre-set (for example: ring mode can be set to vibration).
- **OUTDOOR** – For outdoor activities, need to pre-set (for example, ring volume can be set to a higher state).

Press the left soft key "Options":

- **ACTIVATE** – Enable the selected profile.

CUSTOMIZE

- **ALERT TYPE** – Can choose to Ring only, Vib. Only Vib. and ring, Vib. Then ring as the current method.
- **RING TYPE** – You can choose to repeat and beep once two types.
- **RINGTONE** – According to their preferences set ringtones 1-5, can also be set from the memory card custom ringtones
- **RINGTONE VOLUME** – In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.
- **MESSAGE** – According to their preferences set ringtones 1-5.
- **MESSAGE VOLUME** – In the volume control interface, you can volume up and down navigation keys on the

set. Volume level is divided into seven, 1-7, followed by increases.

- **KEYPAD** – You can set the keypad as silent press and tone
- **KEYPAD VOLUME** – In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.
- **POWER ON/OFF** – According to their preferences set ringtones 1-5.
- **SYSTEM ALERT** – can on/off system alert.
- **RESET** – Reset profiles by default.

WHATSAPP

Press the enter key connecting to the main interface, Please insert the SIM card and memory card before use.

SERVICES

INTERNET SERVICE

In the Internet service interface, it has included the following items:

- **HOMEPAGE** – Log on homepage, and you will find it is a WAP website that you set. Users can set it by themselves.
- **BOOKMARKS** – that's default bookmarks, yahoo. You can go to the relevant website conveniently. Users can add bookmarks by themselves.
- **SEARCH OR INPUT URL** – You can edit any website you want, but it is effective.
- **SETTINGS** – It includes the following items for users to set up: data account, browser options and preferences settings.
- **NOTE:** GPRS service requires network support, must be after the opening and in a GPRS network coverage area, you can use GPRS services

STK

Enter the SIM tool kit menu, and display the Operator's information.

SHORTCUTS

Shortcuts interface, Press the LSK key into the option, and it displays add edit delete delete all and change order.

Download PDF: [Vortex QWERTY Mobile Phone User Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.