



Vortex TAB10 Tablet User Manual

[Home](#) » [VORTEX](#) » Vortex TAB10 Tablet User Manual 

Contents

- [1 Vortex TAB10 Tablet User Manual](#)
- [2 Desk](#)
- [3 First use](#)
- [4 About tablet](#)
- [5 Basic function](#)
- [6 References](#)



Vortex TAB10 Tablet User Manual



 
Attention

This handbook contains important security measures and the correct use of the product information, to avoid accidents. Plus, make sure to read the manual carefully before using the device.

- Please don't be in high temperature, moisture or very dusty place
- Please don't be in high temperatures, Especially in summer don't put the device in the car when Windows closes.
- Avoid falls or Violent collisions with the device, don't make the TFT display the screen was a violent tremor, This could cause the TFT display screen abnormal or damaged.
- Please choose the appropriate volume, Using headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- please charge In the following conditions
 - The battery power ICONS shows has no power
 - The system automatically shuts off, startup after power off soon
 - Operation buttons no response
 - The machine that the top right corner shows red icons
- When the device is in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause an application error.
- For those who because of damage to the product, repair, or other causes of erased memory, The Company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol. Thinner or benzene to scrubbing products.
- Don't use the device in one of the places prohibited use of electronic equipment in the region (such as the plane)
- Please don't use the Tablet PC when you in driving or walking down the street,
- USB just only be used for data transmission The company reserves the right to improve product, product specifications and design have any change, The information is subject to changes without prior notice.
- (This tablet has no waterproof function)

[Remark J All pictures in this manual are just for your reference. products specification and design have any change, The information is subject to changes without prior notice.

Desk

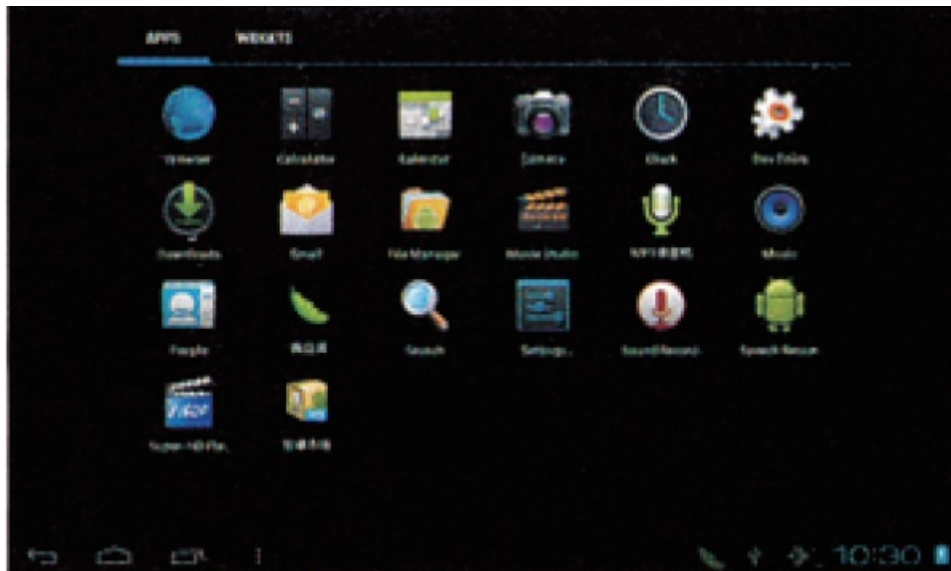

Touch panel

Capacitive touch panel: In The Operation, click, and drag on the touch panel

POWER

startup: Long Press and hold the power button, and the system will enter the main interface

shutdown: In the main menu interface, Press the power button for about 5 seconds to shutdown, The system can hint “power off” option, and click “ok”. you can safely shut down.

Lock screen: Short press the Power button to lock the screen or unlock the screen.

Remark When power is empty, the system will shut down automatically. Illegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into the system

BACK

A short Press BACK button will return the last interface,

MIC

Recording

Volume +, Volume-

the buttons on top Volume +, Volume-achieve changes in the volume.

earphone jack

3.5 mm standard earphone jack

TF card

TF-CARD slot: external T-FLASH card

Mini USB

MiniUSB jack: you can use it to connect the computer to data transmission, charging and external connection USB flash drive

DC Adapter

For charging. your tablet battery

Recovery

When the Tablet is under the condition of a crash, upgrade firmware.

First use

Battery management and charge

Before first use, please set the device's battery to be fully charged Just need to connect the adaptor or USB interface, and then you can charge The first two times please keep about 6 hours, after that, you just need 4 hours to charge.

 
[Remark]: This tablet uses a Built-in type polymer battery, Charge must be to choose a standard adaptor (Input: AC110~240V 50/60Hz Max: 180MA.. Output: DC5.0-5.5V/1.5A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger During the charging, the battery icon will scroll When finished charging, battery icon will become green and stop rolling To prolong the service life of the machine, suggest use out battery power before charge it

[Remark]

1. If you long time don't use this Tablet, to avoid power consumption damage, pls charge/play the battery once a month.
2. After the low battery shuts down, connect the DC adaptor, and the device will remember low battery, charging, and need to wait some time until the battery has enough power to enter the main menu.
3. Device charging should be in standby status to reach normal charging time.
4. Because device and screen consumption may cause longer charging time.

Connection with PC

Use a USB cable to connect the device to the PC, the device will pop up the USB connection window, click Turn on USB storage to connect to the PC.

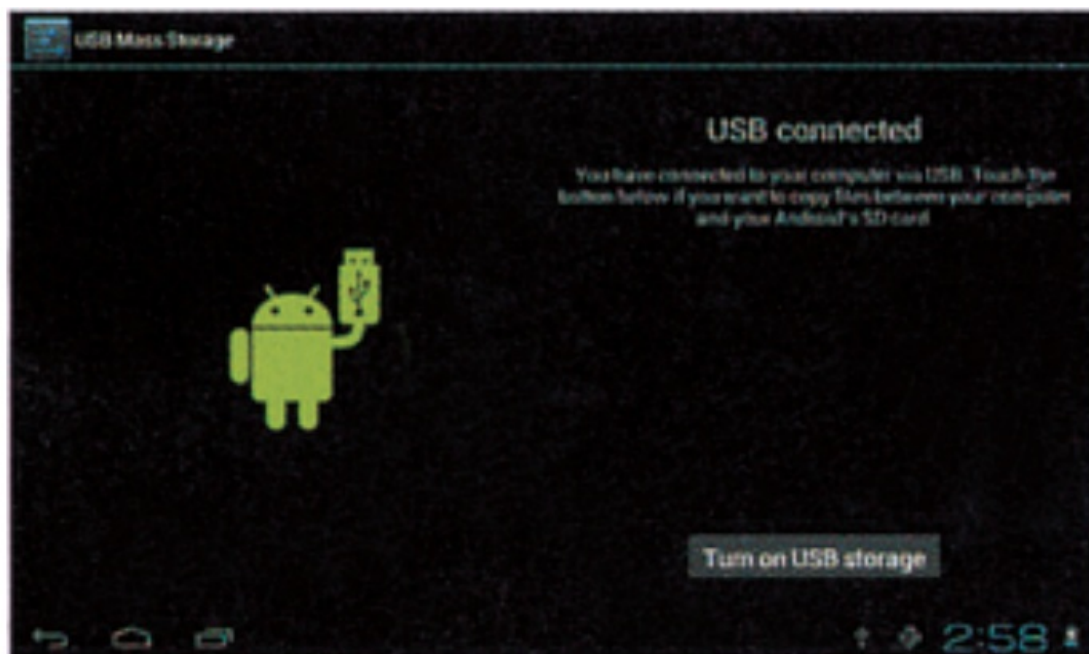


USB connected

Into the load mode, you can copy, or delete the file on the device and the file on the memory card.


Equipment operation interface

 The main interface is described. After startup will enter the main interface.

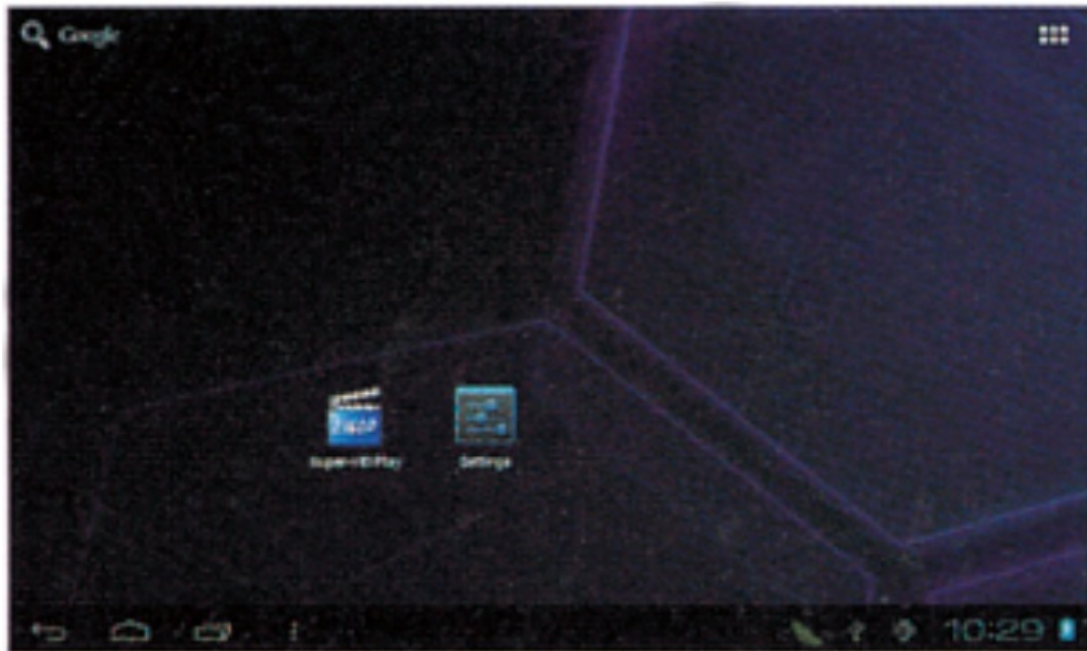


In the main interface, you can

 Management main interface software ICONS: Long press the icons for 3 seconds, after the icons are bigger, then you can drag them anywhere in the interface.

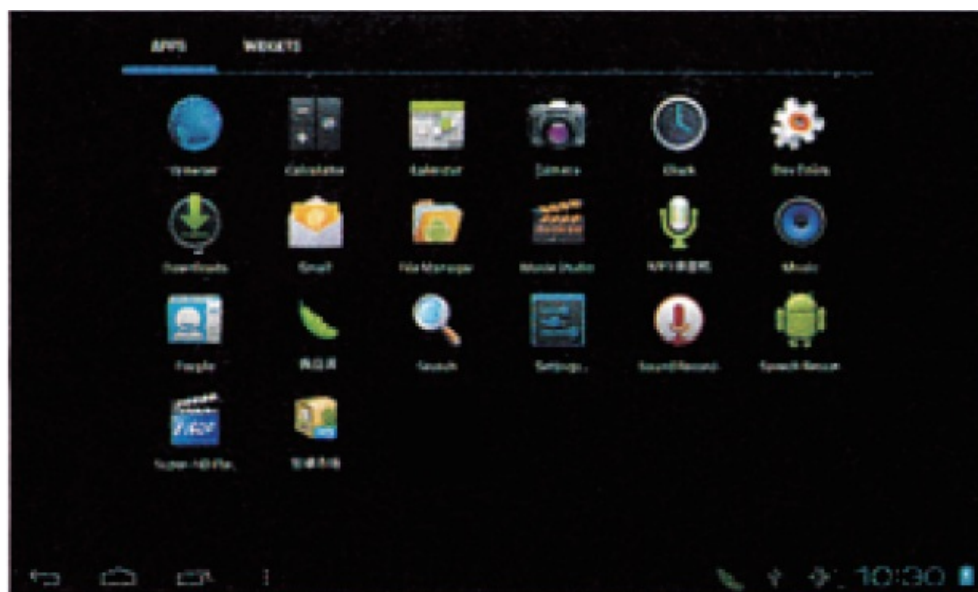

 Delete icons: Long press the icons for 3 seconds, and drag the icons to the Recycle Bin icon, once it becomes red, Loosen your hand, and after that, you can delete the icon You touch the screen keep time, appears the dialogue box" Add to Home screen" as shown below:

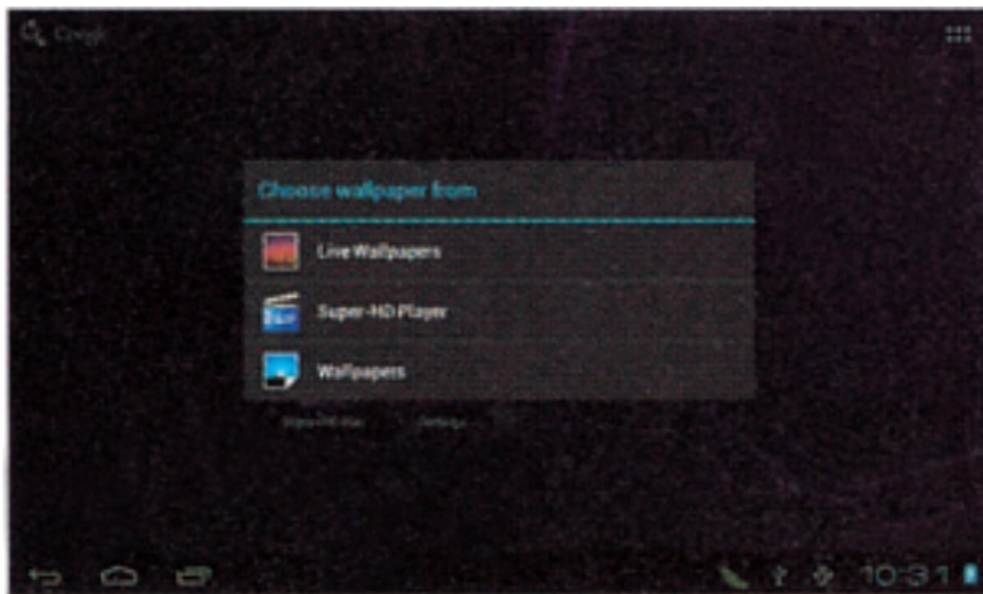




 
status bar describe





The status bar above the screen's Top left displays the main interface software, T-Flash card, USB connection status and so on Top right displays the battery, battery charge icons, current time, set time, Settings Menu, and ESC button.

Use the touch panel

The device is equipped with a touch. The main touch screen area is described, and some of the tips for how to use the touch screen. No matter which interface you are on the screen, can go back to the main screen by pressing the soft key  on the bottom right corner of the main screen.

 
[Attention] The main screen soft key  [functions as the machine back keytar In different applications, by tapping the back soft  key on the bottom right corner of the touch screen, you can return to its interface on the floor. In different applications, by tapping the menu  key on the upper right corner of the touch screen, the screen will appear operation setting interface as follows,


 
[Remark]: The main screen soft key functions as the machine manue. 

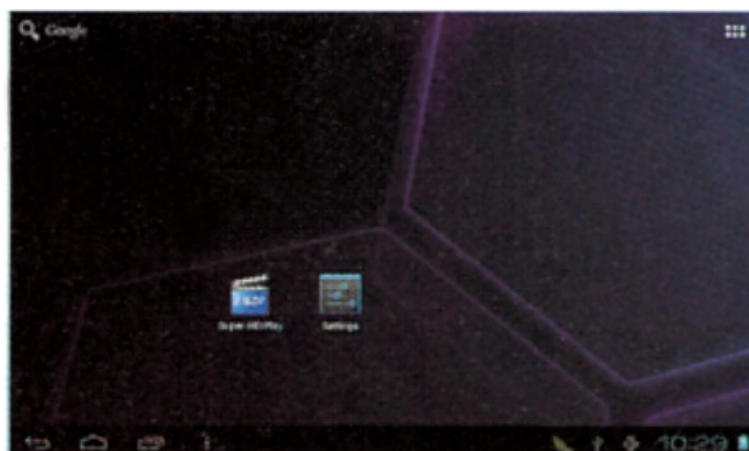

In the main interface, you can touch the icon to open the APPs In different browsers (files, music, video, pictures), You shift and drag the scroll bar so that the file list can up or down to roll.



Equipment basic set

  Setting: Click the setting  icons and enter the settings interface.

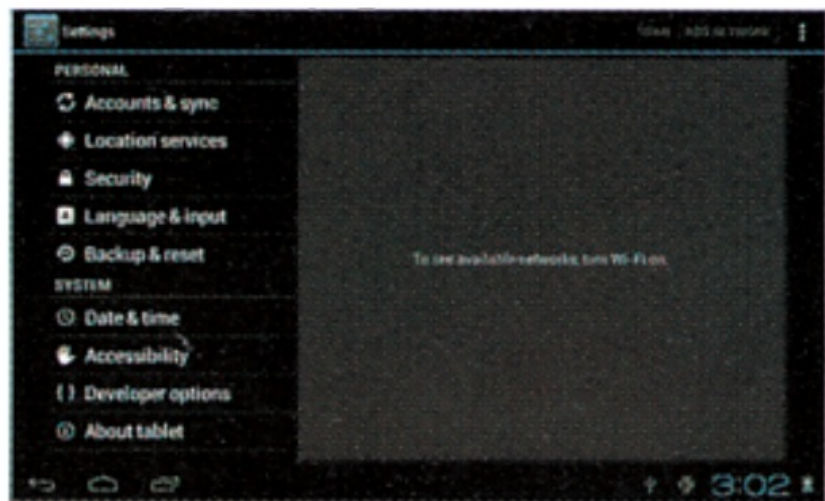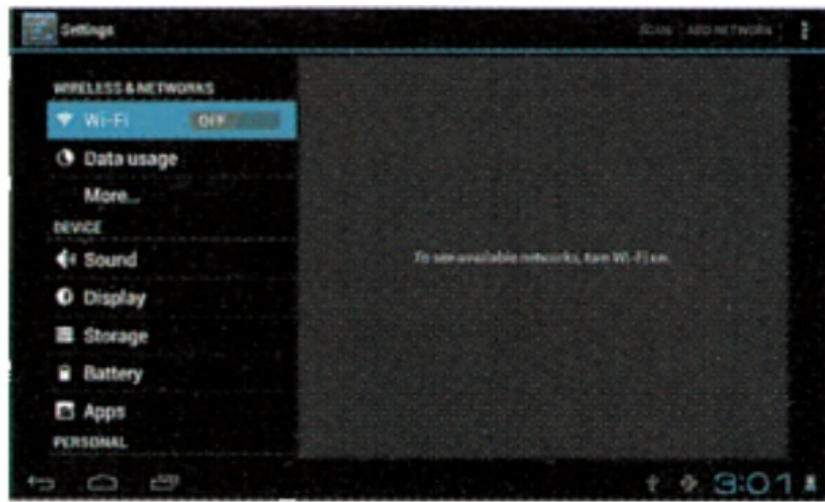


Silent

   selection, Screen lock sounds mode, Volume, Notification ringtone, Audible as Anel W-Fi.

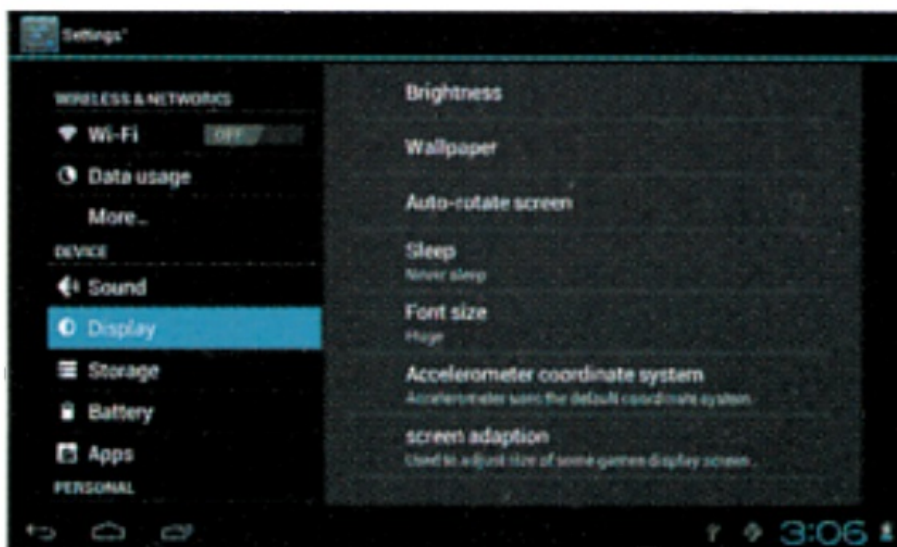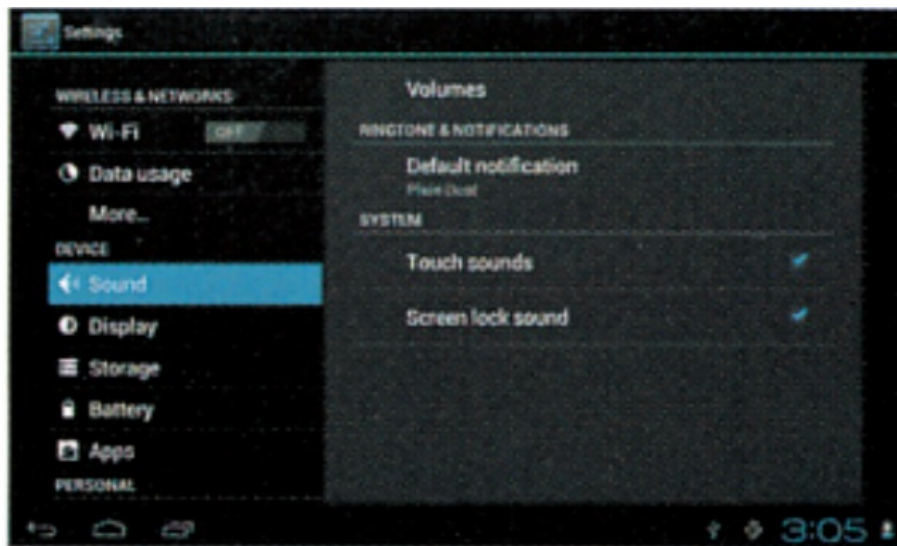


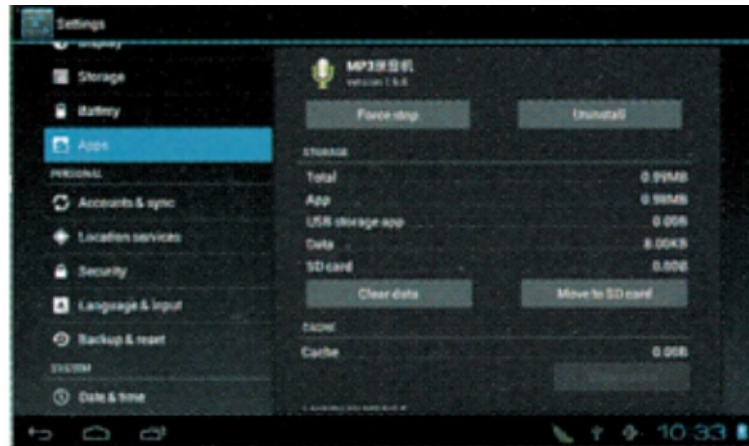 
Application

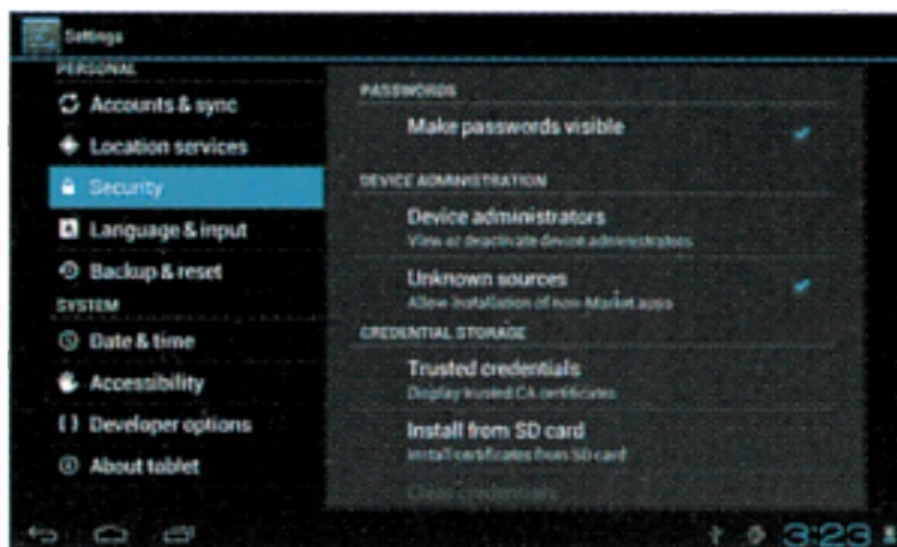

- Manage Applications Unknown sources: Click "Unknown Sources", then click "OK"
- Manage application: Manager and uninstall the Application
- (Remark) : when you Firmware Upgrade, pls close the USB connect

 
How to uninstall?

1. enter  "setting">"Application" >"Manage application" then there will be installed the program list
2. Click you want to uninstall icons, will enter the following interface
3. Click Uninstall, and then you can complete the application



Privacy


Factory data reset

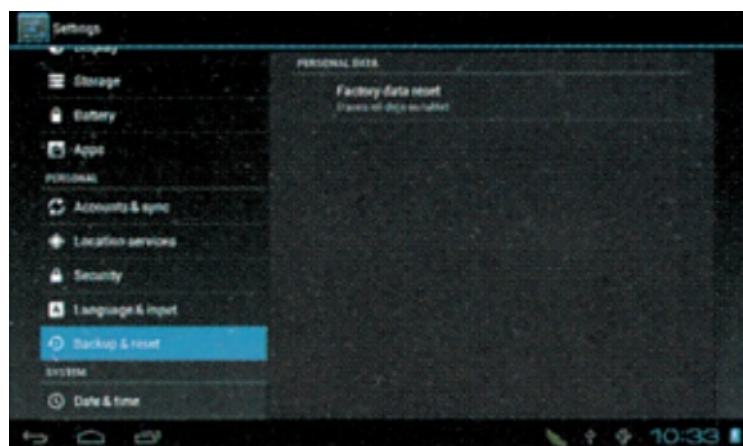

Storage


Remove TF card, view of the available storage space

 [Remark]: pls touch the option "delete SD card", so that can safely remove the SD card

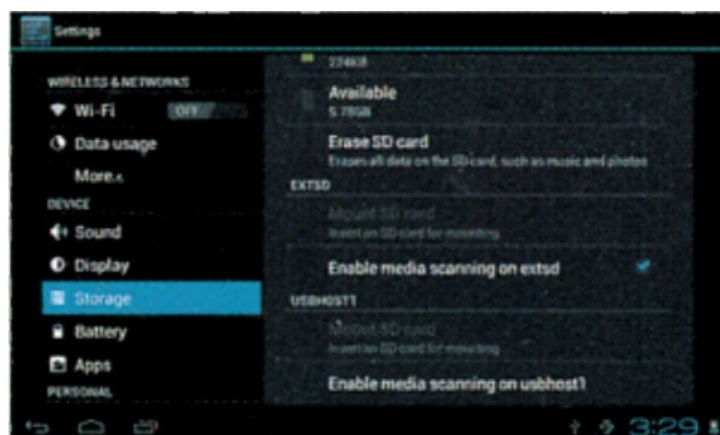

Language & keyboard

 Setting: (Language), text input and automatic error correction options

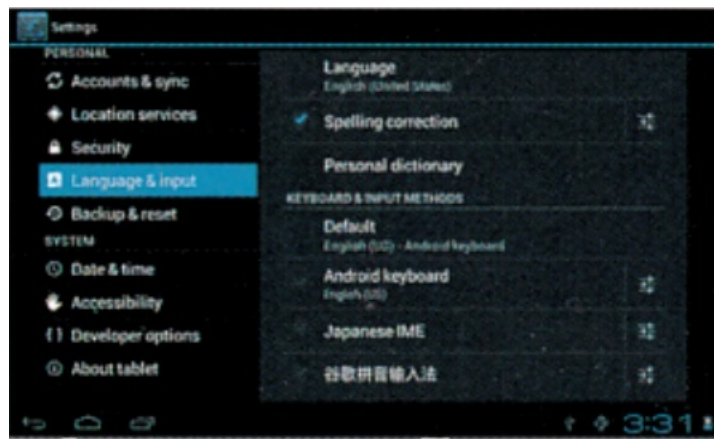

Accounts & syne

- Location services language & circuit
- Backup & reset

SYSTEM

- Date & time
- Accessibility
- Developer options

About tablet

Select Language: 54 kinds of national languages are available

Remark: The Android system can support 54 kinds of language, but now the Manu interface only supports 14 languages, Android keyboard: Android keyboard setting Sound on Key-press

 
Auto-capitalisation

Show suggestions: Display suggested words while typing

Auto-complete: Specebar and punctuation automatically insert the highlighted word

Date & time setting

Set date, set time, Select time zone and select date format

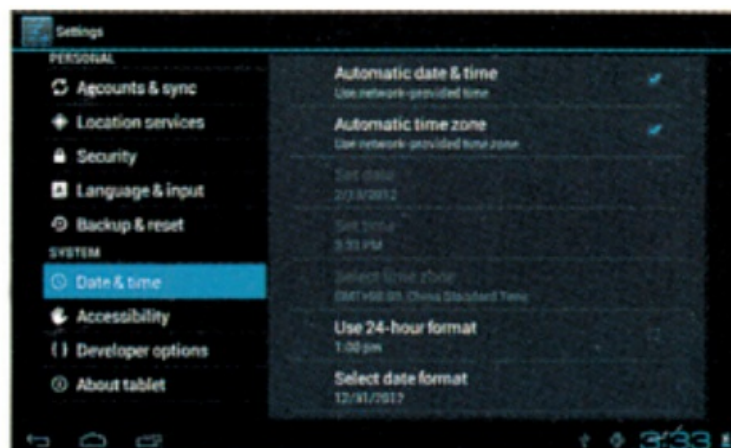

Developer options

Choose Usb work palm. OTG/HOST/SLAVE.....

2. Check the music file where damaged. Try playing other music, if the file is damaged may lead to serious noise or hop sounds.

Can copy files or play music and so on

1. Pis check between the computer and device is the correct connection
2. check the memory storage space is already full
3. check whether the USB cable is good or not
4. The USB connection is disconnected

Basic function

Model	TAB10	
CPU	Type	MTK6755
	Speed	1.5GHz
RAM	Capacity	4GB
EMMC	Capacity	32GB
Camera	Front	5.0MP
	Rear	13.0MP
2G/3G/4G LTE	Support	
Speaker	Size	Built-in 8Ω speaker x 1
WIFI	WIFI module	WIFI 2.4G & 5G
Battery	Built-in	5000mAh
Memory card socket	External memory	Support TF Card
Screen	10.1inch IPS	10.1 inch 1280*800
Headphone jack	Music output	3.5mm standard headphone jack
Connector	Charging/data	Type C

Download PDF: [Vortex TAB10 Tablet User Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.