




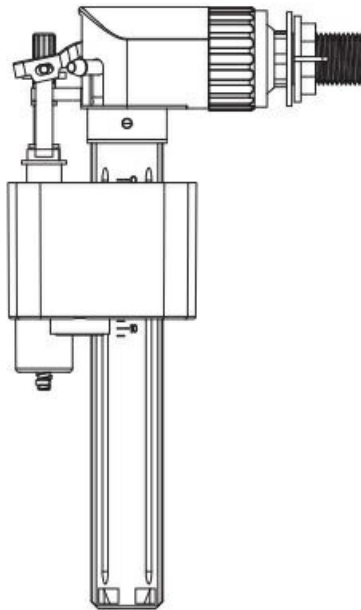
VOXORT V455845 Fill Value Instruction Manual

[Home](#) » [VOXORT](#) » **VOXORT V455845 Fill Value Instruction Manual** 


VOXORT V455845 Fill Value Instruction Manual

INSTALLATION MANUAL

VOXORT



EN Fill Valve
Installation Instruction

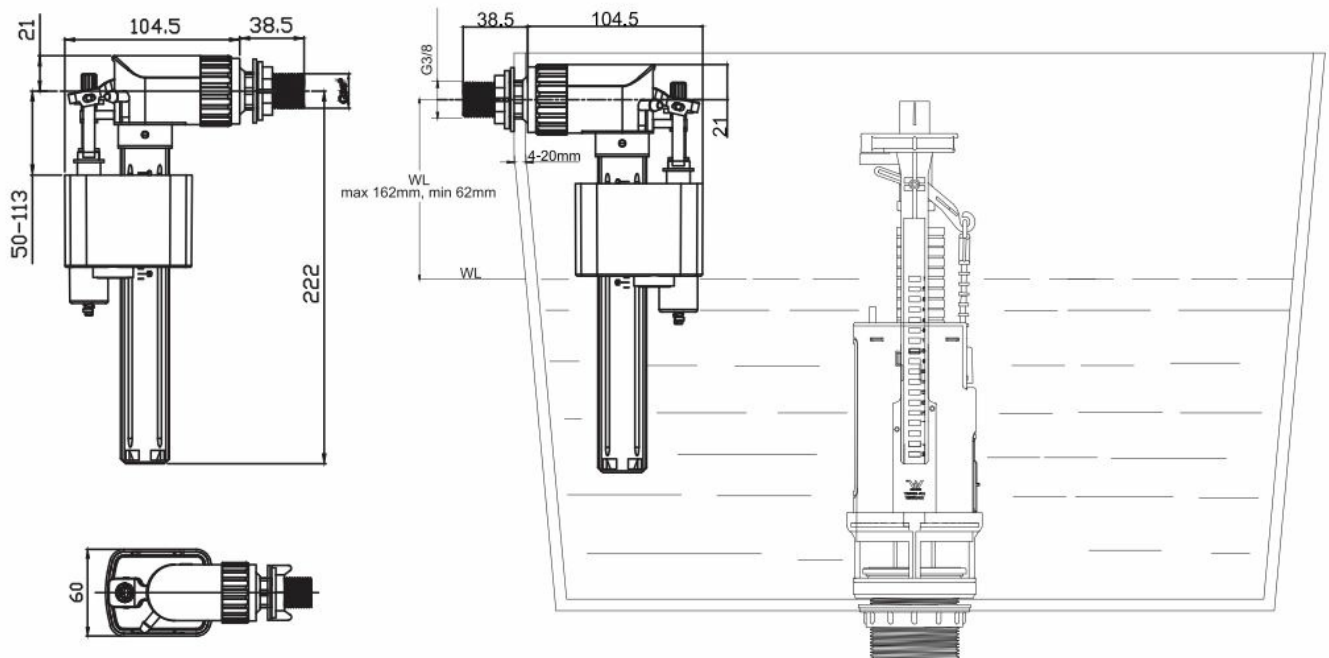

1. Please read the following instructions carefully. In order to avoid injuring yourself or damaging equipment, please install the equipment by following the instructions step by step.
2. The instructions are complied according to the up-to-date production information. We reserve the rights to make the changes about specifications, packaging and sullyng without prior notice.
3. When the valve is installed, the critical level mark on fill valve (identified by a C.L mark on valve body) should be at least 1" (=25.4 mm) above top of overflow pipe.
4. We shall not be responsible for any failure caused by using parts from other manufacturer.
5. Water temperature: 2°-45°C
6. Water pressure: 0,1-16 bar.

⚠ WARNING

Do not use or drop any chlorine or any chemical related components. Use of such products will result in damaging the cistern components and may cause flooding. Do not overtighten because the cistern/bowl may crack.


Contents

- [1 Preparation:](#)
- [2 Water level adjustment](#)
- [3 Fill valve installation](#)
- [4 Fill Valve Cleaning](#)
- [5 Troubleshooting](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)


Preparation:

Please remove the worn outfitting's and clean your cistern when you are about to install a new one. There might be a lot of impurities in your cistern so clean it first.

Water level adjustment

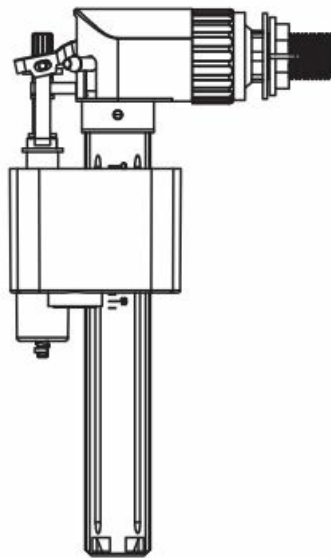


Please, first check the equipment and make sure that the equipment has no breakage or missing parts

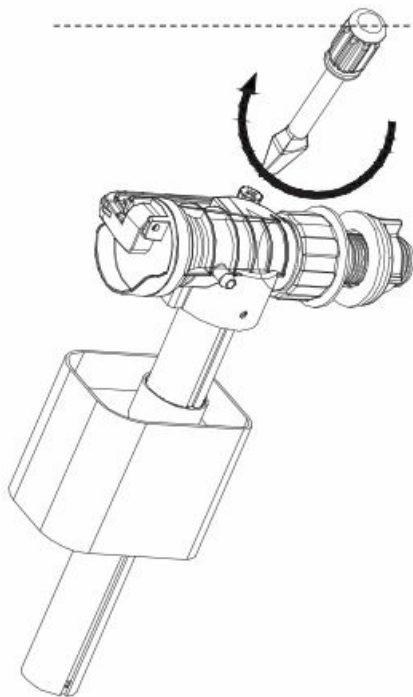


Tighten or release the screw to adjust the water level in a cistern.
Note: The screw must not bother the cistern lid.


Fill valve installation

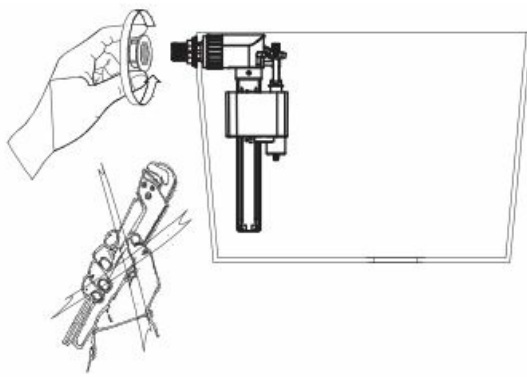


As illustrated, install the valve into tank, and please do not use spanner.

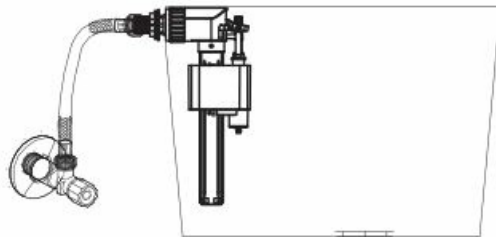


Check the angle valve and the pressure to make sure it matches the requirements.

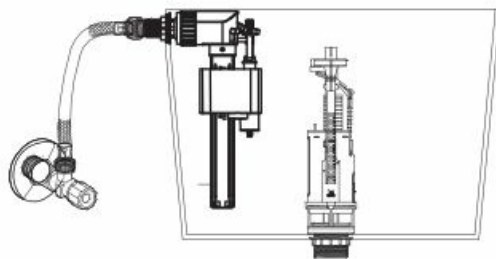


Please turn off the angle valve before adjusting the height of fill valve.

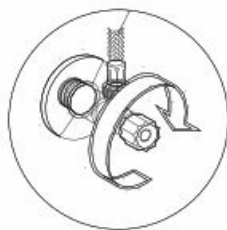


Fill Valve Cleaning

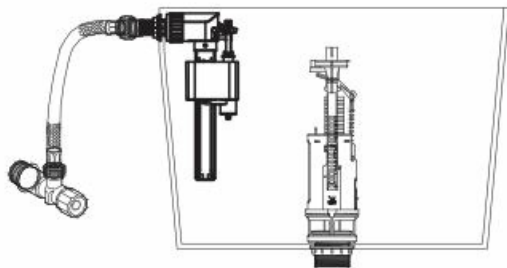


Please shut off water supply before filter clean.

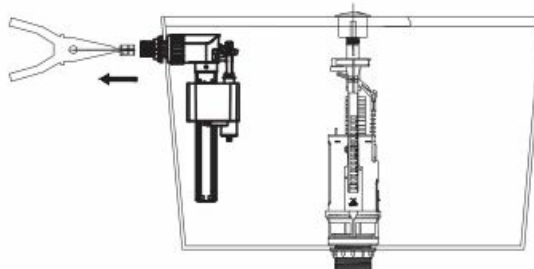

As illustrated, take out the filter from inlet by using pliers or hook.

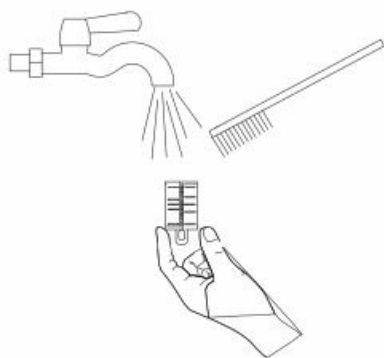

Flush the filter and the adapter.

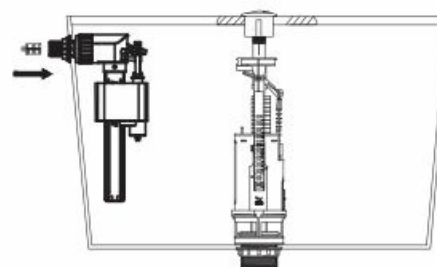

Install clean filter in to inlet and connect the water supply tube as illustrated.

Troubleshooting

Trouble	Cause	Troubleshooting Methods
Water level too high or too low	Improper water level adjustment	Adjust the water level
Fill valve fail to shut off or fill the water	1. Inlet valve switch not turned on. 2. Inlet valve float crushed against ceramic wall. 3. Filter screen clogged due to dirty water	1. Turn on inlet valve switch 2. Adjust inlet valve position 3. Clean the filter screen

Thank you for choosing our products. If there is any question, please contact the local distributor and they will give you satisfactory response.


SERVIS

Fero-Term d.o.o.
 Gospodarska 17, 10255 D. Stupnik, HR
servis@fero-term.hr

Fero-Term d.o.o.
Stobrecka 5, Split
servis.dalmacija2@fero-term.hr

Fero-Term d.o.o.
Ulica 84. gardijske bojne HV Termiti 41, Zadar
servis.dalmacija@fero-term.hr

Documents / Resources

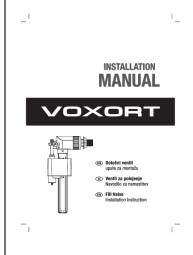	VOXORT V455845 Fill Value [pdf] Instruction Manual V455845, V455845 Fill Value, V455845, Fill Value, Value
---	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.