



VOXX SPKAW10SP Wireless Karaoke System User Guide

[Home](#) » [Voxx](#) » VOXX SPKAW10SP Wireless Karaoke System User Guide 

VOXXSM SINGSATIONTM FREESTYLE WIRELESS KARAOKE SYSTEM QUICK START GUIDE

Contents

- [1 Step 1: Unpack](#)
- [2 Step 2: Charge the Freestyle and Microphones](#)
- [3 Step 4: Turn On the Freestyle](#)
- [4 Step 5: Pair With the Freestyle](#)
- [5 Step 6: Start Playing Music](#)
- [6 Step 7: Turn On the Mics and Sing-Along!](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

Step 1: Unpack

Make sure the following items came in this package:


- Sensation Freestyle Karaoke System
- 2 Wireless Microphones

- 1 Dual Charging Cable (for the microphones)
- 1 Single Charging Cable (for the speaker)
- 1 Audio Cable

Step 2: Charge the Freestyle and Microphones

To charge the Freestyle: Plug the single charging cable into the **DC5V** jack on the back of the Freestyle. Plug the other end into a USB charging adapter (not included).

The indicator light next to the **DC5V** jack turns red while the Freestyle is charging.

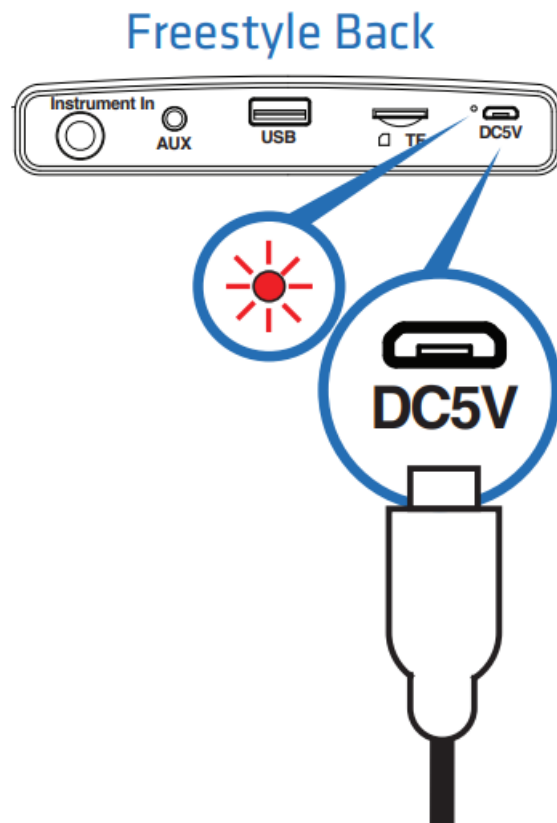

To charge the microphones: Plug both microUSB ends of the dual charging cable into the **DC5V** jack on the bottom of each microphone.

Plug the other end of the dual charging cable into a USB charging adapter (not included).

The indicator light next to the **DC5V** jack turns red while the microphone is charging.

Microphone Bottom



IMPORTANT: The microphone holders and USB ports on the Freestyle do not charge the microphones. To charge the microphones, you must plug them into a USB power source, like a computer or USB charging adapter.

Step 4: Turn On the Freestyle

Turn the **Volume** dial from the OFF position. The Freestyle announces “Power On,” and starts its light show. After 15–30 seconds, the Freestyle announces “Pairing” and goes to Bluetooth pairing mode to set up with your Bluetooth device.

Note: The Freestyle’s light show turns on by default when the Freestyle is on. To turn it off, press the Light button on the top of the Freestyle.



Step 5: Pair With the Freestyle

Make sure your phone’s Bluetooth is turned on.

Select Singsation Freestyle from the available devices to pair to the speaker.

The speaker announces “Device Connected” when it’s finished pairing and connecting to your Bluetooth device.

Note: The process of enabling Bluetooth and connecting varies from device to device. See your device’s owner’s manual for more information and specific instructions.

VOXX SPKAW10SP Wireless Karaoke System - 4

If you don’t see Singsation Freestyle in the list of devices available for Bluetooth pairing, turn the Freestyle off and back on again. Make sure it’s not connected to another Bluetooth device. After a few seconds, the Freestyle announces “Pairing.”

If you’ve previously paired your phone or another Bluetooth device with the Freestyle, it will automatically attempt to reconnect to that device when you switch it on. If you want to pair to a new device, turn off Bluetooth on the device that’s already paired to the Freestyle. The Freestyle announces “Pairing.”

Bluetooth Wireless Connection Tips

- Make sure the Bluetooth capability of your device is turned on.
- Make sure there’s nothing plugged into the Sensation Freestyle’s AUX or Instrument In jacks when you’re trying to use Bluetooth.

- The Bluetooth wireless connection works up to a range of roughly 33 feet (10 meters).
This range may vary, however, based on other factors, such as room layout, wall material, obstacles, your device's Bluetooth performance, etc. If you're having problems connecting to the speaker, move closer to it.
- If your device asks you for a password to connect, use "0000".

Step 6: Start Playing Music

Turn your phone's volume up to 75%. Then start playing music on your phone.

VOXX SPKAW10SP Wireless Karaoke System - 5

Step 7: Turn On the Mics and Sing-Along!

Press and hold each microphone's  button.


The green light below the  illuminates when the microphone is on.

To adjust the microphone volume: Press the MIC Vol – and + buttons on the top of the Freestyle.

VOXX SPKAW10SP Wireless Karaoke System - 6

To adjust the music volume: Use the volume controls on your phone.

To adjust the volume of music AND voice: Use the Volume dial on the top of the Freestyle.

To play/pause the music: Press the  button on the top of the Freestyle.

To skip to the next/previous track: Press the  or  button on the top of the speaker.

Using the Light Show

The Sensation Freestyle has a light show that turns on when the speaker is on by default.

To turn off/on the speaker's light show: Press the LIGHT button on the top of the Freestyle.



Using Echo and Sound Effects

The Sensation Freestyle offers an adjustable Echo effect and two sound effects.

To use the adjustable Echo effect: Use the Echo dial on the top of the Freestyle.


To use sound effects: Press the Sound FX button on the top of the Freestyle. Press and hold to change effects.

Using Other Audio Sources

In addition to Bluetooth audio, the Sensation Freestyle has four other audio sources you can use: Instrument In, USB memory, SD card, and an auxiliary input.

To use a USB memory stick or SD card: Plug the memory stick or SD card into the USB or TF slots. If there are MP3 files in the top directory of the memory stick or SD card, the speaker will automatically start playing them.

Note: These slots will decode MP3 files only. The USB slot is for media playback only, not for charging.

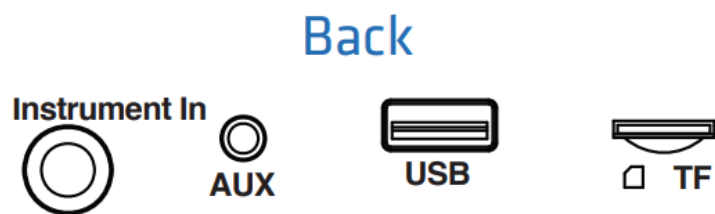

To use an auxiliary audio source: Plug your auxiliary audio source into the AUX input on the back of the Freestyle using a 3.5mm audio cable (not included). The Freestyle automatically switches to the auxiliary input.

To use an instrument: Plug the patch cord from your instrument into the Instrument In the jack.

To return to Bluetooth audio: Start playback on your Bluetooth audio source. Then press and hold the Input button on the top of the Freestyle repeatedly until you hear the Bluetooth audio source.

SPKAW10 QSG 02

Documents / Resources

<p>SINGSATION[®] FREESTYLE <small>WIRELESS</small> KARAOKE SYSTEM</p> <p>QUICK START GUIDE</p> <p><small>Instructions en français 4</small> <small>Instructions en anglais 5</small></p>	<p>VOXX SPKAW10SP Wireless Karaoke System [pdf] User Guide</p> <p>SPKAW10SP, VIXSPKAW10SP, SPKAW10SP Wireless Karaoke System, SPKAW10SP, Wireless Karaoke System</p>
---	--