



vtech 33B144WFB Splash and Play Octopus Instruction Manual

[Home](#) » [vtech](#) » vtech 33B144WFB Splash and Play Octopus Instruction Manual 

vtech 33B144WFB Splash and Play Octopus Instruction Manual



 
Contents

- 1 INTRODUCTION
- 2 INCLUDED IN THIS PACKAGE
- 3 INSTRUCTIONS
- 4 IMPORTANT: BATTERY INFORMATION
- 5 Disposal of batteries and product
- 6 PRODUCT FEATURES
- 7 ACTIVITIES
- 8 MELODY LIST
- 9 SING-ALONG SONG LYRICS
- 10 CARE & MAINTENANCE
- 11 TROUBLESHOOTING
- 12 CONSUMER SERVICES
- 13 Product Warranty / Consumer Guarantees
- 14 Documents / Resources
- 15 Related Posts

INTRODUCTION

Enjoy a bubbling fun bath time with the Splash & Play Octopus!

Press the light up snorkel button to hear fun sounds, songs and phrases! Pour water into the Octopus for splashing play! Features a spinning star fish, wobbling seaweed and an electronic pull down shell for hours of fun!

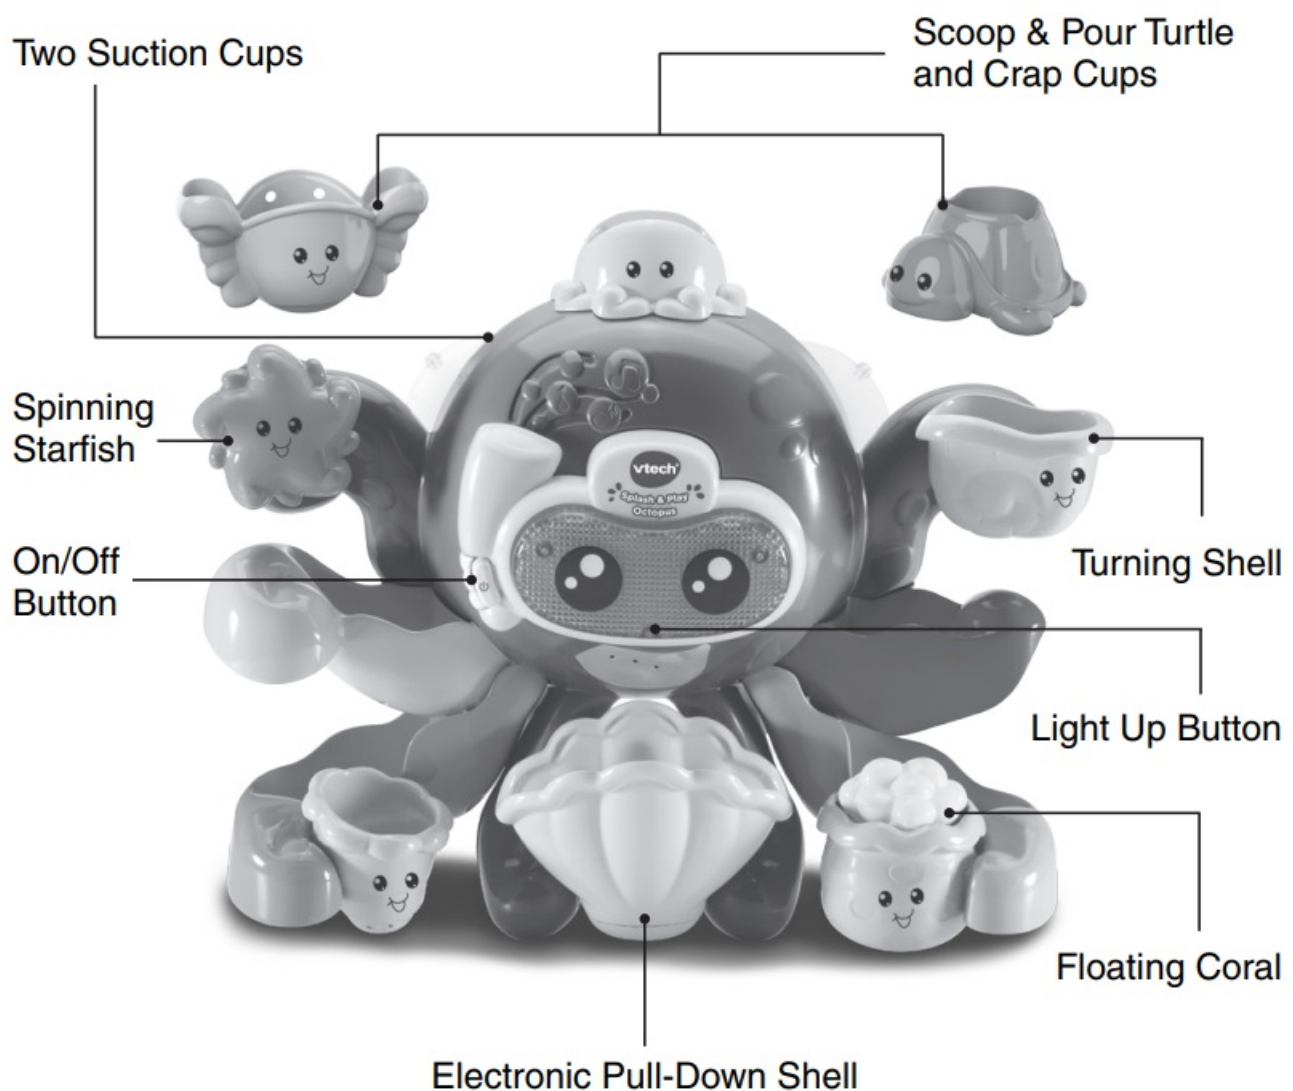

INCLUDED IN THIS PACKAGE

Splash & Play Octopus

Two Scoop & Pour Animal Cups (Turtle Cup & Crab Cup)

Quick Start Guide

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please save this Instruction Manual as it contains important information.

INSTRUCTIONS


BATTERY REMOVAL AND INSTALLATION

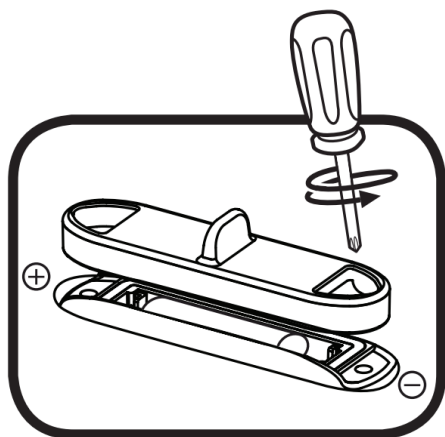

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 1 new AAA (AM-4/LR03) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

WARNING: Adult assembly required for battery installation. Keep batteries out of reach of children.

 Removing the packaging locks

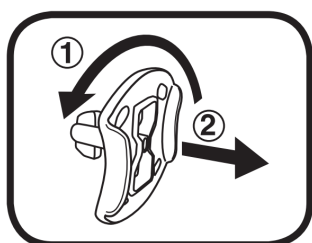

1. Rotate the packaging locks 90 degrees anticlockwise.
2. Pull out the packaging locks and discard.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

With **VTech® Splash & Play Octopus**, safety comes first. To ensure your child's safety, please ensure the battery cover is securely locked into position to avoid injury.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



■ The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

 
In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

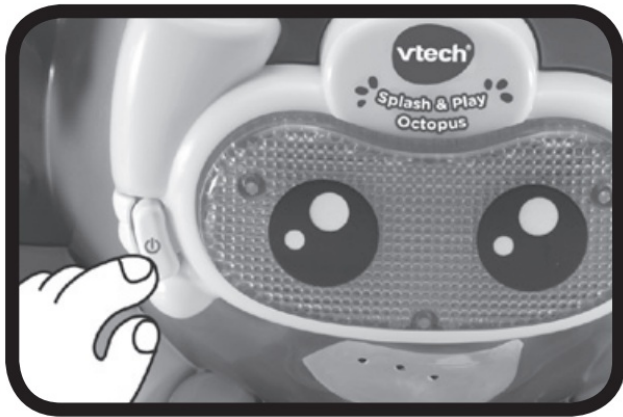

On/Off Button

To turn the unit On, press the On/Off Button. To turn the unit Off, press the On/ Off Button a second time.

Automatic Shut-Off

 
To preserve battery life, the Splash & Play Octopus will automatically shut off after approximately one minute without input. The unit can be turned on again by pressing the Light Up Button or pulling down the shell.

WARNINGS:

- The batteries must be changed by an adult.
- This toy cannot be used in salt water.
- After using this toy, do not leave it in the water for a long time.
- Make sure to empty the water out of all elements of the toy and to rinse them out before drying.
- This toy can be operated in water only when fully assembled in accordance with the instructions.
- This is not a lifesaving device. Do not leave your child unattended while this VTech® Splash & Play Octopus unit is in use.
- Never leave a child unattended or with an older child in the bathroom or in the bath, not even for one minute.
- Always check with a thermometer the temperature of the water coming from the tap before sitting your child in the bath. Toddlers have very sensitive skin and can easily get burnt if the water is too hot.
- When closing the battery cover ensure that the screw is securely tightened. This will avoid any water leakage.
- Only use this unit in water between 10 and 45 degrees centigrade.
- Parents should drain the water from the speaker if the volume decreases too much.

ACTIVITIES

1. Press the **On/Off Button** to turn the unit On. You will hear a song and an introducing phrase. The light will flash with the sounds.

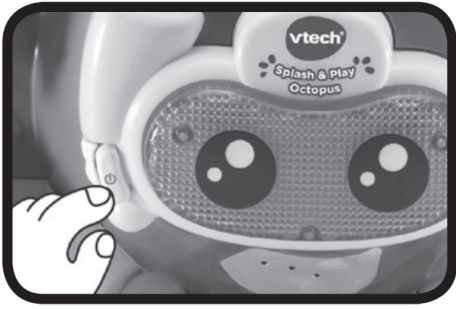


2. Press the **Light Up Button** to hear fun sounds and phrases, melodies and songs.



3. Use the included **Scoop & Pour Turtle & Crab Cups** to pour water on to the Octopus for fun water play.



 4. The shell will pull down when filled with water and play fun sounds and phrases.

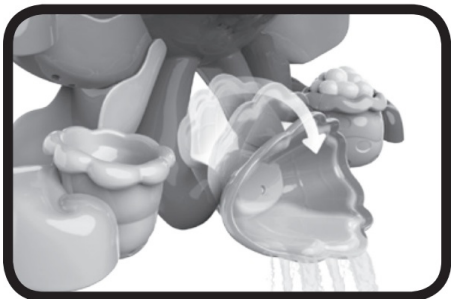

5. If there is no input after approximately 15 seconds, reminding phrases will be played. If there is still no input after another 15 seconds, the unit will play a short ending tune and will go into sleep mode. The unit can be re-activated by pressing the Light Up Button or pulling down the shell.

WARNING:

- This toy can be operated in water only when fully assembled in accordance with the instructions.

MELODY LIST

- ML01. The Flying Trapeze
- ML02. Toyland
- ML03. Ring Around a Rosey
- ML04. Mary Had a Little Lamb
- ML05. Here We Go Looby Lou

ML06. Bicycle Built for Two
ML07. Hickory Dickory
ML08. Goosey Goosey Gander
ML09. Glow Worm
ML10. Humpty Dumpty
ML11. Incy Wincy Spider
ML12. Mulberry Bush
ML13. Bingo Techno Version
ML14. Frere Jaques
ML15. Yankee Doodle

SING-ALONG SONG LYRICS

Song 1

Pouring water, over my head and legs.
I'm a happy Octopus,
I love to bath with you!

Song 2

I am splashing with my friends,
Spinning round, floating up,
Seaweed, starfish, lots of shells,
Come and play!

Song 3

I have 8 colourful legs,
Wash them all, scrub-a-dub dub,
Sing with me and let's be clean!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

Product Warranty / Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

This electronic toy is intended for use in the bath and is waterproof when used as intended. Water cannot enter the electronics if the battery compartment door is locked correctly. The design is verified by submerging the toy underwater to a depth of 15cm for 30 minutes.

There will be a reduction in acoustic performance when the toy is submerged in water.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk

www.vtech.com.au

TM & © 2022 VTech Holdings Limited.

All rights reserved.

IM-555200-000

Version:0

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect ...learning to touch, reach, grasp, sit-up, crawl and toddle



 
Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting ...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

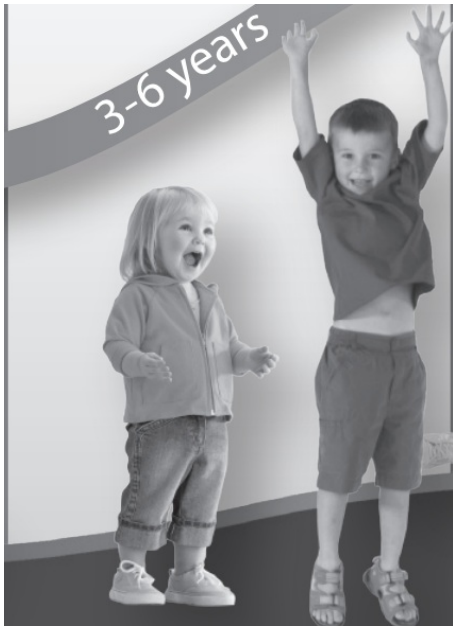

Electronic Learning Computers


Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind ...intelligent technology that adapts to my level of learning ...National Curriculum based content to support what I'm learning at school



Documents / Resources

	<p>vtech 33B144WFB Splash and Play Octopus [pdf] Instruction Manual 33B144WFB, Splash and Play Octopus, Play Octopus, Splash Octopus, 33B144WFB</p>
---	---