



Contents [[hide](#)]

- [1 vtech 424336 Learn Discovery Tree](#)
- [2 Specifications](#)
- [3 PRODUCT FEATURES](#)
- [4 ACTIVITIESproducts](#)
- [5 CARE & MAINTENANCE](#)
- [6 TROUBLESHOOTING](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



vtech 424336 Learn Discovery Tree




Specifications

- Product Name: Animal Friend Toy
- Battery Type: AAA (AM/4-4/LR03)
- Recommended Batteries: Alkaline or Ni-MH rechargeable
- Automatic Shut-Off: Approximately 30 seconds

Battery Removal and Installation

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 1 new AAA (AM/4-4/LR03) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

NOTE: Please save this Instruction Manual as it contains important information.

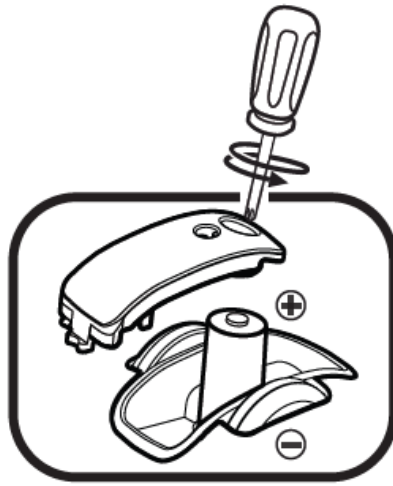

Product Features

- Light Up Heart Button: Press to turn on or wake up the unit.
- Automatic Shut-Off: The Unit will automatically shut off after approximately 30 seconds without input.

Activities

1. Press the Light Up Heart Button to turn the unit ON for a song, phrase, and fun sounds.
2. Touch the heart on the Animal Friend's cheek to hear a kiss sound and animal noises.
3. Pushing the Animal Friend triggers a song, phrase, and melody.

Care & Maintenance


1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Avoid direct sunlight and heat sources.
3. Remove batteries if not in use for an extended period.
4. Avoid dropping the unit on hard surfaces or exposing it to moisture.

Troubleshooting

1. Turn the unit OFF if it malfunctions.
2. Remove batteries to interrupt the power supply.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. If issues persist, replace with new batteries.

Unlock the packaging locks:

1. Turn the packaging lock anticlockwise several times.
2. Pull out and discard the packaging lock.

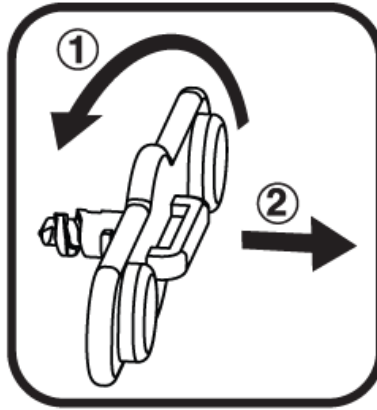

WARNING:

An adult assembly is required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in a fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and

- The crossed-out wheellie bin symbols on products and batteries, or their respective packaging, indicate they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.
- The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.
- The solid bar indicates that the product was placed on the market after 13th August, 2005.
- Please dispose of your product and batteries responsibly.
 - In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.
 - Learn more at:
 - www.vtech.co.uk/recycle
 - www.vtech.com.au/sustainability
 - Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Light Up Heart Button

Press the Light Up Heart Button to turn on or wake the unit up.




2. AUTOMATIC SHUT-OFF

To preserve battery life, the Animal Friend will automatically shut off after approximately 30 seconds without input. The unit can be turned on or woken up again by pressing the Light Up Heart Button.

ACTIVITIESproducts

1. Press the Light Up Heart Button to turn the unit ON. You will hear a song, a phrase and fun sounds.
2. Touch the heart on the Animal Friend's cheek to hear a kiss sound and animal noises.

3. Pushing the Animal Friend along will trigger a song, phrase and melody.

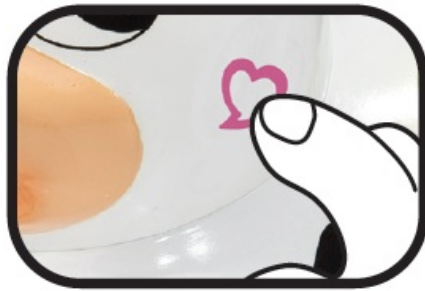

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period.
4. Do not drop the unit on hard surfaces, and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.

5. If the product still does not work, replace it with a new set of batteries.

CONSUMER SERVICES

- Creating and developing VTech products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors can sometimes occur.
- You need to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

- Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) Website: www.vtech.co.uk/support

Australian Customers:

- Phone: 1800 862 155
- Website: support.vtech.com.au

NZ Customers:

- Phone: 0800 400 785
- Website: support.vtech.com.au
- PRODUCT WARRANTY/

CONSUMER GUARANTEES

UK Customers:

- Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

- VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES
- Under the Australian Consumer Law, several consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.
- Visit our website for more information about our products, downloads, resources and more.
- www.vtech.co.uk
- www.vtech.com.au
- 2025 VTech.
- All rights reserved.
- IM-575400-000
- Version:0

FAQs


Q: What should I do if the product stops working?

A: If the program/activity stops working, follow the troubleshooting steps provided in the manual. If issues persist, replace batteries with a new set.

Q: How do I contact customer services for assistance?

A: For customer services, refer to the contact information provided in the manual based on your location (UK, Australia, New Zealand).

Documents / Resources

	vtech 424336 Learn Discovery Tree [pdf] Instruction Manual 424336 Learn Discovery Tree, 424336, Learn Discovery Tree, Discovery Tree, Tree
---	---

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.