

Vtech 557203 Twist and Play Cube Instruction Manual

Home » vtech » Vtech 557203 Twist and Play Cube Instruction Manual

Vtech 557203 Twist and Play Cube



VTech understands that a child's needs and abilities change as they grow and with that in m1ind we develop our toys to teach and entertain at just the right level ..

vtech baby

Toys that will stimulate their interest in ,different textures, sounds and c olours

Pre-School

Interactive toys to develop their ima gination and encourage language d evelopment

Electronic Learning Computer Cool, aspirational and inspiring computers for curriculum related learning

I am ...


- ... responding to colours, sounds a nd textures
- ... understanding cause and effect
- ...learning to touch, reach, grasp, s it-up, crawl and toddle

I want ...

- ... to get ready for school by startin g to learn the alphabet and countin
- ... my learning to be as fun, easy a nd exciting as can be
- ... to show my creativity with drawing and music so my whole brain develops

I need ...

- ... challenging activities that can ke ep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ... National Curriculum based content to support what I'm I earning at school

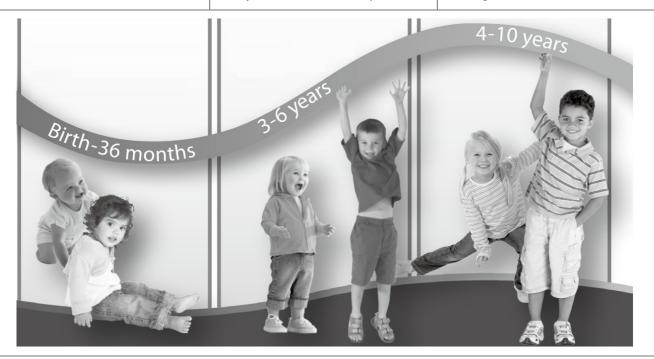


Contents

- 1 INTRODUCTION
- 2 INCLUDED IN THE PACKAGE
- **3 GETTING STARTED**
 - 3.1 BATTERY REMOVAL AND INSTALLATION
- 4 Disposal of batteries and product
- **5 PRODUCT FEATURES**
- **6 MELODY LIST**
- **7 SONG LYRICS**
- **8 CARE & MAINTENANCE**
- 9 TROUBLESHOOTING
- **10 CONSUMER SERVICES**
- 11 PRODUCT WARRANTY/ CONSUMER
- **GUARANTEES**
- 12 Documents / Resources
- 13 Related Posts

Explore & discover with the Twist & Play Cube by VTech®. Six interesting sides of play allow your little one to learn & create.

Piano keys, steering wheel, clock, play phone and much more will encourage baby's motor skills and hand eye co-ordination. The removeable panel even transforms into a fun driver.

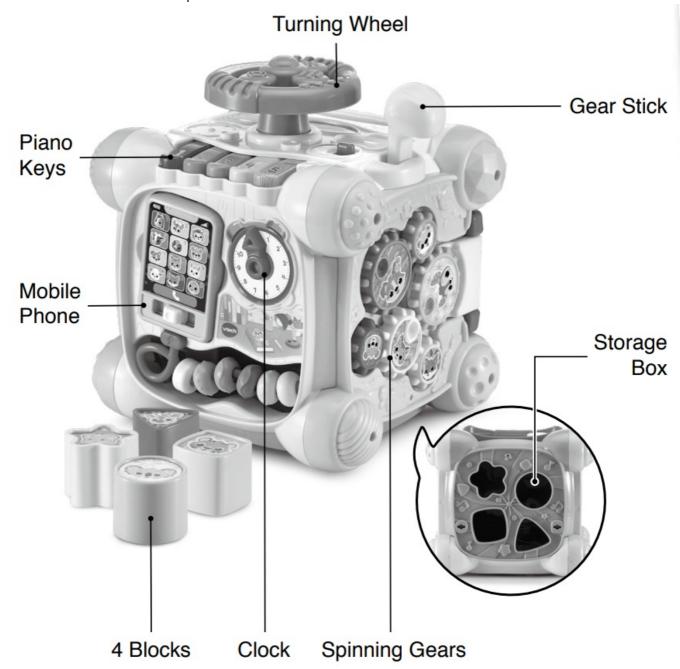

INCLUDED IN THE PACKAGE

- · Twist & Play Cube
- 4 Blocks
- Quick Start Guide


WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Removing the Packaging Locks:

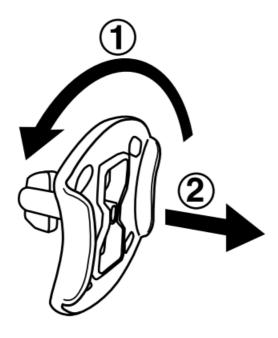


- 1. Rotate the packaging locks 90 degrees anticlockwise.
- 2. Pull out the packaging locks and discard.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

- 1. Make sure the unit is turned OFF.
- 2. Find the battery cover under the top panel of the electronic module. Use a coin or a screwdriver to loosen the screw and then open the battery cover.
- 3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.

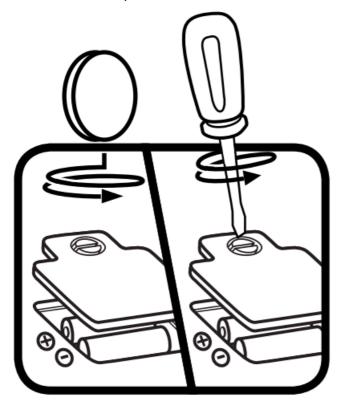

4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance,

alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).

5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- · Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation. The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:


www.vtech.co.uk/recycle www.vtech.com.au/sustainability

PRODUCT FEATURES

1. OFF/Explore/Music Mode Switch To turn the unit On, slide the OFF/ Explore/Music Mode Switch to

^{*} Visit <u>www.recyclenow.com</u> to see a list of collection points near you.

Explore Mode () or Music Mode () position. To turn the unit Off, slide the OFF/Explore/Music Mode Switch to the Off () position.

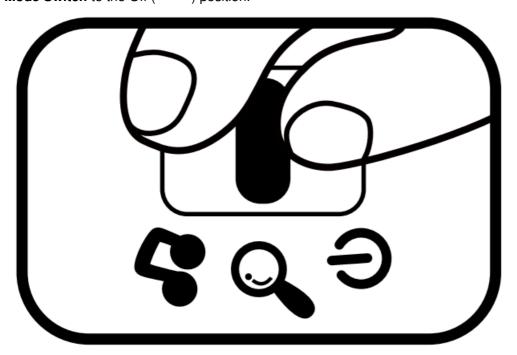


2. Transformation

Remove the farmyard scene panel, insert it into the hole on top of the electronic panel, as shown here. The cute driver is ready for your little one to explore. Reverse this step to transform back to a cube

3. Automatic Shut Off

To preserve battery life, the Twist & Play Cube will automatically power-down after approximately 40 seconds without input.


The unit can be turned on again by pressing the piano buttons, removing & inserting the phone, pulling or pushing the joystick, turning the clock hand, and switching to the other mode.

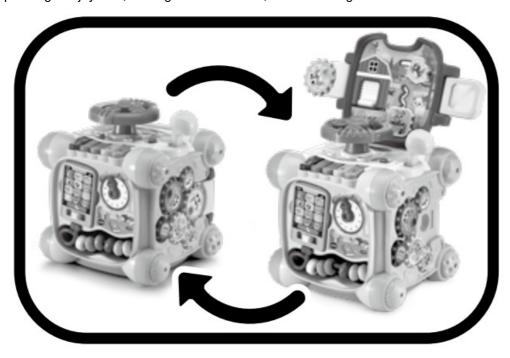

NOTE


If the unit powers down whilst playing, please install a brand new set of batteries.

1. **OFF/Explore/Music Mode Switch** You will hear a song, phrases and sound effects or a short tune. The lights will flash with the sounds.

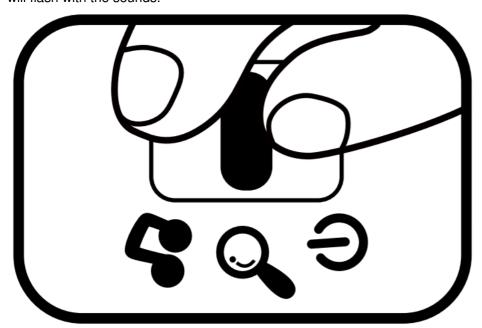

2. 5 Piano Keys

In **Explore Mode**, press the **5 Piano Keys** to learn numbers, colours and traffic lights, hear 5 sing-along songs and fun driving phrases. In **Music Mode**, press the **5 Piano Keys** to have musical fun. The lights will flash along with the sounds.

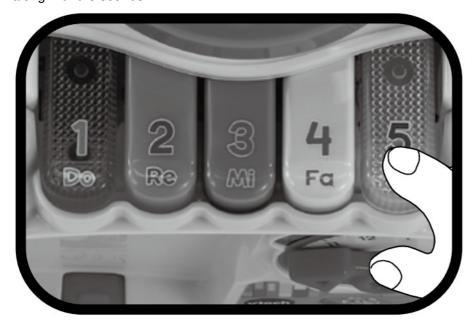


3. Turning Wheel

In **Explore Mode**, turn the wheel to pretend to drive, hear fun sounds, friendly phrases and songs. In **Music Mode**, turn the wheel to hear songs and playful melodies. When a melody is playing, press the **Piano Keys** to play the song note by note. The lights will flash along with the sounds.



4. Gear Stick

In **Explore Mode**, push or pull the **Gear Stick** to learn opposites. In **Music Mode**, push or pull the **Gear Stick** to hear short tunes. The lights will flash along with the sounds.

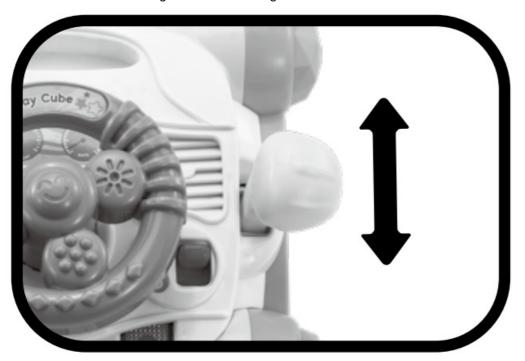


5. Mobile Phone

In **Explore Mode**, pick up and put down the **Mobile Phone** to pretend call animal friends, hear greetings and fun sounds. In **Music Mode**, pick up the **Mobile Phone** to hear songs and melodies. When a melody is playing, press the **Piano Buttons** to play the song note by note. The lights will flash along with the sounds.



6. Clock

In **Explore Mode**, turn the Clock to learn time concepts, and play interactive games. In **Music Mode**, turn the **Clock** to hear songs and melodies. When a melody is playing, press the **Piano Keys** to play the song note by note. The lights will flash along with the sounds.

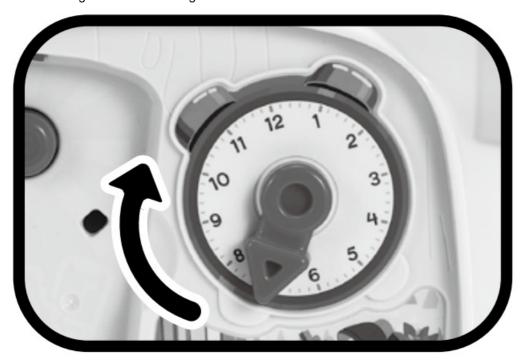

MELODY LIST

- 1. Row, Row, Row Your Boat
- 2. The Green Grass Grew All Around
- 3. BINGO
- 4. Bicycle Built For Two
- 5. London Bridge

- 6. Old MacDonald Had a Farm
- 7. The Entertainer
- 8. Wheels on the Bus
- 9. Polly Put the Kettle On
- 10. Muffin Man
- 11. Humpty Dumpty
- 12. Hickory Dickory Dock
- 13. Grandfather's Clock
- 14. One, Two, Buckle My Shoe
- 15. Ten In the Bed

SONG LYRICS

Song 1

There are six sides for you to explore, Buttons to press and so much more. Pick up the phone and call your friends, Go for a drive and play pretend!

Song 2

Let's hit the road, turn left or right, Which way should we go today? There's lots to see, and many places to go Adventure is waiting for us.

Song 3

Vroom, vroom, vroom
Where should we go?
Beep, beep, beep, beep
Drive down the road!
Drive to the park or drive to the farm
There's always somewhere for you to explore.

Song 4

Tick-tock, tick-tock, goes the clock How will you spend your day today? Eat a snack, play with a friend, Play with blocks or learn some thing new.

Song 5

Hello, hello, my best friend! I'm happy to talk to you today! I hope you're doing well!

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries if the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit On. The unit should now be ready to use again.
- 5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers: Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers: Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED - CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumer guarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au

TM & © 2023 VTech Holdings Limited. All rights reserved. IM-557200-000 Version:1



Documents / Resources



<u>Vtech 557203 Twist and Play Cube</u> [pdf] Instruction Manual 557203 Twist and Play Cube, 557203, Twist and Play Cube, Play Cube, Cube

Manuals+,