



vtech 558936 Race and Learn Driver Instruction Manual

[Home](#) » [vtech](#) » vtech 558936 Race and Learn Driver Instruction Manual 



Instruction Manual
Race & Learn
DRIVER

Contents

- 1 558936 Race and Learn Driver
- 2 INTRODUCTION
- 3 INCLUDED IN THIS PACKAGE
- 4 GETTING STARTED
- 5 ASSEMBLY INSTRUCTIONS
- 6 PRODUCT FEATURES
- 7 ACTIVITIES
- 8 CARE & MAINTENANCE
- 9 TROUBLESHOOTING
- 10 PRODUCT WARRANTY/CONSUMER GUARANTEES
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtch Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

**Electronic Learning Computers**

Cool, aspirational and inspiring computers for curriculum related learning

I need...

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the Race & Learn Driver!

Start your engines, zoom around exciting racetracks, go on special road trips, help friends and pick up preschool skills on the way! Turn the wheel, slide the turn signal, press the dashboard buttons and more. Let's cruise!

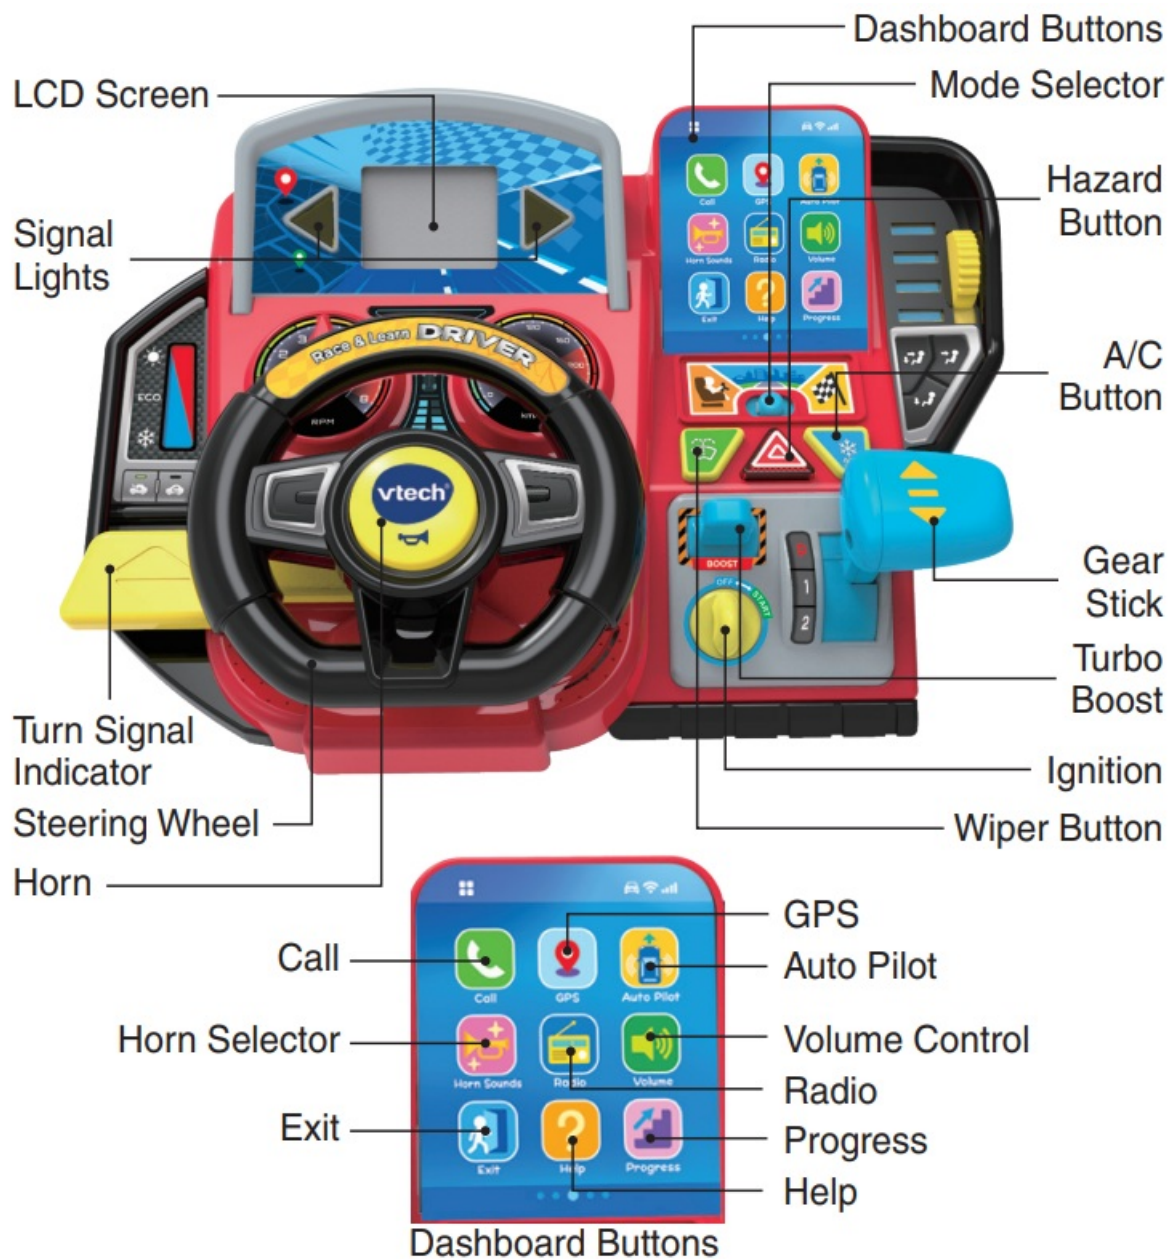

INCLUDED IN THIS PACKAGE

- Race & Learn Driver
- 2 Support Legs



 
- Quick Start Guide

WARNING

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this Quick Start Guide as it contains important information.

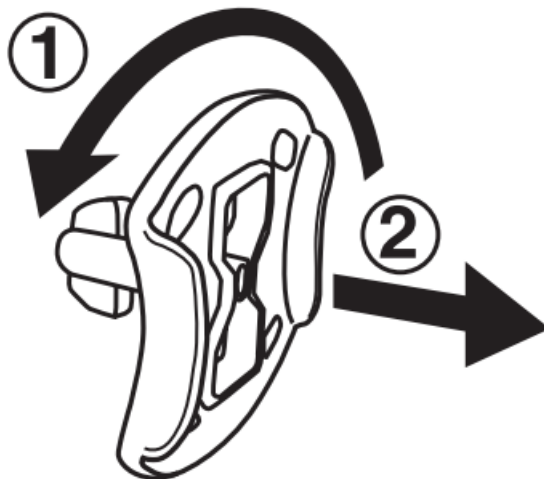Unlock the Packaging Locks

1. Rotate the packaging locks 90 degrees anticlockwise.
2. Pull out the packaging locks and discard.

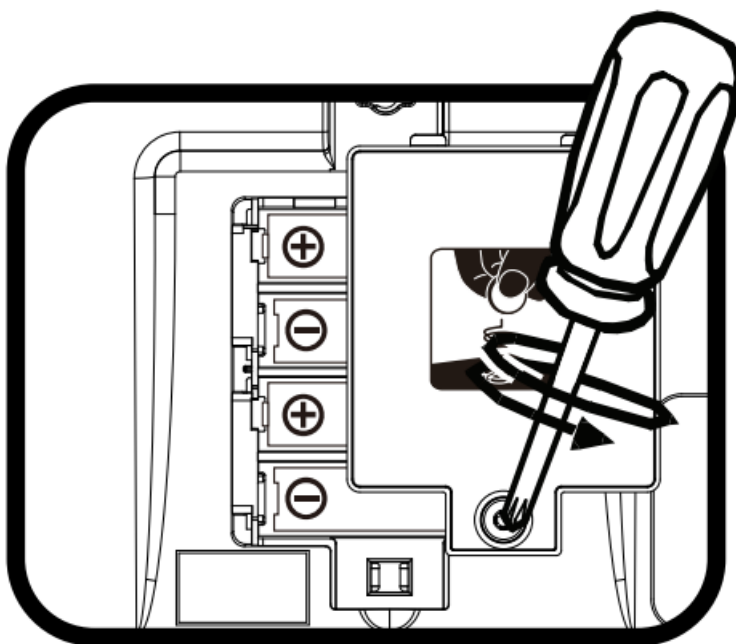GETTING STARTED**Battery Removal and Installation**

1. Make sure the unit is turned Off.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw, then open the battery cover.

3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni- MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

WARNING: Adult assembly required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation. The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

Exit Try-Me Mode

Attention: The unit is in Try-Me mode in the package. To exit this mode, follow the steps below:

 
1. Turn the Ignition to the START position to turn the unit on.
2. Next, slide the Turn Signal Indicator down.
3. The Hazard Button and Turn Signal Lights will flash 3x with horn sounds to indicate Normal Play mode is active. The unit will restart.



ASSEMBLY INSTRUCTIONS

With the Race & Learn Driver, safety comes first. Adult assembly required. For your child's safety, do not let them play with this toy until it is fully assembled.

 
1. Locate the Yellow Support Legs and insert them into the Driver base as shown.

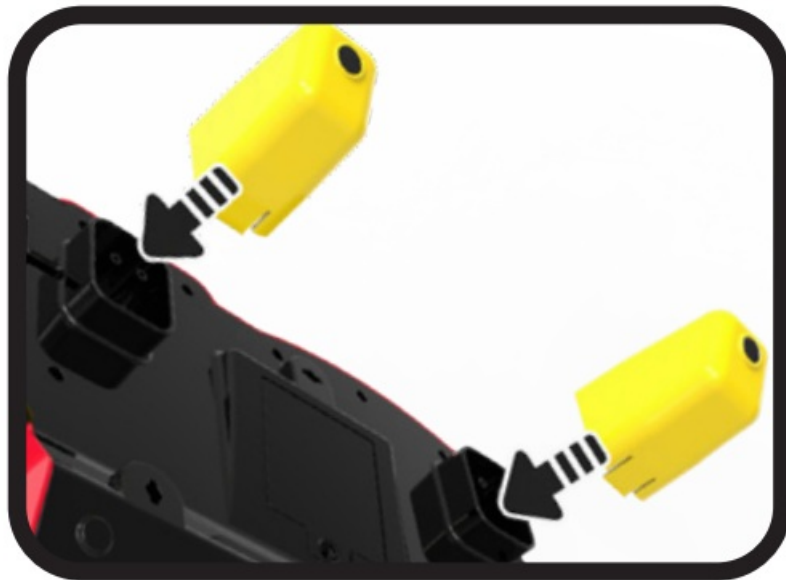

PRODUCT FEATURES

1. Ignition


Turn the Ignition right to the START position to turn on the unit.

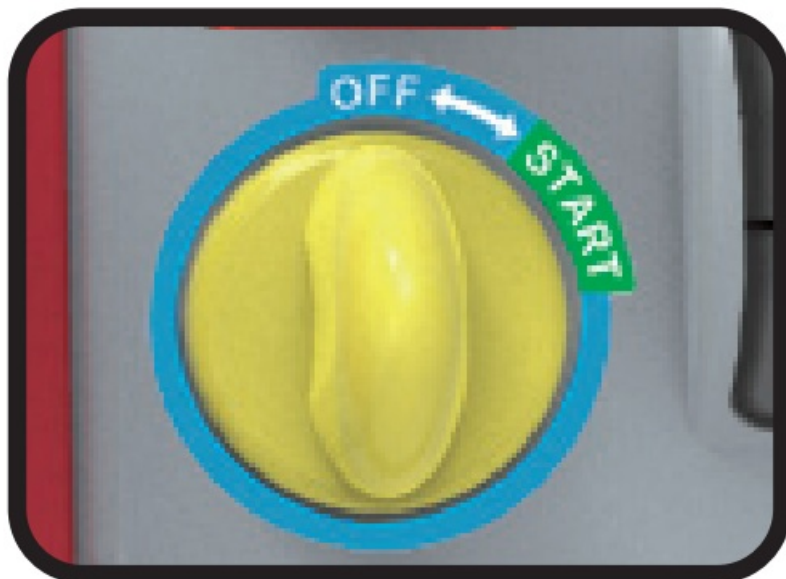

Turn the Ignition left to the OFF position to turn off the unit.



2. Gear Stick

	Change up to P (park) to stop the car.
	Change down to 1 to start driving.
	Change down to 2 to drive faster.
	Change back up to 1 to drive slower.

3. Turbo Boost

Use the Turbo Boost for a blast of super speed when driving (except Drive Around Mode).



4. **Steering Wheel**

When driving, use the Steering Wheel to turn the car.

In menu screens or games, turn the Steering Wheel to make selections.

Press the Horn to confirm your choices.



5. **Horn**

When driving, press the Horn to make honking sounds.

In menu screens or games, press the Horn to confirm choices.



6. Turn Signal Indicator

Slide the Indicator up to turn on the Right Turn Signal Light.

Slide the Indicator down to turn on the Left Turn Signal Light.

Move the Indicator to the middle to turn off the Turn Signal Lights.



7. Mode Selector

Slide the Mode Selector to choose from three activities: Pretend Play, Drive Around or Racing mode.



8. Wiper Button

Press the Wiper Button to clean the windscreen.



9. Hazard Button

Press the Hazard Button to turn on the Hazard Signal Lights and pull the car over to the side.



10. A/C Button

In Pretend Play and Drive Around Mode, press the A/C Button to adjust the temperature.

11. Dashboard Buttons



Call

In Pretend Play Mode press Call to hear phone calls from friends.

In Drive Around Mode press Call to go on errands for friends.



GPS

In Pretend Play Mode, press GPS to select a location.

In Drive Around Mode, press GPS to select a location and follow the directions to your destination.



Auto Pilot

In Drive Around Mode, press Auto Pilot to drive to your chosen location automatically.



Horn Selector

Press the Horn Selector to choose a horn sound.



Radio

Press the Radio Button to hear traffic, weather and music.

Press the Radio Button again to turn off the music.



Volume Control

Use the Volume Control to adjust the sound level.



Exit

In Drive Around Mode, press Exit to leave Learning Games and return to driving.

In Racing Mode, press Exit to leave the race and return to the race selection menu.



Help

Press the Help Button to hear hints and instructions.



Progress

In the Drive Around Mode, press the Progress Button to check your game progress.

In the Racing Mode, press it to view earned trophies and collectibles.

Battery Status

When the batteries are almost depleted, a low battery icon will flash a few times on the LCD Screen. Then, the unit will automatically power off.

New batteries should be inserted before further use.

Automatic Shut-Off

To preserve battery life, the unit will automatically power down after approximately three minutes without input.

ACTIVITIES



1. Pretend Play Mode

In pretend play mode, children focus on manipulative play by turning the Steering Wheel, honking the Horn, using the Turn Signal Indicator and exploring Dashboard Buttons.



2. **Drive Around Mode**

Receive fun missions as you explore the city, country and town. Learn about car parts, maintenance and repair while running errands and helping friends.



Mini Games in Drive Around Mode

For fun mini games, drive to the:

Petrol Station, Farmers Market, Service Station or Wildlife Park.

Petrol Station

Fill 'er up! Do you have a flat tyre?

Low on fuel? Count the missing bars to learn how much fuel or air is needed.

Curriculum: Numbers, Counting, Simple Addition & Subtraction



Farmers Market

Drop by the Farmers Market and help the farmer identify colours, sizes, and letters as you shop for a friend.

Curriculum: Colours, Size Comparison, Beginning Letters, Vocabulary



Service Station

Time for a tune up? Our friendly mechanic will explain the problem while you find the missing part.

Curriculum: Problem Solving



Wildlife Park

Visit the Wildlife Park to look for animals and take their pictures.

Curriculum: Animals (names, sounds, features)

 


Friend Missions





Press the Call Button to talk with friends, run errands, give rides and meet for fun outings.

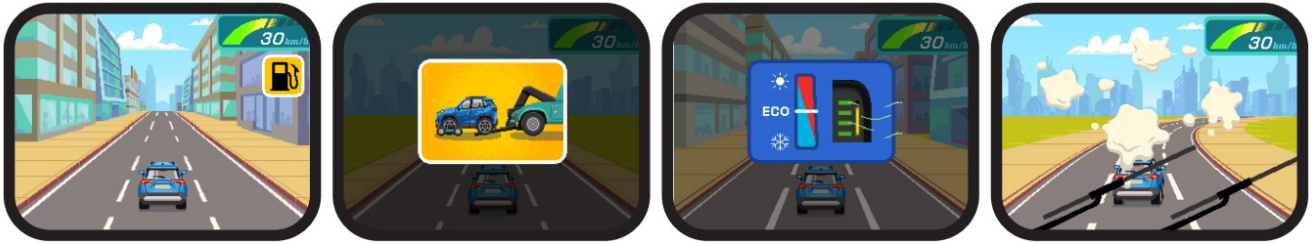Driving Events



The Car System will guide young drivers through a variety of Driving Events from basic AC adjustment and windscreen cleaning to low tyres and mechanical issues. Follow voice prompts or GPS directions to resolve the issues.

Game Progress – Scoring Guide

 <p>Avoid hitting other cars. Reduce speed in the city.</p>	
 <p>Give rides to your friends and help them with errands to get likes.</p>	
 <p>Play learning games and level up to earn points.</p>	

3. **Racing Mode**

Participate in 9 unique races that include 3 track styles with 3 levels on each track. Each track begins with Level 1. Win races to level up and unlock new track levels.



Win races to earn trophies and unlock collectibles.



RESET INSTRUCTIONS

To erase game save data, follow the steps below:

Move the selector to Racing Mode. In the race selection menu, press the following buttons in this order:

Call – Auto Pilot – Exit – A/C – Wiper – Exit.

When the sequence is entered correctly, a horn sound will play and the unit will restart.

NOTE: This will erase all progress records, trophies and collectibles from the game file.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the product out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the product on a hard surface and do not expose the product to excess moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions while playing with the accessories, please remove the accessories and place them back onto the unicorn.

If the unit still isn't functioning, or if for some reason the unit stops working, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/ or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk

www.vtech.com.au




TM & © 2023 VTech Holdings Limited.

All rights reserved.

IM-558900-003

Version:0

Documents / Resources

	<p>vtech 558936 Race and Learn Driver [pdf] Instruction Manual 558936, 558936 Race and Learn Driver, Race and Learn Driver, Learn Driver, Driver</p>
---	--

References

- [📍 Support : VTech Electronics](#)
- [📍 Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [📍 VTech Toys Australia - Electronic Learning Toys - Best Learning Toys - VTech Australia and New Zealand](#)

- [!\[\]\(7e19807c61da14f515588e95cd49886c_img.jpg\) **Electronic Learning Toys | Best Learning Toys | VTech UK**](#)
- [!\[\]\(8ff9e60a4b0560d7ec99179ef4779d9e_img.jpg\) **Electronic Learning Toys | Best Learning Toys | VTech UK**](#)
- [!\[\]\(ab9b69bf5753a01c76b30af859454360_img.jpg\) **Electronic Learning Toys | Best Learning Toys | VTech UK**](#)
- [!\[\]\(c5af66b13c724ca428497900cdbbc9b3_img.jpg\) **VTech Toys Australia - Electronic Learning Toys - Best Learning Toys - VTech Australia and New Zealand**](#)

Manuals+.