


vtech 5599 Sky Elevator Set Instruction Manual

Home » vtech » vtech 5599 Sky Elevator Set Instruction Manual





Marble Rush® Sky Elevator Set™

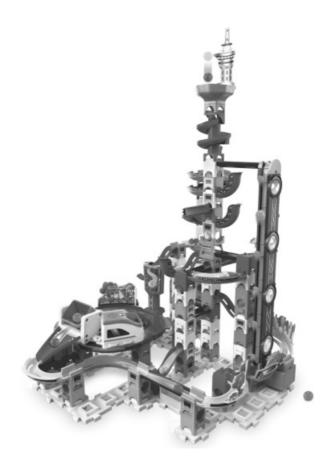

Contents


- 1 INTRODUCTION
- **2 INCLUDED IN THE**

PACKAGE

- **3 LABEL APPLICATION**
- **4 Assembly Instructions**
- **5 Product Features**
- **6 CARE & MAINTENANCE**
- 7 Documents / Resources
 - 7.1 References

INTRODUCTION

Thanks you for purchasing Marble Rush® Sky Elevator Set™
Get ready for a rush of non-stop action! Build thrilling courses and send the marbles into motion. Please refer to the Color Manual for detailed building steps.

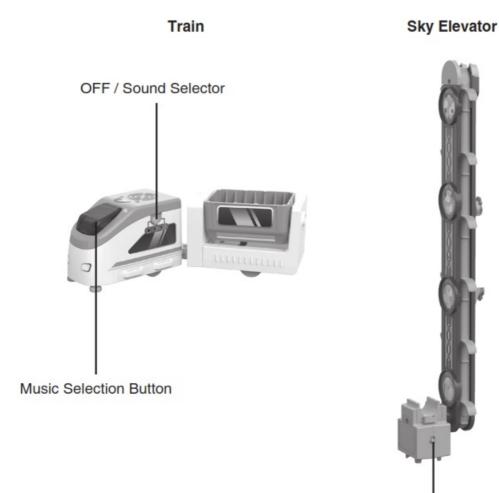

INCLUDED IN THE PACKAGE

- Marble Rush® Sky Elevator Set™
- 143 Build Components
- manual
- 10 Marbles
- · Color Manual
- · Sticker Sheet

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

ON / OFF Selector

NOTE

Please save this Instruction Manual as it contains important information.

WARNING

Do not aim at eyes or face.

WARNING

Do not discharge any object other than the projectile provided with this toy.




CHOKING HAZARD -Toy contains small parts and small balls.

Not for children under 3yrs.


Battery Removal and Installation — Sky Elevator

- 1. Make sure the unit is turned Off.
- 2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.
- 4. Install 3 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
- 5. Replace the battery cover and tighten the screw to secure.

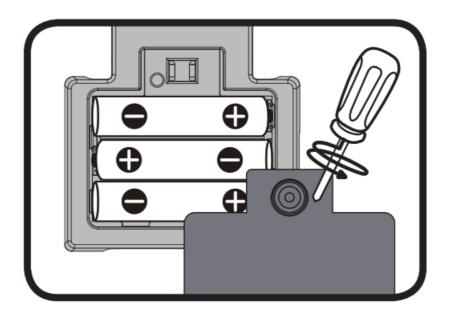

Battery Removal and Installation — Train

- 1. Make sure the unit is turned Off.
- 2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.
- 4. Install 3 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
- 5. Replace the battery cover and tighten the screw to secure.

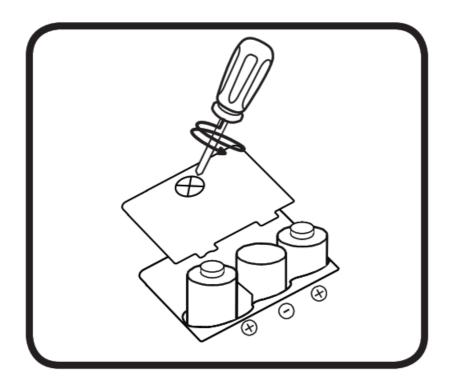




Adult assembly required for battery installation.

Keep batteries out of reach of children.

NOTE

Keep your body, hair and clothing away from the moving train. If something gets caught in the train's wheel, turn the train OFF by sliding the OFF / Sound Selector to the OFF position.

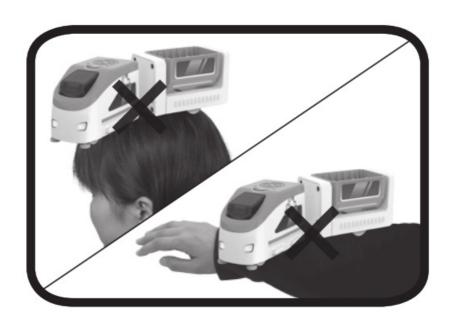

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.


- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

LABEL APPLICATION


Please securely stick the labels to the playset as indicated below:

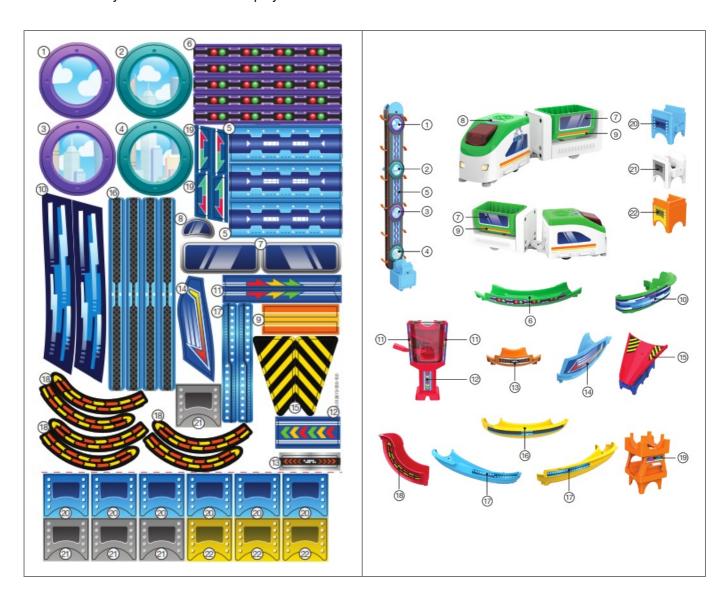

Assembly Instructions

To ensure your child's safety, have only an adult assemble these pieces.

1. Connect the conveyor belt to the motor unit.

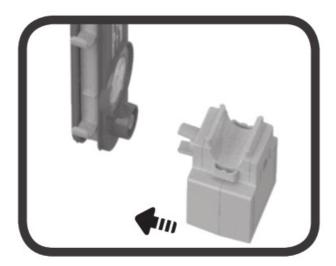

2. Hook the locomotive to the train car.



Product Features

Slide the selector all the way to the right to turn on both music and sound effects (SFX). The middle position position plays SFX with no background music. Slide the selector all the way to the left train.



2. Music Selection Button

Press the Music Selection button to cycle through an assortment of background music.



Automatic Shut-Off

To preserve battery life, the Marble Rush Sky Elevator Set will automatically power own after several minutes without input. The unit can be turned on again by sliding the OFF / Sound Selector to the middle or right most position. The unit will automatically turn off when the batteries are very low.



CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries if the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
- 5. If the unit stops working or malfunctions, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S., 1-877-352-8697 in Canada, or by going to our website vtechkids.com and filling out our Contact Us form located under the Customer Support link. Creating and developing Vetch products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name:	Vetch®
Model:	5599
Product Name:	Marble Rush® Sky Elevator Set™
Responsible Party:	Vetch Electronics North America, L.L.C.
Address:	1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- 1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- 2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.



Visit our website for more information about our products, downloads, resources and more.

vtechkids.com vtechkids.ca

Read our complete warranty policy online at vtechkids.com/warranty

vtechkids.ca/warranty

TM & © 2023 VTech Holdings Limited.
All rights reserved.

IM-559900-000 Version:0

Documents / Resources



vtech 5599 Sky Elevator Set [pdf] Instruction Manual 5599, 5599 Sky Elevator Set, Sky Elevator Set, Elevator Set, Set

References

- VTech Canada | Official Electronic Learning Toys & Games for Kids
- VTech Canada | Official Electronic Learning Toys & Games for Kids
- W Best Kids Tech Toys | Electronic Learning Toys | VTech America
- M Best Kids Tech Toys | Electronic Learning Toys | VTech America

Manuals+,