



## vtech 5618 Time to Get Tiny Watch Instruction Manual

[Home](#) » [vtech](#) » vtech 5618 Time to Get Tiny Watch Instruction Manual 

### Contents

- 1 VTech 5618 Time to Get Tiny Watch
- 2 Product Usage Instructions
- 3 Frequently Asked Questions
- 4 INTRODUCTION
- 5 INCLUDED IN THE PACKAGE
- 6 INSTRUCTIONS
- 7 BATTERY REMOVAL AND INSTALLATION
- 8 PRODUCT FEATURES
- 9 ACTIVITIES
- 10 CARE & MAINTENANCE
- 11 TROUBLESHOOTING
- 12 FCC
- 13 Declaration of Conformity
- 14 Documents / Resources
  - 14.1 References





## Product Specifications

- **Full-function** watch with four games
- **Features clock faces** with Gabby and her friends
- **Includes alarm**, timer, and stopwatch functions
- **Power Source:** CR2450 battery

## Product Usage Instructions

### Installation of Battery

**WARNING:** Adult assembly is required for battery installation. Keep batteries out of reach of children.

1. Ensure the watch cover is closed.
2. Locate the battery cover on the back of the unit and use a screwdriver to loosen the screw and open the battery cover.
3. Use the screwdriver to push the metal piece as per the diagram to remove the old CR2450 battery.
4. Refer to the diagram inside the battery box to install a new CR2450 battery, pressing it into place.
5. Replace the battery cover and tighten the screw securely.

### Powering On and Off

To activate normal play, ensure the new battery is installed correctly. The watch will beep when turned on. If the display does not activate, except for the clock display, it is recommended to install a new battery before further

use.

## **Wearing Instructions**

Ensure the watch is worn comfortably but not too tightly. Remove the watch before bedtime and if it causes discomfort. Keep the wrist and band clean and dry to prevent skin irritation.

## **Frequently Asked Questions**

### **Q: What type of battery does the Time to Get Tiny Watch use?**

**A:** The watch operates using one CR2450 battery. The included battery is for demo purposes only.

### **Q: How can I prevent skin irritation from wearing the watch?**

 
**A:** To prevent skin irritation, ensure the watch is not worn too tightly, remove it before bedtime, and keep the wrist and band clean and dry. Consult a doctor if any irritation occurs.

### **Q: What should I do if the watch display does not activate?**

**A:** If the display does not activate, except for the clock display, after installing a new battery, it is recommended to replace the battery before further use.

## **INTRODUCTION**

- Thank you for purchasing the VTech® Gabby's Dollhouse Time to Get Tiny Watch.
- This full-function watch includes four A-Meow-Zing games that help encourage age-appropriate skills.
- Choose from a variety of clock faces featuring Gabby and her friends and use the handy alarm, timer, and stopwatch functions.

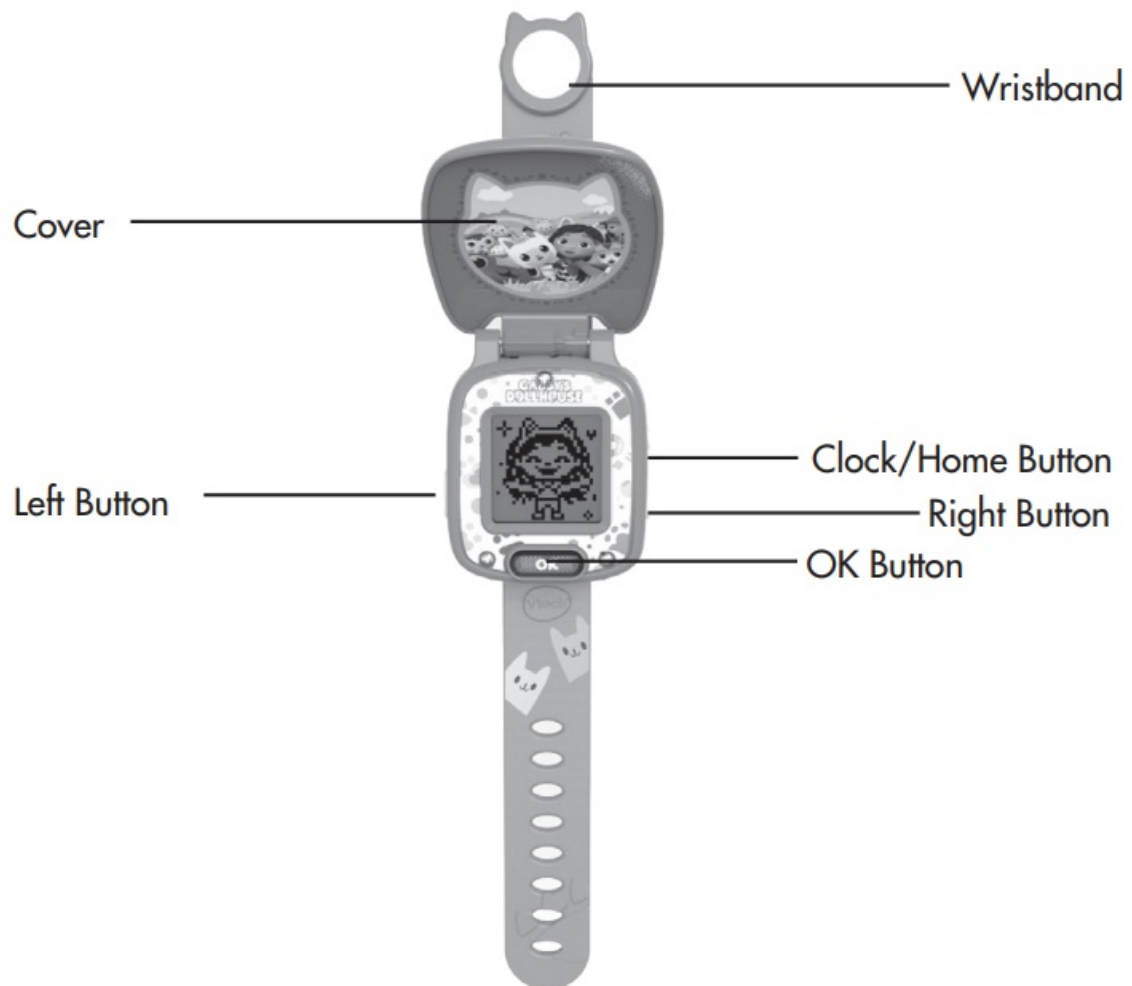

## INCLUDED IN THE PACKAGE

- One Time to Get Tiny Watch
- One CR2450 battery
- Quick Start Guide

## WARNING:

- All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords, and packaging screws are not part of this toy and should be discarded for your child's safety.

## NOTE:

- Please save this manual as it contains important information.

## Important Note

- Do not place the watch under running water.
- Do not submerge. Not suitable for showering, bathing, or swimming.
- Keep the cover closed when the watch is not in use.

## WARNING

- People with very sensitive skin may notice some irritation after wearing the Time to Get Tiny Watch for extended periods. The skin may become irritated when moisture, sweat, soap, or other irritants get trapped under the wristband and are left in contact with the skin. To prevent this, we suggest children remove the watch before going to bed for the night, take the watch off if it's feeling uncomfortable, and keep their wrist and the band clean and dry.
- In addition, wearing the watch too tightly may also irritate. Make sure the fit is tight enough so the watch stays in place but not so tight that it's uncomfortable.
- If you notice any redness, swelling, or other irritation, you may want to consult a doctor before wearing the watch again.

## INSTRUCTIONS

### WARNING:

- Adult assembly is required for battery installation.
- Keep batteries out of reach of children.

 
### Power Source

- The Time to Get Tiny Watch operates using one CR2450 battery.
- The CR2450 battery included with the product is for demo purposes only.


## BATTERY REMOVAL AND INSTALLATION

**NOTE:** For best performance, remove the factory-installed battery from the Time to Get Tiny Watch and use a new battery.

1. Make sure the watch cover is closed.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.

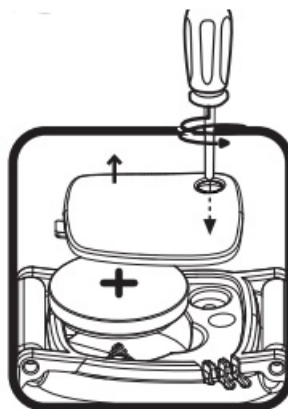

 3. Use the screwdriver to push the metal piece according to the diagram. Remove the battery when one end of the battery pops up.
4. Follow the diagram inside the battery box to install one new CR2450 battery, and press it into the battery room.
5. Replace the battery cover and tighten the screw to secure it.

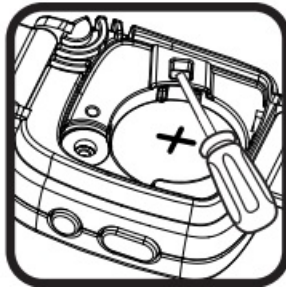**WARNING:**

- Contains a coin battery.
- A coin battery can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body.
- Individual batteries are hazardous. Dispose of used batteries immediately. Keep new and used batteries away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**Australia**

- If you think batteries might have been swallowed or placed inside any part of the body, immediately call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice.

**IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in a fire.

**RECHARGEABLE BATTERIES:**

 
- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.


**Activate Normal Play**

- When you use the watch for the first time, you must unlock it from Try-Me mode to play. To unlock from Try-Me mode, open the Cover, and press the Left + Right + OK Buttons together for approximately five seconds.
- You will then hear three beeping sounds to indicate it has been unlocked. Press any button to activate the

watch and set the time. Press the Left or Right Button to select, then press the OK Button to confirm and move to the next option.

- A tick will be displayed when the setting is complete.

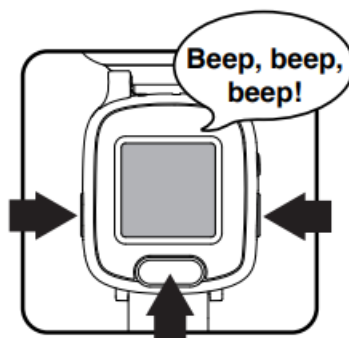

- **Note:** When the battery level is low , most functions on the watch may not be activated, except for the clock display. It is recommended to install a new battery as soon as possible before further use.
- If the battery level is too low and cannot keep the clock running, you will need to enter the time again after the battery has been replaced.

## PRODUCT FEATURES

### 1. Cover

- Open the Cover to view the time. When the Cover is closed, tap the bottom of the Cover to activate character voices and sounds along with light effects.

### 2. Left/Right Buttons

- Use the Left or Right Button to select an activity or option.

### 3. OK Button OK

- Press the OK Button to confirm a selection and move to the next move to the next activity.

### 4. Clock/Home Button






- Press the Clock/Home Button to return to the clock function from any other function or activity.
- Or press the Clock/Home Button to change the clock face directly.

### 5. Clock Display

- When the Clock/Home Button is pressed, the time will be displayed and the clock face will be changed. Press the Left or Right Button to display the Home Menu where other activities can be selected.

### 6. Home Menu

- Press the Left or Right Button to display the Home Menu. There are five activities to choose from.

1. Alarm Clock 	2. Stopwatch 	3. Timer 
4. Games 	5. Settings 	

- Press the Left or Right Button to scroll through the menu options.
- Press the OK Button to enter the chosen activity.

### 7. Alarm Clock

- Press the Left or Right Button to select the time and choose between three alarm tones.
- Press the OK Button to confirm and move to the next setting.

- Press the Clock/Home Button to automatically save the current setting.



## 8. Stopwatch



- Press the OK Button to start the Stopwatch.
- Press again to stop.
- When the Stopwatch is stopped, you can press the Left or Right Button to reset.



## 9. Timer



- Press the Left or Right Button to set the time.
- Press the OK Button to confirm the Timer duration and the countdown will start immediately.
- While the Timer is running, press the OK Button to pause/resume.



- While the Timer is paused, press the Left or Right Button to reset the time.
- Press the Clock/Home Button to automatically save the current setting.

 
## 10. Settings



- In the Settings menu, press the Left or Right Button to scroll through the various options:
- Cuckoo Clock
- Press the Left or Right Button to turn the Cuckoo Clock On or Off.
- Press the OK Button or Clock/Home Button to confirm and save the setting.
- Please note that when the Cuckoo Clock is activated, the watch will chime at the top of each hour between 7 am and 7 pm, unless a game is currently in progress.
- **Setting the Time and Clock Face**
- Press the Left or Right Button to change the options. (The AM/PM setting is only applicable in 12-hour time format)




- Press the OK Button or Clock/Home Button to confirm and save the setting.
- After the time is set, the clock face options will be shown.
- Press the Left or Right Button to select from 10 different clock faces.
- Press the OK Button or Clock/Home Button to confirm and save the setting.

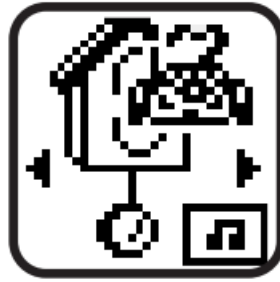

## 11. Automatic Shut-Off

 - To preserve battery life, the Watch will automatically shut Off after approximately 30 seconds without input. The unit can be turned On again by pressing any button or opening the Cover.
- **Note:** The Watch will not automatically power Off when the Stopwatch is running.
- The unit will also automatically turn Off when the battery power is very low. If you see the Low Battery icon appear on the screen, please replace the battery.

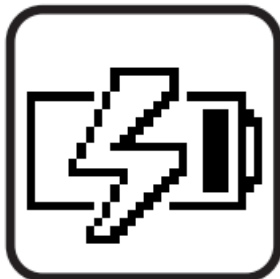


## ACTIVITIES

### 1. Games

- In the Games Menu, press the Left or Right Button to scroll through the different game options:
- **Paw-Print Mystery**

 - Let's guess who slipped out of the Dollhouse by looking at the paw-prints. Press the Left or Right Button to choose, then press the OK Button to confirm.
- **Avoid the Obstacles**
- Carlita loves to race in the playroom! Press the Left or Right Button to help her avoid the obstacles.

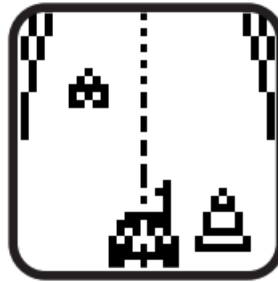


### Shape Bubbles

- Kitty Fairy got stuck in a bubble! Press the Left or Right Button to help Gabby jump onto the correct bubbles so that she can get up to help Kitty Fairy get down.

### More or Less

 - Let's help Gabby and Pandy Paws get the growing potion by comparing the objects and numbers. Press the Left or Right Button to choose, then press the OK Button to confirm.

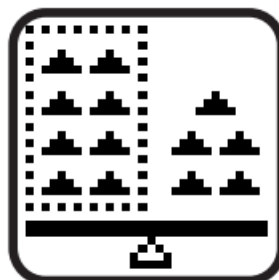

### CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.

3. Remove the batteries if the unit will not be in use for an extended time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps.

1. Interrupt the power supply by removing the battery.
2. Let the unit stand for a few minutes, then replace the battery.
3. The unit should now be ready to use again.
4. If the unit still does not work, install a new battery.

## IMPORTANT NOTE:

- If the problem persists, please contact our Consumer Services Department at 1- [800-521-2010](tel:8005212010) in the U.S., 1- [877-352-8697](tel:8773528697) in Canada, or by going to our website [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link.
- Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur.
- You need to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## FCC

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE,
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**CAUTION** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE** This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from
- that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Declaration of Conformity



### Supplier's Declaration of Conformity

- 47 CFR § 2.1077 Compliance Information
- **Trade Name:** VTech®
- **Model:** 5618
- **Product Name:** Time to Get Tiny Watch
- **Responsible Party:** VTech Electronics North America, LLC
- **Address:** 1156 W. Shure Drive, Suite 200
- **Arlington Heights,** IL 60004
- **Website:** [vtechkids.com](https://vtechkids.com)
- CAN ICES-003(B)/NMB-003(B)
- Visit our website for more information about our products, downloads, resources, and more.
- [vtechkids.com](https://vtechkids.com)
- [vtechkids.ca](https://vtechkids.ca)
- Read our complete warranty policy online at [vtechkids.com/warranty](https://vtechkids.com/warranty)
- [vtechkids.ca/warranty](https://vtechkids.ca/warranty)
- **TM & © 2023 VTech Holdings Limited.**
- **All rights reserved.**
- **IM-561860-001**
- **Version:0**

### Documents / Resources

	<p><a href="#">vtech 5618 Time to Get Tiny Watch</a> [pdf] Instruction Manual</p> <p>5618 Time to Get Tiny Watch, 5618, Time to Get Tiny Watch, Get Tiny Watch, Tiny Watch</p>
---	--

### References

-  [vtechkids.com](https://vtechkids.com)
-  [vtechkids.com/warranty](https://vtechkids.com/warranty)
- [User Manual](#)

#### Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.