



Vtech 574100
Music Activity
Cube



Vtech 574100 Music Activity Cube Instruction Manual

[Home](#) » [vtech](#) » Vtech 574100 Music Activity Cube Instruction Manual 

Contents

- 1 Vtech 574100 Music Activity Cube
- 2 Product Information
- 3 Product Usage Instructions
- 4 Getting Started
 - 4.1 INTRODUCTION
 - 4.2 INCLUDED IN THE PACKAGE
 - 4.3 GETTING STARTED
 - 4.4 PRODUCT FEATURES
 - 4.5 CARE & MAINTENANCE
 - 4.6 TROUBLESHOOTING
 - 4.7 TM & © 2024 Tech Holdings Limited.
- 5 Documents / Resources
 - 5.1 References
- 6 Related Posts



Vtech 574100 Music Activity Cube



Specifications

- Product Name: Busy Learners Music Activity Cube
- Power Source: 2 AAA (AM-4/LR03) batteries
- Recommended Battery Type: Alkaline or Ni-MH rechargeable batteries

Product Information

The Busy Learners Music Activity Cube™ is a musical toy designed to engage young children in interactive play. It features four sides with various musical instruments and animal buttons that produce sounds and melodies when pressed. The cube offers multiple modes for musical exploration and learning.

Product Usage Instructions

Getting Started

1. Ensure the unit is turned Off.
2. Use a screwdriver to loosen the screw on the battery cover located on the back of the unit.
3. Open the battery cover and remove the old batteries.
4. Install 2 new AAA batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw.

Features Overview

1. **On/Off/Volume Selector:** Slide the switch to turn the unit On or Off and adjust volume levels.
2. **Music/Animal/Play Mode Switch:** Select different modes to hear phrases, melodies, and songs.
3. **Automatic Shut-Off:** The cube will power down after 50 seconds of inactivity to save battery life.

Activities

1. **Four Light-Up Animal Buttons:** Press these buttons for instrument names, melodies, and more in different modes.
2. **Squeaking Fox:** Press to hear fun squeaking sounds.
3. **Twisting Lion:** Twist the lion head to hear clicking sounds.

Melodies and Song Lyrics

The cube includes various melodies and song lyrics that can be enjoyed by interacting with different features. Explore the musical world with this interactive toy!

Frequently Asked Questions (FAQ)

- **Q: How do I know when the batteries need to be replaced?**

A: If the unit powers down or if the light fades out during play, it's time to install a new set of batteries.

- **Q: Can I use rechargeable batteries with the Busy Learners Music Activity Cube™?**

A: Yes, you can use fully charged Ni-MH rechargeable batteries for optimal performance.

- **Q: What is the purpose of the Automatic Shut-Off feature?**

A: The Automatic Shut-Off helps conserve battery life by powering down the cube after a period of inactivity.

Instruction Manual

 
Busy Learners Music Activity Cube™



INTRODUCTION

Thank you for purchasing the Busy Learners Music Activity Cube™ .

Playtime comes from all sides on the Busy Learners Music Activity Cube™! Get ready to jam with six animals and four instruments. Mini musicians can press any of the four sides to play musical sounds or layer them on top of each other to create their own mixes. Let's boogie!

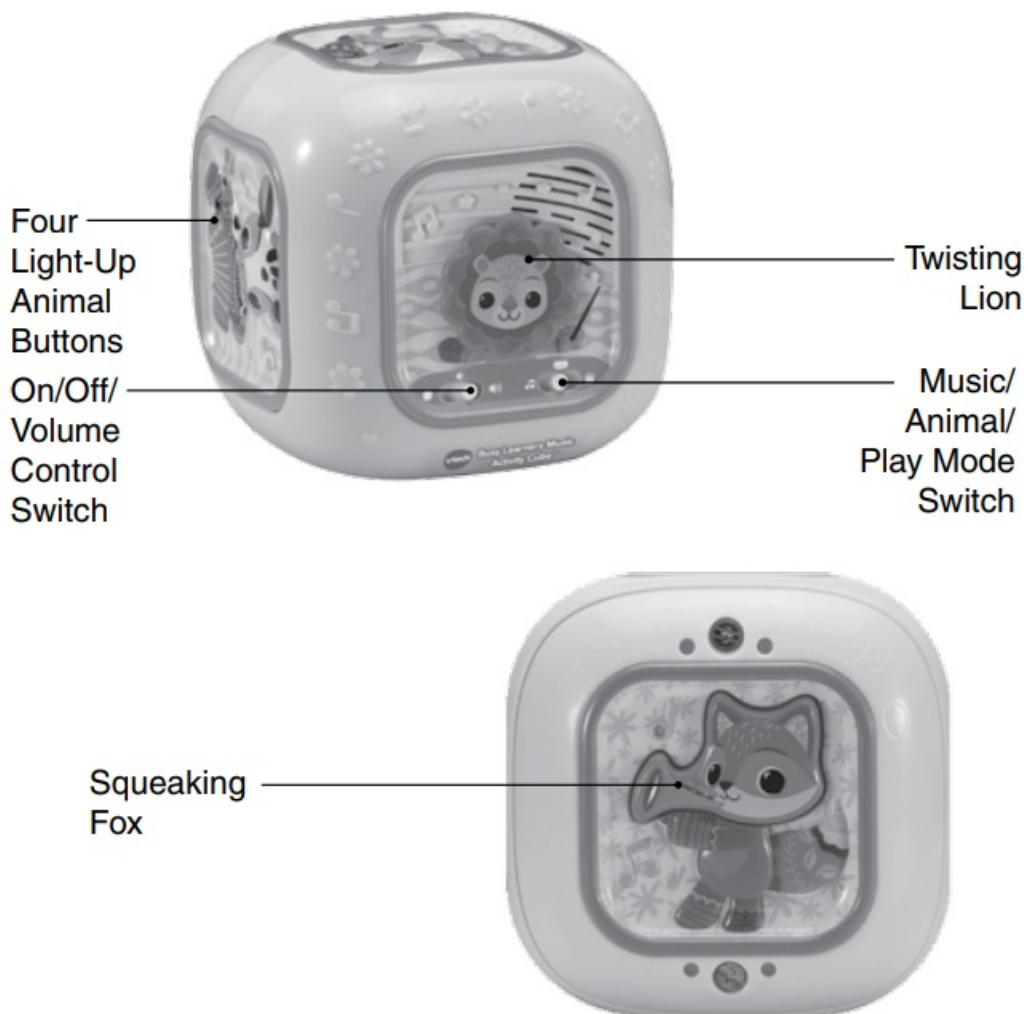


INCLUDED IN THE PACKAGE

- Busy Learners Music Activity Cube™
- Quick Start Guide

WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE : Please save this Instruction Manual as it contains important information.

 
Remove the packaging strips: Please remove the battery door, then pull out the paper rope.

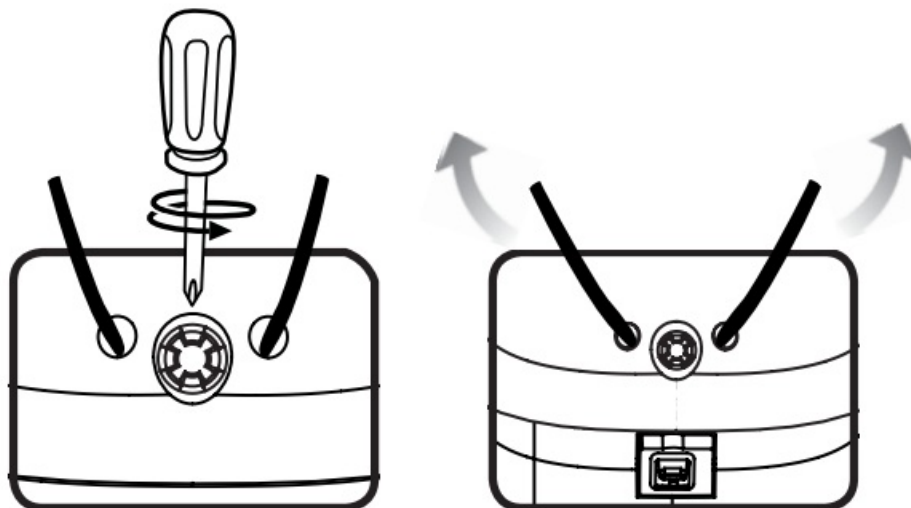

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove the old battery by pulling up on one end of the battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

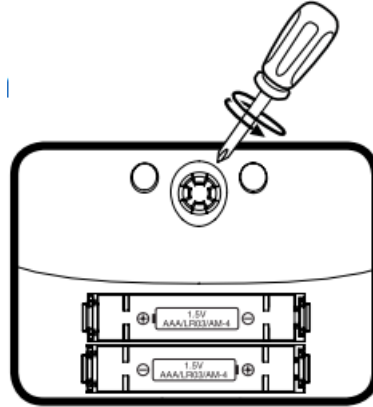

WARNING: Adult assembly required for battery installation. Keep batteries out of reach of children.


IMPORTANT: BATTERY INFORMATION

 
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. On/Off/Volume Selector To turn the unit On, slide the On/ Off/Volume Control Switch to the Low Volume or High Volume  position. You will hear fun sounds, a melody, phrases or a song in the selected mode. To turn the unit Off, slide the On/Off/Volume Control Switch to the OFF position.

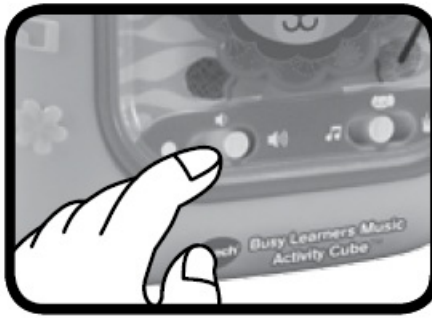

2. **Music/Animal/Play Mode Switch** Slide the Music/Animal/Play Mode Switch to Music mode to hear a phrase and a melody. Slide to Animal mode to hear phrases and a song, or to Play mode to hear a song, and a short tune.



3. **Automatic Shut-Off** To preserve battery life, the Busy Learners Music Activity Cube™ will automatically power down after approximately 50 seconds without input. The unit can be turned on again by triggering any of the electronic functions.

NOTE

 
If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. **Four Light-Up Animal Buttons**

Press the Animal Buttons to introduce instrument names and hear melodies in Music Mode. Hear animal sounds, names and sing-along songs in Animal Mode. To build a beat, play sounds, or hear the whole band for musical exploration switch to Play Mode. The lights will flash with the sound.

2.

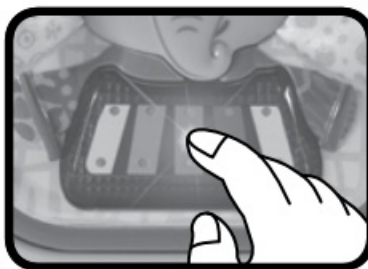


Squeaking Fox Press the squeaking fox to hear fun squeaking sounds.

3.



Twisting Lion

 Twist the lion head left and right to hear a clicking sound.

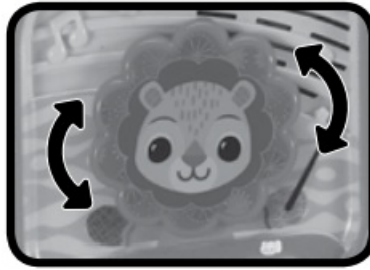

MELODIES

1. Swan Lake Waltz – Tchaikovsky
2. Air Bach
3. Autumn Mvt 2 Adagio Capitalize molto – Vivaldi
4. Cello Suite No.1 in G – Bach
5. Für Elise – Beethoven
6. Spring Mvt 1 Allegro – Vivaldi
7. Rondo a Capriccio – Beethoven
8. Piano Sonata in C, K545 1st Movement – Mozart
9. Hello, Friend!
10. 10. It's All About Friendship
11. Cheerful Moments
12. Dance Time
13. Incy Wincy Spider
14. Mary Had a Little Lamb
15. Skip to My Lou
16. Three Little Kittens

SONG LYRICS

1. Song 1

Let's tap, Let's bang, shake and squeeze, Follow the tunes to play and sing!

2. Song 2

I'm a cute cow, squeezing my accordion makes me sing moooooo.

3. Song 3

I'm an elephant with soft ears, I love tapping my xylophone for loud cheers.

4. Song 4

I'm a cool cat, I love banging my drum.

5. Song 5

I'm a pupp, I love to shake, shake, shake with my maracas!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.

3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®

Model: 5741

Product Name: Busy Learners Music Activity Cube T™

Responsible Party: VTech Electronics North America, L.L.C

Address: 1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004

Website: techkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATIONI

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at

vtechkids.com/warranty
vtechkids.ca/warranty


TM & © 2024 Tech Holdings Limited.

All rights reserved

IM-574100-000

Version:0

Documents / Resources

	<p>Vtech 574100 Music Activity Cube [pdf] Instruction Manual</p> <p>574100, 574100 Music Activity Cube, 574100, Music Activity Cube, Activity Cube, Cube</p>
--	--

References

- vtechkids.com
- vtechkids.com/warranty
- [User Manual](#)

[Manuals±](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.