



Contents [[hide](#)]

- [1 VTech 579003-53 Activity Table](#)
- [2 INTRODUCTION](#)
- [3 INCLUDED IN THE PACKAGE](#)
- [4 GETTING STARTED](#)
- [5 IMPORTANT BATTERY INFORMATION](#)
- [6 ASSEMBLY INSTRUCTIONS](#)
- [7 LABEL APPLICATION](#)
- [8 PRODUCT FEATURES](#)
- [9 ACTIVITIES](#)
- [10 MELODIES](#)
- [11 SONG LYRICS](#)
- [12 CARE & MAINTENANCE](#)
- [13 TROUBLESHOOTING](#)
- [14 CONSUMER SERVICES](#)
- [15 PRODUCT WARRANTY](#)
- [16 Documents / Resources](#)
 - [16.1 References](#)




VTech 579003-53 Activity Table



INTRODUCTION

 - Thank you for purchasing the VTech® Busy Bee Activity Table!
- The Busy Bee Activity Table features seven engaging play zones designed to stimulate visual and tactile development while enhancing playtime fun.
- Pressing the buttons and flipping the pages of the animal-themed book reveal delightful phrases, cheerful songs, and exciting sound effects to captivate young learners.

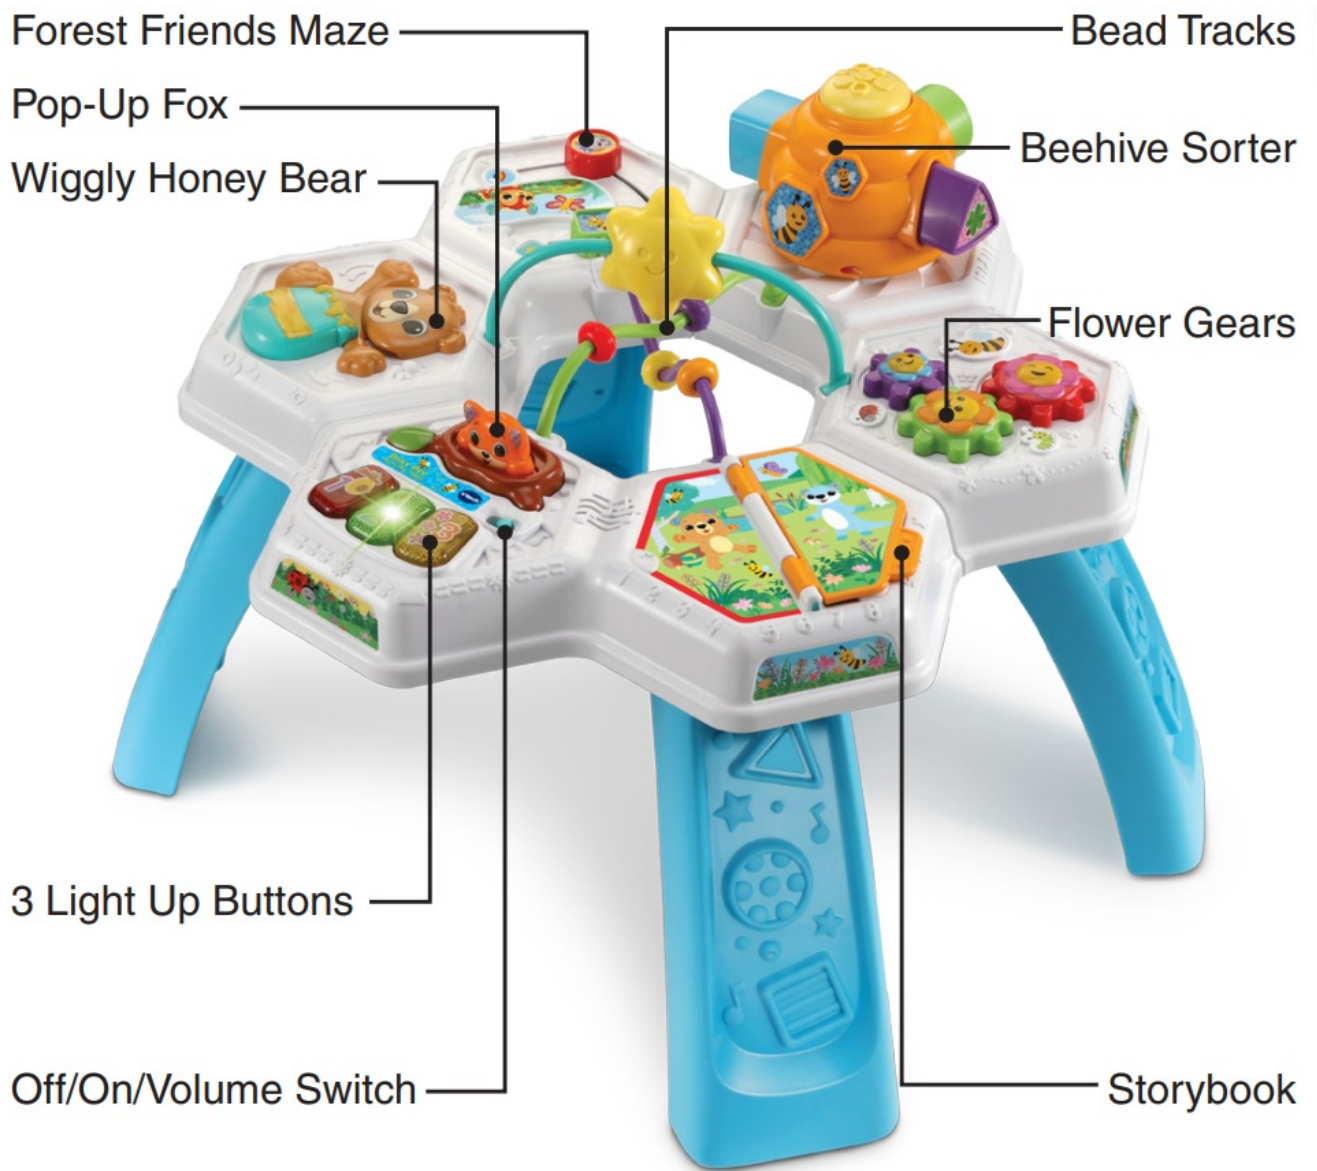

INCLUDED IN THE PACKAGE

- Busy Bee Activity Table
- Quick Start Guide



3 Panels



1 Panel Base



4 Table Legs



 
3 Gear Flowers



3 Blocks




1 Beehive

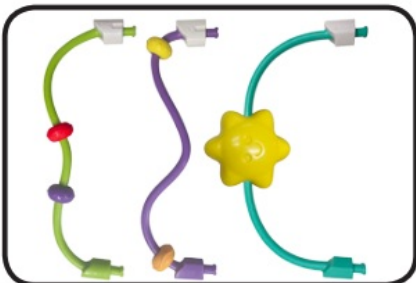

3 Bead Tracks



 1 Label Sheet

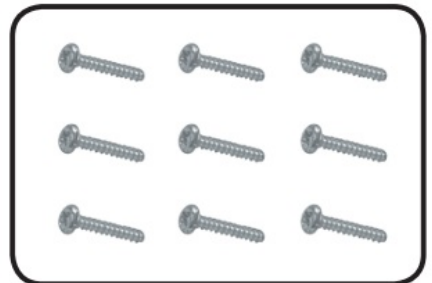


9 Screws


- **WARNING:** All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.
- **NOTE:** Please keep this Instruction Manual as it contains important information.

Unlock the Packaging Locks

(The packaging locks are not included in a sealed box.)

 1. Turn the packing locks anticlockwise several times.
2. Pull out and discard the packaging locks.

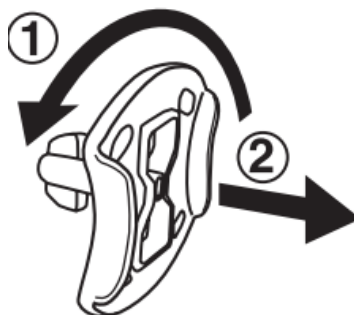


-  **CAUTION:** Adult assembly required.
- This package contains small parts.
- For your child's safety, do not let your child play with the toy until it is fully assembled.

GETTING STARTED

- **WARNING:** Adult assembly required for battery installation. Keep batteries out of reach of children.

Battery Removal and Installation

 1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM/3-3/LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

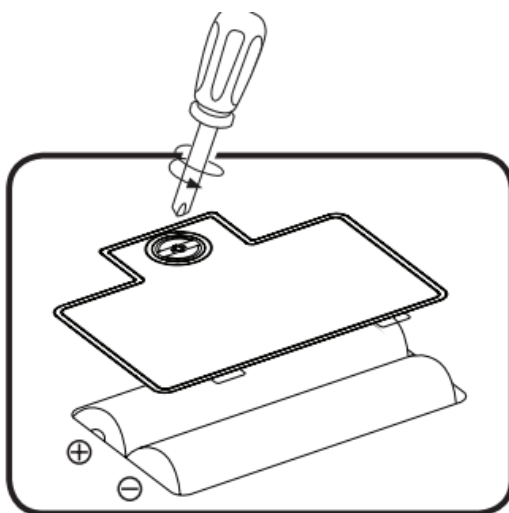

IMPORTANT BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.

- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in a fire.

RECHARGEABLE BATTERIES


- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and products



- The crossed-out wheellie bin symbols on products and batteries, or their respective packaging, indicate they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.
- The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



-  The solid bar indicates that the product was placed on the market after 13th August, 2005.
- Please dispose of your product and batteries responsibly.
- In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled. Learn more at: www.vtech.co.uk/recycle
- www.vtech.com.au/sustainability

ASSEMBLY INSTRUCTIONS

With the Busy Bee Activity Table, safety comes first. To ensure your child's safety, adult supervision is required. For your child's safety, do not let your child play with the toy until it is fully assembled.

1. Installing the Panels

- Combine the 3 panels in order according to the numbers marked on the back, and fasten them with nine screws.



2. Installing the Beehive

- Align the top of the beehive to the beehive base and press down to make sure it inserts properly.

3. Installing the Flowers

- Insert the 3 gear flowers according to the size of the holes in the panel.

4. Installing the Bead Tracks

- Align the two ends of the three bead tracks with their corresponding holes on the panels and insert them securely.

 


 
 
5. Installing the Table Legs

- Attach the table legs by inserting them into the sockets located at the bottom of each panel.

6. Removing the Table Legs


- To disassemble the table legs, please flip the table over, press up on the designated area and gently pull out the table legs from the back of each panel.

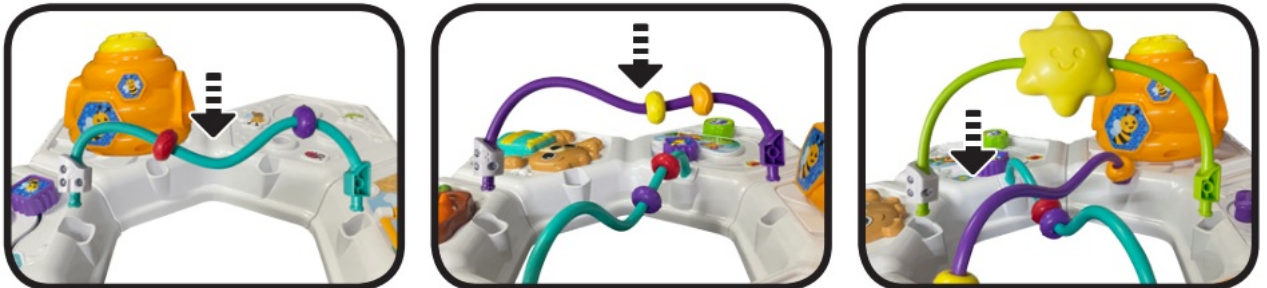

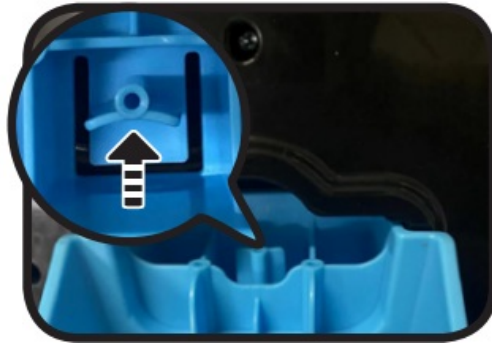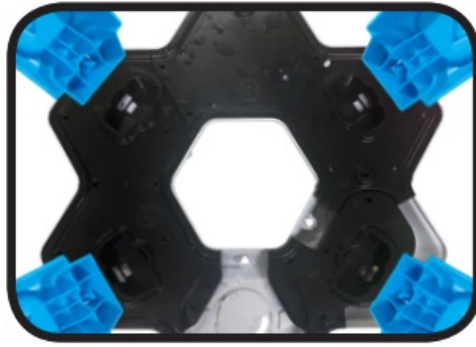




LABEL APPLICATION

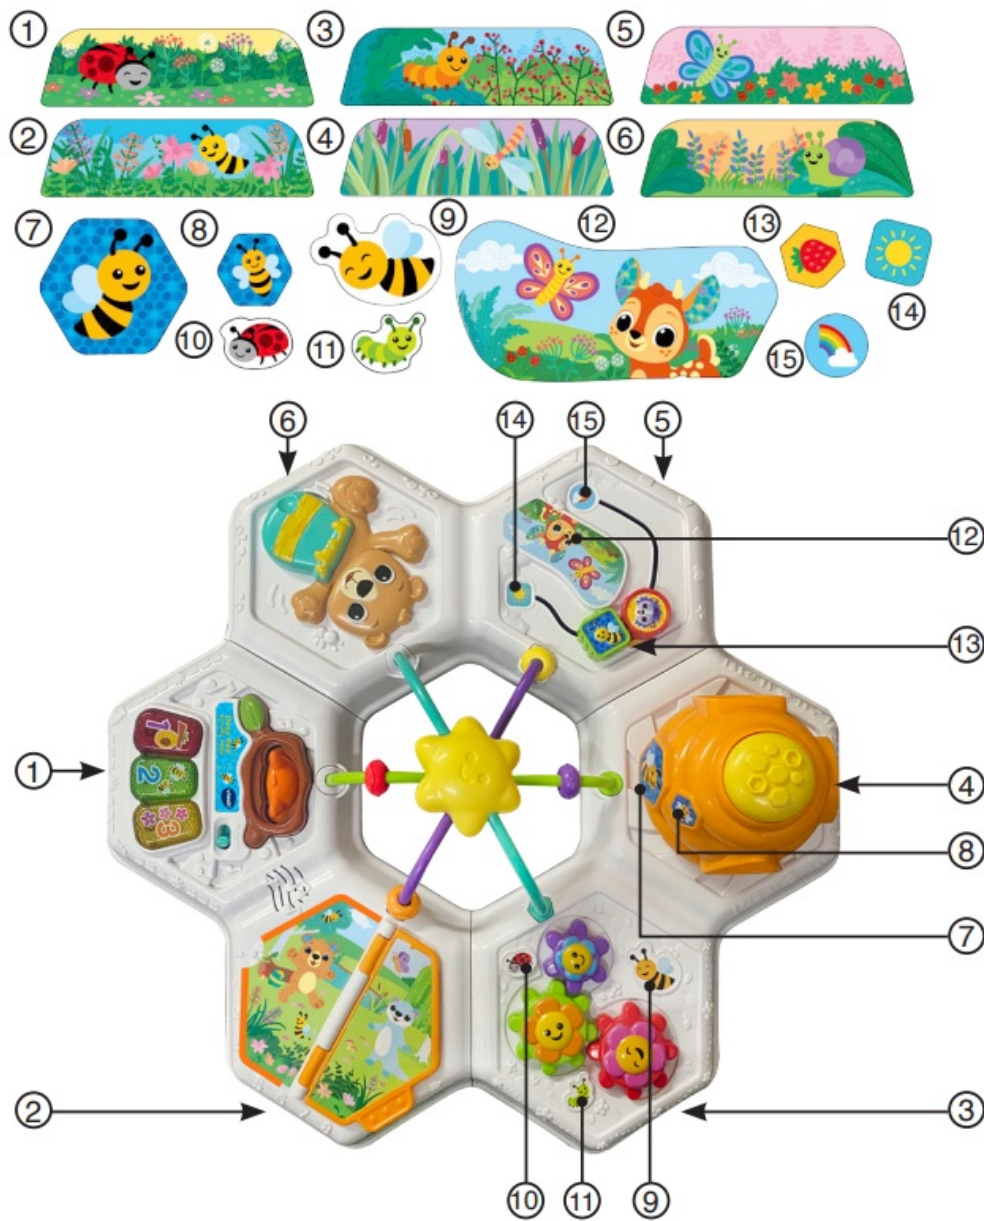 
Please securely stick the labels to the table as indicated below:



PRODUCT FEATURES

1. On/Off/Volume Switch

 - To turn the unit on, slide the Off/On/Volume Switch to the Low volume  or the High volume position .
- You will hear fun sounds, a phrase and a song. To turn the unit Off, slide the On/Off/Volume Switch to the Off position .

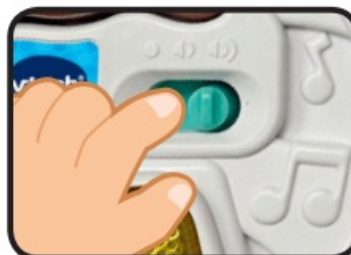

2. Automatic Shut-Off

- To conserve battery life, the Busy Bee Activity Table will automatically power

down after a period of inactivity. To reactivate, simply press any button or turn the storybook.

- **NOTE:** If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Light Up Buttons

- Press the Light Up Buttons to see a fox pop-up, hear sounds, melodies, sing-along songs and fun phrases.

2. Storybook

- Turn the page of the Storybook to hear short tunes, animal sounds and phrases.



3. Flower Gears

- Turn and see all the Flower Gears spin.

4. Beehive Sorter

- Sort the blocks into the Beehive Sorter, then pop them out.

5. Forest Friends Maze

- Slide the Forest Friends back and forth.

6. Wiggly Honey Bear

- Wiggle the honeypot to make Bear dance.

7. Bead Tracks

- Slide the beads on the Bead Tracks from one side to the other.



MELODIES

1. A-Tisket A-Tasket
2. Bingo
3. Diddle, Diddle Dumpling
4. Do You Know the Muffin Man?
5. Hickory Dickory Dock
6. Incy Wincy Spider
7. London Bridge
8. Looby Loo
9. Oh, Where, O,h Where Has My Little Dog Gone

10. One, Two, Buckle My Shoe
11. Skip to my Lou
12. Frère Jacques
13. Good Morning, Merry Sunshine
14. Humpty Dumpty
15. Ten In The Bed

SONG LYRICS

1. Song 1

- Bees and foxes, bears and deer,
- Otters, too, all gather near,
- In the woods, they play and cheer,
- Friends both far and near.

2. Song 2

- Follow the bee, let's go to the forest.
- So many animal friends, I can't wait to meet!

3. Song 3

- In the forest, come explore, explore.
- Find new wonders, so much more, much more.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period.
4. Do not drop the unit on hard surfaces, and do not expose the unit to moisture or water.

TROUBLESHOOTING

If, for some reason, the unit stops working or malfunctions, please follow these steps:

1. Turn the unit off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.

4. Turn the unit on. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

- Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors can sometimes occur.
- You need to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.
- **UK Customers:**
 - **Phone:** 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
 - **Website:** www.vtech.co.uk/support
- **Australian Customers:**
 - **Phone:** 1800862155
 - **Website:** support.vtech.com.au
- **NZ Customers:**
 - **Phone:** 0800400785
 - **Website:** support.vtech.com.au

PRODUCT WARRANTY

PRODUCT WARRANTY/CONSUMER GUARANTEES

UK Customers:


- Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

- VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES
- Under the Australian Consumer Law, some consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited.
- Please refer to vtech.com.au/consumerguarantees for further information.

- Visit our website for more information about our products, downloads, resources and more: www.vtech.co.uk
- www.vtech.com.au
- © 2025 VTech.
- All rights reserved.
- IM578800000 Version:0

Documents / Resources

	vtech 579003-53 Activity Table [pdf] Instruction Manual 579003-53 Activity Table, 579003-53, Activity Table, Table
---	---

References

- [User Manual](#)

579003-53, 579003-53 Activity Table, ACTIVITY Table, table,

vtech vtech

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.