



Instruction Manual
4-in-1 Steps & Stages
Activity Center™

 
Contents [[hide](#)]

- 1 INTRODUCTION
- 2 INCLUDED IN THE PACKAGE
- 3 GETTING STARTED
- 4 ASSEMBLY INSTRUCTIONS
- 5 PRODUCT FEATURES
- 6 ACTIVITIES
- 7 MELODIES
- 8 SONG LYRICS
- 9 CARE & MAINTENANCE
- 10 TROUBLESHOOTING
- 11 Documents / Resources
 - 11.1 References

INTRODUCTION

Thank you for purchasing the 4-in-1 Steps & Stages Activity Center TM.

Travel around the 4-in-1 Steps & Stages Activity CenterTM for tons of exciting activities on four interactive panels. Move the panels into different configurations to explore and play in new ways. There is something new to discover around every corner!

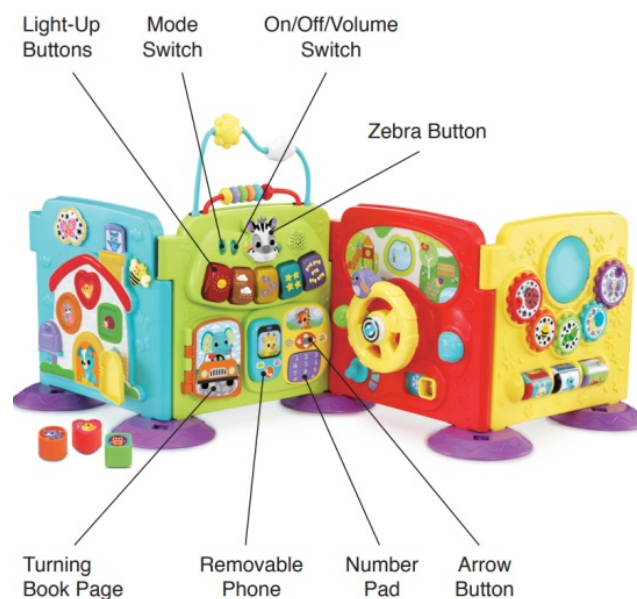

INCLUDED IN THE PACKAGE



- Assembly Guide
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
NOTE

Please save this Instruction Manual as it contains important information.

WARNING

Adult assembly required.

Unlock the Packaging Locks

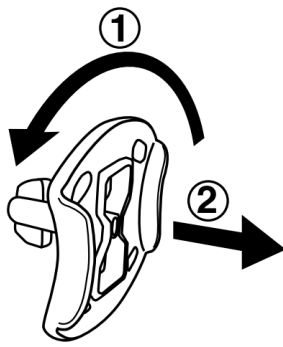


1. Rotate the packaging locks 90 degrees counterclockwise.
2. Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned Off.
2. Locate the battery cover on the back of the electronic panel, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.

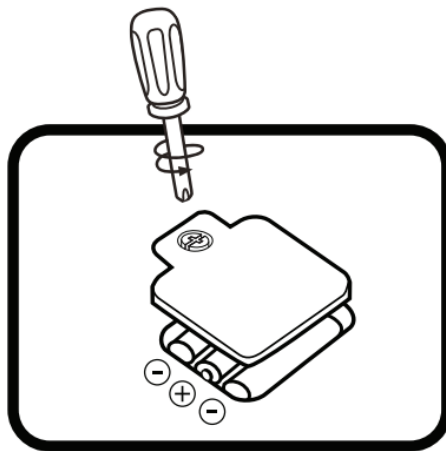

4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box.
(For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.



WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

LABEL APPLICATION

Please securely stick the labels to the panels as indicated below:



ASSEMBLY INSTRUCTIONS

With the 4-in-1 Steps & Stages Activity Center™ safety comes first. Adult assembly is required. For your child's safety, do not let them play with this toy until it is fully assembled.

1. Insert the Bead Track into the top of the Electronic Panel. Press down until you hear the Bead Track click into place.



2. Attach the Steering Wheel to the front of the Driving Panel, ensuring the bird is positioned at the top. Press firmly until you hear it snap into place.



3. Attach the Door to the front of the Shape Sorting Panel. Align the top and bottom of the hinge with the corresponding slots on the door frame, gently insert until the door is securely in place.



Configuration Assembly

 
Start by unlocking and separating all of the Activity Panels and base support pieces. Then select one of the following four ways to play:


Stand-Alone Activity Panel


You can use any of the Activity Panels alone for floor play or takealong play. Please remove the Base Supports before using the Activity Panels.



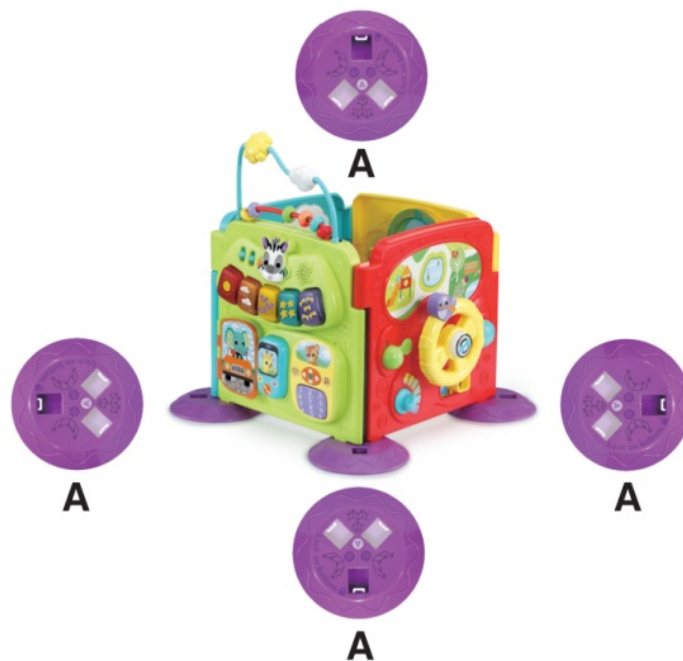

Activity Cube Mode

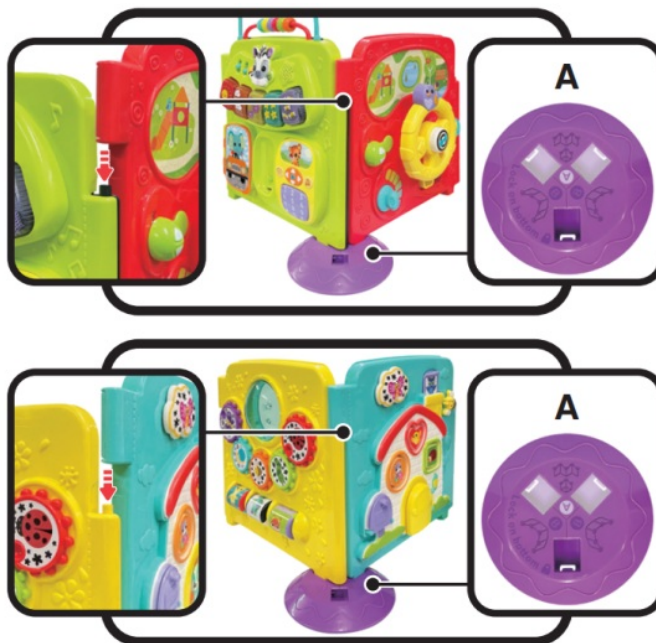 

1. Unlock the locks on the bottoms of the Base Supports and place them on a hard, flat surface. Connect any two Activity Panels together then insert them into the A slots on either side of the cube icon  on the Base Supports. Press firmly until you hear the pieces click together. Repeat the same process with the two remaining Activity Panels.



2. Connect the two sets of panels together, then insert them into the A slots on either side of the cube icon  on the Base Supports. Turn the Cube over and twist the four locks to the locked  position.




3. The extra Base Support piece can be stored behind the round transparent dome on the Gears & Rollers Panel.




Zigzag Mode



1. Unlock the locks on the bottoms of the Base Supports and place them on a hard, flat surface. Connect any two Activity Panels together then insert them into the A slots on either side of the Zigzag icon  on the Base Supports. Press firmly until you hear the pieces click together. Repeat the process with the remaining Activity Panels and Base Supports.




2. Insert the two remaining Base Supports into the B slots on either end of the activity center for stability. Turn the Zigzag over and twist the five locks to the  locked position.



Semicircle Mode



1. Unlock the locks on the bottoms of the Base Supports and place them on a hard, flat surface. Connect any two Activity Panels together then insert them into the B slots on either side of the Semicircle icon  on the Base Supports. Press firmly until you hear the pieces click together. Repeat the process with the remaining Activity Panels and Base Supports.



2. Insert the two remaining Base Supports into the B slots on either end of the activity center for stability. Turn the Semicircle over and twist the five locks to the locked position. 🔒



WARNING

This product is not intended for climbing or to assist with standing, misuse may cause the unit to tip over. Adult supervision is recommended.



PRODUCT FEATURES

 
1. On/Off/Volume Switch

To turn the unit On, slide the On/Off/ Volume Switch to the Low volume 🗣️ or High volume 🗣️ position. You will hear a playful opening response in each mode. To turn the unit Off, slide the On/Off/Volume Switch to the Off ● position.



2. Mode Switch

Slide the Mode Switch to select Explore mode 🔍, Learning mode 📖 or Music mode 🎵.

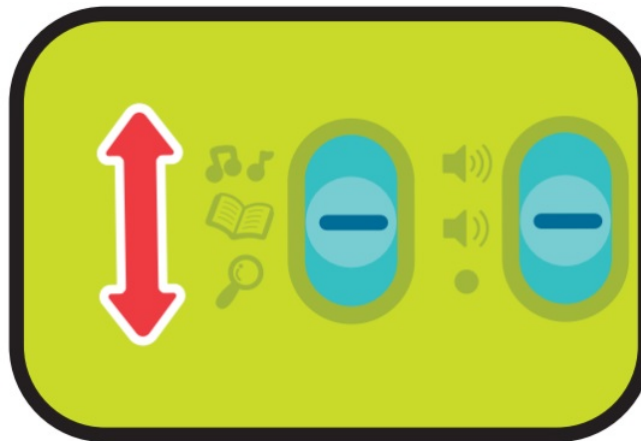

3. Automatic Shut-Off

To preserve battery life, the 4-in-1 Steps & Stages Activity Center™ will automatically power down after approximately 20 seconds without input. The unit can be turned On again by interacting with any of the features on the Electronic Panel.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Zebra Button

Press the Zebra Button to hear fun phrases, sounds, short tunes or answer simple questions, depending on the selected mode. The lights will flash with the sound.



2. Light-Up Buttons

Press the Light-Up Buttons to hear piano sounds and melodies, hear cute sounds and tunes or learn numbers and colors, depending on the selected mode. The lights will flash with the sound.



 
3. Book Page

Turn the Book Page to hear a song, animal sounds, short tunes and car sounds, depending on the selected mode. The lights will flash with the sound.



4. **Number Pad**

Press the Number Pad to hear phone sounds and numbers. The lights will flash with the sound.

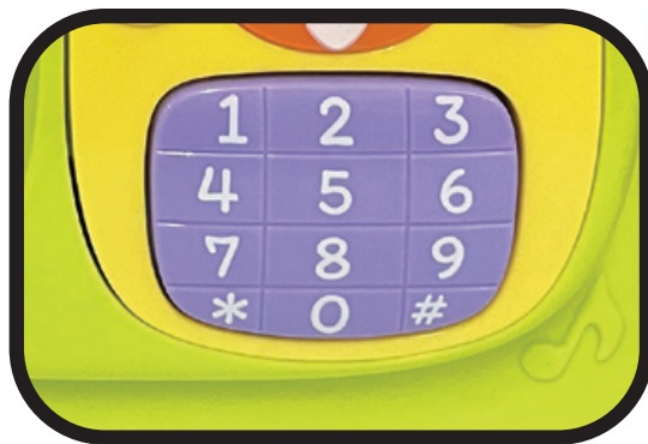

5. **Removable Phone**

Pick up the Phone or hang it up to hear phone sounds, short tunes or phone greetings, depending on the selected mode. The lights will flash with the sound.



6. **Arrow Button**

Press the Arrow Button to hear short tunes and sounds. The lights will flash with the sound.



MELODIES

1. Roses Are Red
2. Grandfather's Clock
3. Skip to My Lou
4. Head and Shoulders
5. Are You Sleeping?
6. Six Little Snails
7. Where Has My Little Dog Gone?
8. London Bridge
9. Glow Worm
10. Aiken Drum

SONG LYRICS

Song 1

Sing a song, sing from your heart.

Use your voice and spread some joy!

Song 2

Elephant drives along the road, To see his animal friends.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.

4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE

If the problem persists, please contact our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S., 1-[877-352-8697](tel:877-352-8697) in Canada, or by going to our website vtechkids.com and filling out our Contact Us form located under the Customer Support link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have.

A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®

Model: 5794

Product Name: 4-in-1 Steps & Stages Activity Center™

Responsible Party: VTech Electronics North America, L.L.C.

Address: 1156 W. Shure Drive, Suite 200

Arlington Heights, IL 60004

Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com

vtechkids.ca

Read our complete warranty policy online at

vtechkids.com/warranty

vtechkids.ca/warranty




© 2025 VTech.

All rights reserved.

IM-579400-000

Version:0

Documents / Resources

	<p>VTech 80-579400 4 In 1 Steps and Stages Activity Center [pdf] Instruction Manual</p> <p>80-579400, 80-579400 4 In 1 Steps and Stages Activity Center, 80-579400, 4 In 1 Steps and Stages Activity Center, Steps and Stages Activity Center, Stages Activity Center, Activity Center, Center</p>
---	--

References

- [User Manual](#)

■ vtech

🔍 4 In 1 Steps and Stages Activity Center, 80-579400, 80-579400 4 In 1 Steps and Stages Activity Center, Activity Center, Center, Stages Activity Center, Steps and Stages Activity Center, vtech

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.