



vtech BLUEY'S Book of Games Instruction Manual

[Home](#) » [vtech](#) » vtech BLUEY'S Book of Games Instruction Manual 

Contents

- 1 vtech BLUEY'S Book of Games
- 2 INTRODUCTION
- 3 INCLUDED IN THE PACKAGE
 - 3.1 Unlock the Packaging Locks
- 4 INSTRUCTIONS
 - 4.1 Battery Removal and Installation
 - 4.2 IMPORTANT: BATTERY INFORMATION
- 5 PRODUCT FEATURES
- 6 CARE & MAINTENANCE
- 7 TROUBLESHOOTING
- 8 CONSUMER SERVICES
- 9 PRODUCT WARRANTY/ CONSUMER GUARANTEES
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts



vtech BLUEY'S Book of Games



INTRODUCTION

Thank you for purchasing Blue's Book of Games! Turn the pages and play with Bluey and Bingo for real life! Discover the games Bluey has imagined and find items around your house to play along.

1. Light-Up Buttons
2. Bluey Button
3. Story Mode Button
4. On/Off Button
5. Volume Button
6. Bandit Button
7. Play Together
Mode Button
8. Chilli Button
9. Music Mode Button
10. Bingo Button
11. Follow Me Mode
12. Button Book Pages



INCLUDED IN THE PACKAGE

- Bluey's Book of Games
- Quick Start Guide

WARNING

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks


1. Rotate the packaging locks 90 degrees anti-clockwise.
2. Pull out the packaging locks and discard.

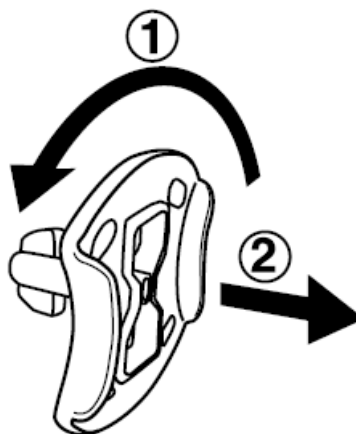

INSTRUCTIONS

Battery Removal and Installation

 1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.

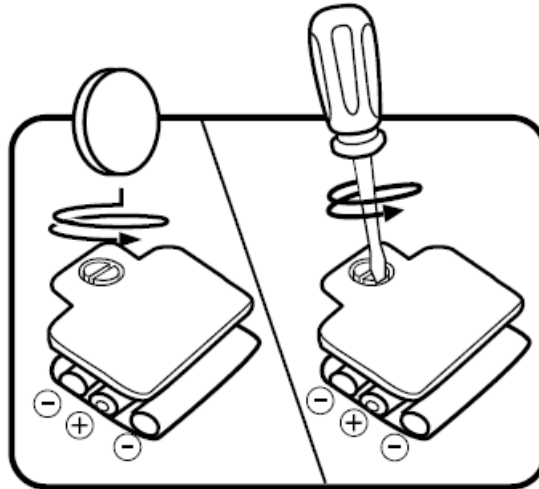

4. Install 3 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.).
5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product

- The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.
- The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified

value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

- The solid bar indicates that the product was placed on the market after 13th August, 2005.
- Help protect the environment by disposing of your product or batteries responsibly.
- VTech® cares for the planet.
- Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

- **In the UK:**

Visit www.recyclenow.com to see a list of collection points near you.

 
- **In Australia & New Zealand:**

- Check with your local council for kerbside collections.

PRODUCT FEATURES

1. On/Off Button

Press the On/Off Button to turn the unit On. To turn the unit Off, press the On/Off Button again.

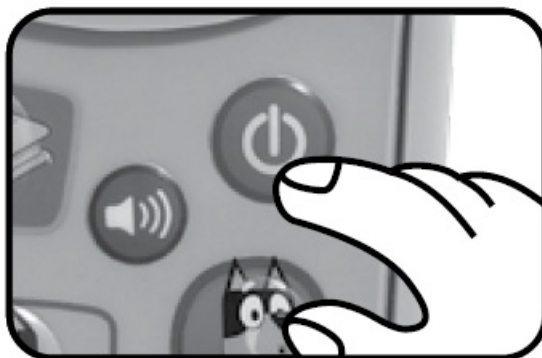

2. Volume Button

Press Volume Button to adjust the volume level.



3. Story Mode Button

Press the Story Mode Button to learn about Bluey's favourite pretend-play games with a short story.



4. Play Together Mode Button

Press the Play Together Mode Button to hear about the rules and items needed to play Bluey's silly invented

games.



5. **Music Mode Button**

Press the Music Mode Button to add sound effects to the melodies by pressing the colorful buttons.



 
6. **Follow Me Mode Button**

Press the Follow Me Mode Button to remember a list of items Bluey needs and get them in the correct order.




7. **Character Buttons**

Press the Bluey, Bandit, Chilli and Bingo Buttons to hear Bluey and Bingo introduce themselves or family members.

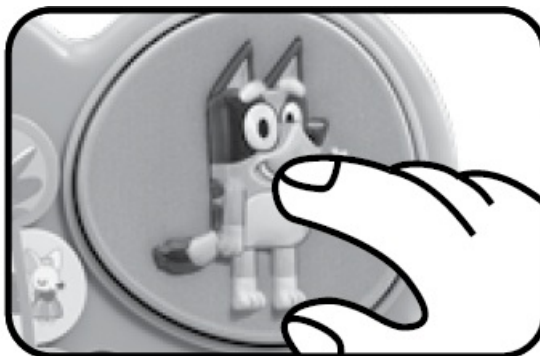


8. **Four Light-Up Buttons**

 Press the colorful Light-Up Buttons to play games and hear phrases from Bluey and Bingo. The lights flash with the sounds and music.

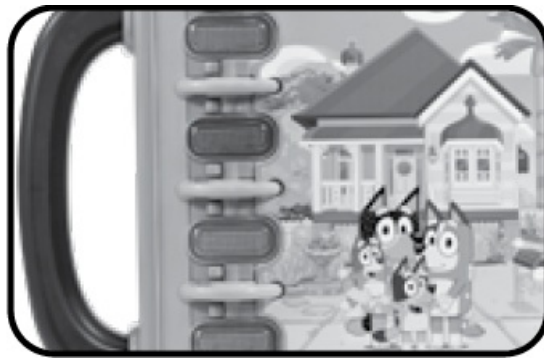

9. **14 Book Pages**

 Turn to any page to hear and play different role-playing stories, melodies and games.

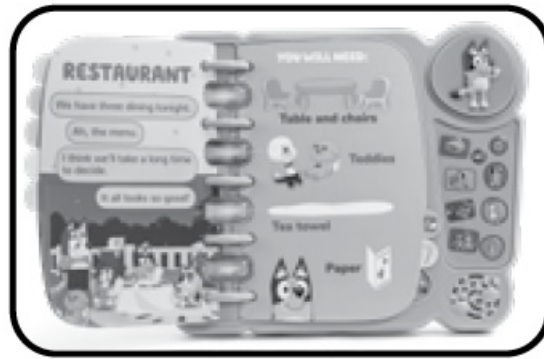

10. **Automatic Shut-Off**

To preserve battery life, the unit will automatically turn off after several minutes of inactivity. The unit can be turned on again by pressing the On/Off Button. If the unit repeatedly turns itself off or displays abnormal responses, please insert new batteries and try again.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur.

It is important for you to know that we stand behind our products and encourage you to call our Consumer

Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

 
Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk

www.vtech.com.au

Documents / Resources

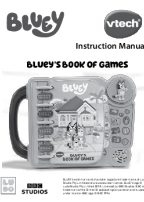	<p>vtech BLUEY'S Book of Games [pdf] Instruction Manual BLUEY S Book of Games, BLUEY S, Book of Games</p>
---	---

References

- [Support : VTech Electronics](#)
- [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [VTech Toys Australia - Electronic Learning Toys - Best Learning Toys - VTech Australia and New Zealand](#)