



VTech Bounce & Play Llama User Guide

[Home](#) » [vtech](#) » VTech Bounce & Play Llama User Guide 

Contents

- 1 VTech Bounce & Play Llama
- 2 INTRODUCTION
- 3 INCLUDED IN THE PACKAGE
- 4 GETTING STARTED
 - 4.1 Battery Removal and Installation
 - 4.2 BATTERY NOTICE
 - 4.3 Disposal of batteries and product
- 5 ASSEMBLY INSTRUCTIONS
- 6 PRODUCT FEATURES
- 7 ACTIVITIES
- 8 MELODY LIST
- 9 SONG LYRICS
- 10 CARE & MAINTENANCE
- 11 TROUBLESHOOTING
- 12 CONSUMER SERVICES
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts



VTech Bounce & Play Llama



INTRODUCTION

Bounce, play and enjoy fun learning with the Bounce & Play Llama by VTech®! This cute Llama encourages your little one to get physical through bouncing and spinning. The chunky handle and secure base allows your little one to easily hold on and bounce, bounce, bounce!



INCLUDED IN THE PACKAGE



 
Bounce & Play Llama



Support Base



Handle

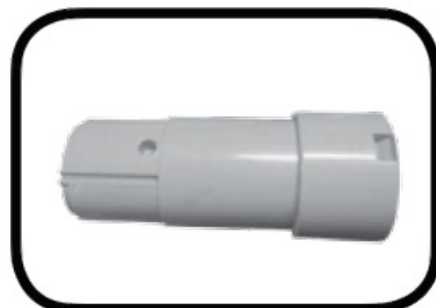

Support Post

- Four screws
- Parent's Guide

WARNING

 
All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and

packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please save this Parent's Guide as it contains important information.

GETTING STARTED

Battery Removal and Installation

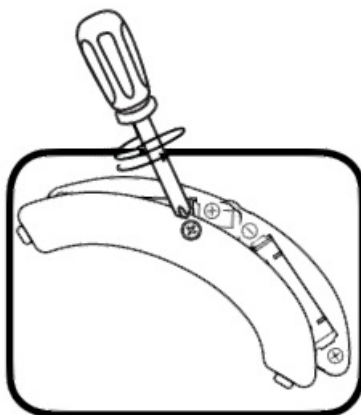

1. Make sure the unit is turned Off.
2. Locate the battery cover on the back of the electronic module. Use a screwdriver to loosen the screw and then open up the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

WARNING: Adult assembly required for battery installation. Keep batteries out of reach of children.

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product

The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health. The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC). The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

CAUTION:

This package contains small parts.

ADULT ASSEMBLY REQUIRED.

For your child's safety, do not let your child play with the toy until it is fully assembled.

ASSEMBLY INSTRUCTIONS

With the Bounce & Play Llama safety comes first. To ensure your child's safety, adult assembly is required.

 
1. Insert the bottom of the Support Post into the slot on the top of the Support Base. You will hear a click to indicate that the Support Post is attached securely to the Support Base.



2. Insert the bottom of the Llama onto the top of the Support Post. You will hear a click to indicate that the Llama is attached securely to the Support Post.




3. Insert the Handle behind the Llama's ears. Insert and tighten the four included screws.

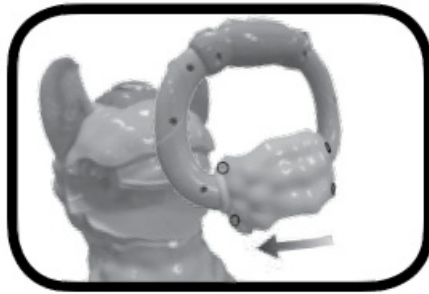

PRODUCT FEATURES

1. On/Off/Volume Switch

 To turn the unit On, slide the On/Off/Volume Switch to the Low volume or High volume position. You will hear a song, a welcoming phrase and sounds. To turn the unit Off, slide the On/Off/Volume Switch to the Off position.

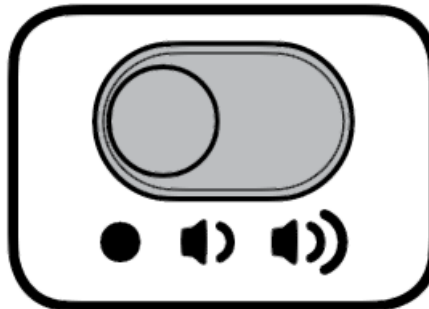

2. Automatic Shut-Off

To preserve battery life, the Bounce & Play Llama will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

NOTE: If the unit powers down or if the light fades out during play, please install a new set of button cell batteries.

ACTIVITIES

1. Shape Buttons

Press the Shape Buttons to learn about numbers, colours and shapes, as well as hear fun sounds, melodies and songs. When a song or melody is playing, bounce up and down on the llama to add fun sounds and phrases over the music. The lights will flash with the sounds.



2. Bouncing Llama

Bounce up and down on the llama to hear fun sounds and phrases. Bouncing up and down continuously for several seconds will activate songs or melodies. When a song is playing, bounce the llama to add fun sounds over the songs. If a melody is playing and the bouncing stops, the melody will also stop. Continue bouncing to hear the melody continue. The lights will flash with the sounds.



MELODY LIST

1. Bingo
2. My Bonnie Lies Over The Ocean
3. The Green Grass Grew All Around
4. Yankee Doodle
5. Looby Loo
6. Ride A Cock Horse to Banbury Cross
7. Toyland
8. Skip To My Lou
9. Old MacDonald
10. Hey, Diddle, Diddle

SONG LYRICS

Song 1

Bounce, bounce, up and down, Bouncing all day long!
Bouncing, bouncing, bouncing, bouncing, It's fun to bounce along!

Song 2

I'm a little llama, I love to count,
One, two, three. One, two, three!
Let's count and bounce with me!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play with again.

5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk

www.vtech.com.au

Documents / Resources

 The image shows the cover of a "Parent's Guide" for the "Bounce & Play Llama". It features the VTech logo at the top left, the title "Parent's Guide" and "Bounce & Play Llama" in the center, and a photograph of the grey llama toy at the bottom.	<p>VTech Bounce & Play Llama [pdf] User Guide</p> <p>VTech, Bounce Play Llama</p>
--	---

References

- [!\[\]\(71ac35c616fd8bfda805d579390e24d8_img.jpg\) Support : VTech Electronics](#)
- [!\[\]\(b10a8b91056068472be58f587e00cb47_img.jpg\) Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [!\[\]\(26a0aa65ffdf9b4c0922ec277970eeda_img.jpg\) Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [!\[\]\(94aeee9c39a3a3d10654831c4bdd6b76_img.jpg\) Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [!\[\]\(3e6c1aedeeaa8d5deb59d3ee4ab46da3_img.jpg\) VTech Toys Australia - Electronic Learning Toys - Best Learning Toys - VTech Australia and New Zealand](#)

Manuals+.