



vtech CFH8006 DECT Single Phone User Manual

[Home](#) » [vtech](#) » vtech CFH8006 DECT Single Phone User Manual 



Contents

- [1 INTRODUCTION](#)
- [2 SAFETY INSTRUCTION](#)
- [3 FEATURES](#)
- [4 LCD LAYOUT AND PHONE LAYOUT](#)
- [5 INSTALLATION](#)
- [6 CALL FUNCTIONS](#)
- [7 MULTI-HANDSET FUNCTIONS](#)
- [8 TROUBLE SHOOTING](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

INTRODUCTION

Thank you for purchasing our latest DECT single phone, the manual is designed to familiarize you with this phone. To get the maximum use from the phone, we suggest that you read this instruction manual carefully before using.

SAFETY INSTRUCTION

When using your telephone equipment, the following basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons:

- Read, understand and follow all warnings and instructions
- Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a soft damp cloth for cleaning.
- Do not place this product on unstable surfaces. The product may drop, causing serious damage to the product.

- Do not overload wall outlets and extension cords as this can result in fire or electric shock.
- Never push foreign objects of any kind into this product through cabinet slots as they may affect dangerous voltage points or short circuit parts that could result in fire or electric shock. Never spill liquid of any kind on the product.
- Avoid moving or disconnecting this unit during a heavy storm, as there may be a remote risk of electric shock from lightning and thunder.
- IMPORTANT – The base unit must be used with the mains adapter supplied with the unit.
- Using any other adapter will may invalidate any approval given to this apparatus.
- Unprofessional person cannot open the telephone even meets troubles, please send to service center.

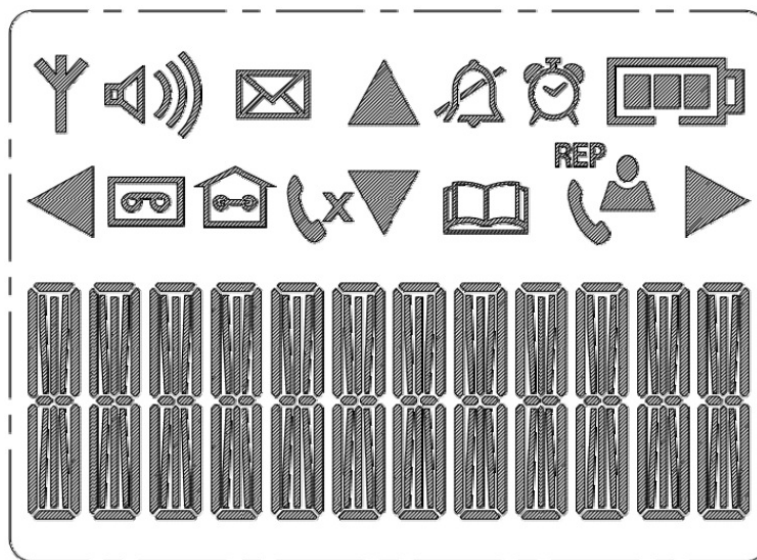
PACKAGE INCLUSION

Base unit, handset, AC/DC adapter, Ni-MH AAA batteries ,line cord,user's manual,warranty card

FEATURES

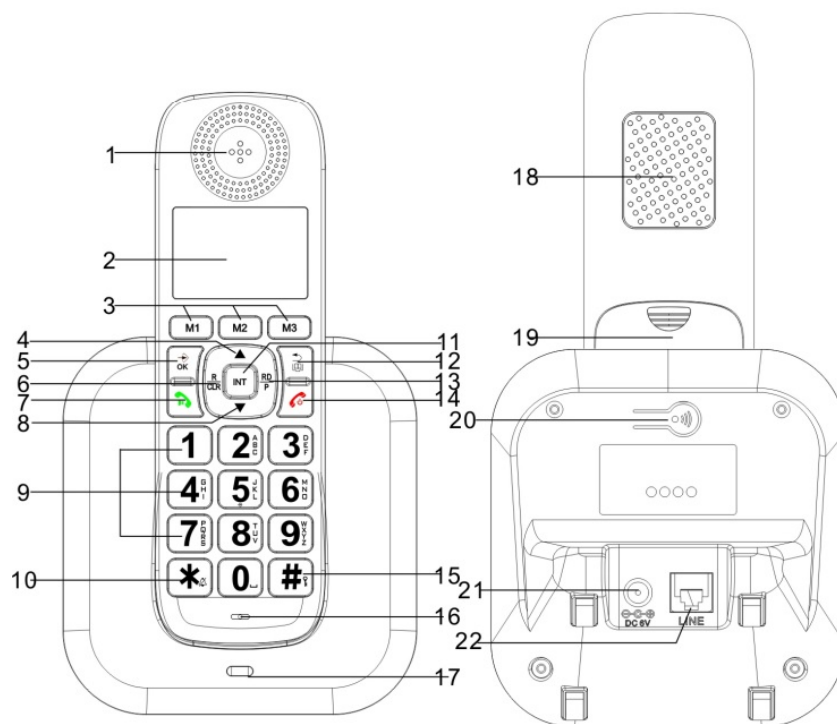
- LCD 3 lines display
- Maximum 5 handsets can be registered to the same base unit, and maximum 4 bases per handset
- 16 kinds of interface languages: Portuguese, Spanish, English, French, German, Italian, Dutch, Hungarian, Greek, Polish, Danish, Norwegian, Swedish, Turkish, Russian and Ukrainian
- Pre-dial and edit function
- Redial and pause function
- 30 incoming numbers memories and 10 outgoing numbers memories
- 50 phone book memories with 12 characters & 20 digits maximum
- Call transfer to other handset and intercom call between two handsets
- Conference call between external call and two handsets
- 10 ringing tones for selection
- Ringing tone/earpiece/hands-free volume adjustable
- Different melody for different call available
- Alarm clock function
- Tone/Pulse dialing mode can be set
- Flash time 100/300/600 for selection
- LCD backlight function
- Auto/manual answering function
- Dialing barring function
- Keypad lock function
- In use and charge LED indicator

LCD LAYOUT AND PHONE LAYOUT


 



Icon	Description	Function
	ANTENNA	The antenna icon will always be shown on the LCD, it indicates for signal strength, icon flashes: the handset is out of range, searching signal of base. Icon is gone : the registration base is lost.
	TALK	The icon will be displayed in handset mode.
	ALARM	The alarm icon will be shown when the alarm is set on available . The alarm icon will flash when the alarm is triggered.
	RINGER OFF	The phone is in DO-NOT-DISTURB mode and will not ring for new calls.
	PHONEBOOK	The icon will be displayed when viewing the phone book entries.
	VOICE MAIL	The icon will be displayed when new voice message is received from the network.
	NEW CALL	The icon will be displayed when a new call comes
	SPEAKER	The icon will be displayed in speaker mode
	BATTERY	Charging indication and indication of the current battery status.
	Intercom	The icon will be displayed when making an intercom call

Phone Layout



SN	Icon	Description	Function Definition
1		Receiver	Working in handset talking mode
2		LCD	Display menu,calls and relative information.
3	M1/M2/M3	One-touch memories	Enter the number and hold M1/M2/M3 to store the number. Press M1/M2/M3 to make a call fast.
4	▲	Up	In standby mode, press one to access outgoing calls memory. In menu setting state, press to scroll up the menu setting / options In talking mode ,press to increase the volume
5	➡ OK	Menu/OK	Press once to access the menu setting Press to confirm selection & value setting.
6	R/CLR	Recall /Clear	When dialing or editing phone book, press to delete the input. In talking mode ,press to transfer the call to extension
7	📞	Handset mode Speaker mode	In standby state press once to enter the handset talking mode. In handset mode, press once to enter speaker talking mode.
8	▼	Down	In standby mode, press one to access incoming calls memory. In menu setting state, press to scroll down the menu setting / options In talking mode ,press to decrease the volume
9	* _{hook}	Ring on/off	In addition to its use for text and number entry; Press and hold to switch the handset external call ring on/off
10	1-0	10 Number keys	Enter numbers or letters
11	INT	Intercom	To set up an internal call to another handset; To transfer an incoming call to another handset; To set up a conference call with an external line and an internal handset.
12	📞↶	Phone book/Back	In standby mode,press once to access the phone book memory In menu setting state, press once to go back last menu setting.

13	RD/P	Redial/Pause	When dialing, press to insert pause time 3.6S between two digits. In handset talking mode, press to redial the last dialed number.
14		End/Power off	In talking mode, press once to hang up the call; In standby mode, hold for 3 seconds to shut down the handset.
15	#	Keypad lock	A Long press to activate keypad lock; To set up a conference call.
16		Microphone	
17	LED	Taking Charging Paging	When the handset is being charged,the LED is red. When the handset is fully charged, the LED will get green from red. When the handset is in talking mode, the LED will get green. When holding page key for 5S, the LED will get green and blinking.
18		Speaker	Speaker talking mode and new call ringing
19		Battery door	Open the battery door and install 2pcs AAA Ni-MH batteries
20		Page	Press to page all the handsets and all handsets will be ringing. Register more handset to the current base.
21		DC port	DC 6V port
22	LINE	Line port	Telephone line port

INSTALLATION

1. Insert one end of the line cord to line port of base unit,insert another end to telephone socket on the wall.
2. Insert the DC plug into the DC port of the base unit and insert AC/DC adapter plug into power socket.
3. Open the battery door, install the batteries with correct direction(+/-) and then close the battery door.
4. Place the handset correctly on the base charging station and let the battery charged for at least 12 hours for the first using. You hear a beep tone when the handset is correctly in position on the charging cradle.

Important Notices:

To keep the batteries charged, whenever you don't need to use the handset (such as overnight, or when you go out), leave the handset on the charge cradle.

If you do not modify the password, all the passwords(PIN code) are default as 0000 in this manual.

Menu Settings

In standby mode, press  key to enter the menu setting,

Press  or  key to review the settings, press  key again to start the current setting or save the setting.

Press  to back to the previous menu or press  back to idle mode.



Note: The phone will exit the setting state after 10 seconds if no any operation.


 
The menu tree as follow:


HANDSET MENU TREE	
CALL LOG	MISSED
	RECEIVED
	DIALED
	LIST





PHONE BOOK	NEW ENTRY	
	EDIT RECORD	
	DEL RECORD	
	DELETE ALL?	
	MEM STATUS	
BS SETTINGS	DELETE HS	
	DIAL MODE	TONE
		PULSE
	FLASH TIME	100/300/600
	MODIFY PIN	default 0000
	MEMO	ON
		OFF
HS SETTINGS	ALARM	ON
		OFF
	RING SETUP	INT RING
		EXT RING
	TONE SETUP	KEY TONE
		BATTERY LOW
		RANGE ALARM
	LANGUAGE	
	HS NAME	
	AUTO ANSWER	ON
		OFF
	BARRING	OFF, default 0000
	DATE&TIME	
	CONTRAST	
	SELECT BASE	BASE 1,2,3,4 and AUTO
	HS DEFAULT	default 0000
REGISTRATION	BASE 1(2,3,4)	

1: CALL LOG



Press  key and LCD displays CALL LOG, press  key to enter. There are three items in this menu, MISSED, RECEIVED and DIALED.

Note: In idle state, press  key once to outgoing calls or press  key to review incoming calls directly.


1. Press  key to enter missed call list, received call list or dialed call list.


2. The LCD will show the last record. (If no record, the LCD will show EMPTY).
3. Press ▲ or ▼ key to view other record.
4. When reviewing the number, press the  key to dial out the number automatically.
When reviewing the number, press  key to add it to Phone book or Delete or Delete All
5. Press  to back to the last menu or press  back to idle mode.

2: PHONE BOOK

This function allows the user to review/add/edit/delete an entry of the phone book.
Each handset has its own phone book, independent from other registered handsets (if existing).
Support total 50 entries with max 12 characters, max 20 digits and optional ringtone.
Press  key and press ▼ key once to select PHONE BOOK, press  key to enter.





■ LIST

1. LCD display LIST.
2. Press ▲ or ▼ key to review the list of phone book.
3. Choose the number for making a call
4. Press  key to dial out the number automatically.

In the idle mode, press  key to enter phone book list directly.
Quick search Tip: Press any number key to position the first entry of its first letter.

■ NEW ENTRY

Press ▲ or ▼ key to select NEW ENTRY.

1. Press  key and the LCD displays NAME ?.
2. Enter the name using the alphanumeric keys, press R/CLR key to delete wrong input.
3. Press  key to confirm and LCD displays NUMBER ?
4. Enter the number and press R/CLR key to delete wrong input
5. Press  key to confirm and LCD displays Melody 1
6. Press ▲ or ▼ key to select the melody
7. Press  key to confirm.

Input method as follow:

press times key	1st	2nd	3rd	4th	5th	6th
1	÷	—	/	1		
2	A	B	C	2		
3	D	E	F	3		
4	G	H	I	4		
5	J	K	L	5		
6	M	N	O	6		
7	P	Q	R	S	7	
8	T	U	V	8		
9	W	X	Y	Z	9	
*	*					
0	space	—	0			
#	o					

▣ EDIT RECORD

Press ▲ or ▼ key to select EDIT RECORD. .

1. Press → key and the first record will be displayed.

2. Press ▲ or ▼ key to find the entry to be revised.

Quick search Tip: Press any number key to position the first entry of its first letter.

3. Press → key and LCD displays its name

4. Press R/CLR key to delete and enter new name/number.

5. Press → key to confirm.

▣ DEL RECORD

Press ▲ or ▼ key to select DEL RECORD.

1. Press → key and the first record will be displayed.

2. Press ▲ or ▼ key to find the entry to be removed.

Quick search Tip: Press any number key to position the first entry of its first letter.

3. Press → key and LCD displays CONFIRM ?

4. Press → key to confirm.

▣ DELETE ALL

Press ▲ or ▼ key to select DELETE ALL ?.

1. Press → key and LCD displays CONFIRM ?

2. Press → key and LCD displays DELETE ALL ?

3. Press → key to confirm.

▣ MEM STATUS

Press ▲ or ▼ key to select MEM STATUS.

Press → key and LCD displays XX/50. Means there are XX entries already in the phone book memory.

Total 50 entries.

3: BS SETTINGS

Press → key and press ▼ key twice, LCD displays BS SETTINGS,

Press → key to enter the base setting, press ▲ or ▼ key to select the setting to change.

▣ DELETE HANDSET

This function allows the user to delete new additional handset registration from the base.

1. Press → key, the first show is DELETE HS.
2. Press → key to enter, the user will be prompted to enter the PIN code.
3. Input the correct 4-digit pin code (the default PIN code is 0000 .
4. Press ▲ or ▼ key to choose the handset names. Press → key to confirm.

The handset will be deleted from the registered list on the base, and it will have prompt information – out of range condition. (Default handset will not be deleted)

Note: To delete all the handsets registration from the base:

In idle mode, press and hold *))) key for 5s, IN USE/CHARGE LED flashes, then press *))) key 7 times continuous, the IN USE/CHARGE LED flashes quickly.

All the handsets have been deleted from the base when the IN USE/CHARGE LED quench.

▣ DIAL MODE

The user can select to change the mode will dial.

1. Press → key, then press ▲ or ▼ key to select DIAL MODE item.
2. Press → key to enter, and the display shows TONE.
3. Press ▲ or ▼ key to select TONE or PULSE dial mode.
4. Press → key to confirm.

Note: According to your telephone lines or PABX systems you may need to change the dialing mode between Tone and Pulse.

▣ FLASH TIME

The user can select the flash time (100ms, 300ms and 600ms) to meet your telephone line or PABX requirement.

1. Press → key, then press ▲ or ▼ key to select FLASH TIME item.
2. Press → key to enter.
3. Press ▲ or ▼ key to select the desired flash time.
4. Press → key to confirm.

▣ MODIFY PIN

Some setting (such as Delete handset and Base default) requires a PIN code before changing.



 


You could change to your personal 4-digit PIN and keep it well. Default PIN code: 0000

1. Press → key to confirm. Press ▲ or ▼ key to select MODIFY PIN item.
2. Press → key to confirm, and the LCD shows PIN?
3. Enter the existing PIN code.
4. Press → to confirm.
5. Enter a new PIN code (4 digits) when the LCD shows NEW PIN, press → to confirm.
6. The LCD shows REPEAT, input the new PIN code again.

7. Press  to confirm.

■ BASE DEFAULT

This function allows the user to reset the base setting to the factory default.

1. Press  key, then press  or  key to select BS DEFAULT.
2. Press  key to confirm and the LCD shows PIN?
3. Enter the PIN code and press  key to confirm.

If the PIN code is correct, all base settings will be reset to the factory default.



 


 
 


 
 

4: HS SETTINGS

This function allows the user to change the settings of his handset.


Press  key and press  or  key to select HS SETTINGS.

■ ALARM

This function Alarm is programmed on and will repeat every day.

1. Press  key, the LCD shows ALARM.
2. Press  key to confirm and LCD shows OFF.
3. Press  or  key to select ON, press  key to confirm.
4. The LCD shows 00-00 (HH-MM), press  or  key to change the time(24 hours)
5. Press  key to confirm and the LCD will display  and SNOOZE ON.
6. Press  or  key to select SNOOZE ON or SNOOZE OFF, press  key to confirm.


 
 

 




Notes:

1. If the SNOOZE is ON, the alarm will be repeated about every 5 minutes for nine times
2. When the phone is ringing for alarm, press  key quit the alarm, press other key to pause the SNOOZE function, and the phone will be ringing after 5 minutes.
3. If the SNOOZE is OFF, the phone will be ringing for 45 seconds.

■ RING SETUP





This function allows the user to set the ring tones for intercom calls and external calls.

Total 10 ring tones with off, 1~5 volume levels.

1. Press  key, then press  or  key to select RING SETUP.
2. Press  key and LCD displays INT RING.
3. Press  or  key to select the INT RING or EXT RING or VOLUME.
4. Press  key to confirm.
5. Press  or  key to select the MELODY X (X=1~10) .

■ TONE SETUP

This function allows the user to change the handset tone settings.

1. Press  key, then press  or  key to select TONE SETUP.
2. Press  key to enter and LCD shows KEY TONE .

3. Press ▲ or ▼ key to select the KEY TONE or BATTERY LOW, RANGE ALARM .
4. Press ➞ key to confirm.
5. Press ▲ or ▼ key to select the ON or OFF to enable/disable the tone indication.
6. Press ➞ key to confirm.

Notes:

1. If you turn the tone on for key tone, a beep for key tone will sound when a key is pressed on the handset.
2. If you turn the tone on for battery low warning, a beep will sound when the battery is low.
3. If you turn the tone on for the out of range warning, a beep will sound when the handset goes out of range of the base unit.

▣ LANGUAGE

1. Press ➞ key, then press ▲ or ▼ key to select LANGUAGE.
2. Press ➞ key to enter and LCD shows ENGLISH.
3. Press ▲ or ▼ key to select the language from ENGLISH (English), DEUTSCH (German), FRANÇAIS (French), ITALIANO (Italian), ESPAÑOL (Spanish), PORTUGUES (Portuguese), PYCCKNŃ (Russian), TŪRKÇE (Turkish), EΛΛHNIKA (Greek), YKPAIHCBKNŃ (Ukrainian), POLSKI (Polish), MAGYAR (Hungarian), SVENSKA (Swedish), NEDERLANDS (Dutch), DANSK (Danish) and NORSK (Norwegian). Each language will display in its own native translation.
4. Press ➞ key to confirm .

▣ HANDSET NAME

The function allows the user to change his handset name displaying on LCD,different from other handsets.

1. Press ➞ key and press ▲ or ▼ key to select HS NAME
2. Press ➞ key and enter the handset name, press R/CLR key to delete wrong input.
3. Press ➞ key to confirm.

▣ AUTO ANSWER

This function allows the user to answer a call automatically by picking up handset from the charging cradle.

1. Press ➞ key and then press ▲ or ▼ key to select AUTO ANSWER
2. Press ➞ key and press ▲ or ▼ key to select ON or OFF
3. Press ➞ key to confirm.

▣ BARRING

This function allows the user to set to 4 barring numbers to make calls.
But the internal calls to intercom or conference will still be available.

1. Press ➞ key and press ▲ or ▼ key to select BARRING,
2. Press ➞ key and require to enter the PIN code (default:0000).
3. Press ➞ key to confirm, press ▲ or ▼ key to select ON, press ➞ key to confirm.
4. The LCD shows NUMBER 1, you press ▲ or ▼ to choose NUMBER i(i=1~4).

5. Press → to confirm and input number (Max 4 digits) which you want to block.
6. Press → key to confirm. Repeat the above steps to set the other groups

For example: NUMBER 1 is set 1234

Then you dial the numbers 12345678 to make a call, will be blocked, the LCD displays CALLS BARRED.

■ **DATE & TIME**

This function allows the user to set date and time on the handset, .

1. Press → key and press ▲ or ▼ key to select DATE&TIME
2. Press → key and the last two digits of the year flashes.
3. Pressing ▲ or ▼ key to change the year.
4. Press → key to confirm and change the month,date, time.

■ **CONTRAST**

This function allows the user to set the contrast of the LCD.

1. Press → key and press ▲ or ▼ key to select CONTRAST.
2. Press → key to confirm, then press ▲ or ▼ key to select from 1-8 levels.

■ **SELECT BASE**

This function allows the user to register his handset to more bases(Max 4pcs), such as office and residential.

1. Press → key and press ▲ or ▼ key to choose SELECT BASE.
2. Press → key and the LCD displays BASE 1 + .
3. Press ▲ or ▼ to select base (BASE 1~4) or AUTO.

The handset is able to register to only such base number with “+”.

4. Press → to begin searching, if you hear a sound of “di-du-di”, means it was registered successfully.

Note: If you select “AUTO”, the handset will connect to the first of the registered bases that it finds.

■ **HANDSET DEFAULT :**

This function allows the user to reset the handset setting to the factory default.

Calls log,phone book and handset name will be cleared, registered base record will be kept.

1. Press → key and press ▲ or ▼ key to select HS DEFAULT .
2. Press → key to confirm and the display shows PIN?
3. Enter the PIN code (default 0000).
4. Press → key to confirm.



If the PIN code is correct, the handset settings will be reset to the factory default.

5: REGISTRATION

This function allows the user to register more handsets to his phone base (his handset + another 4 handsets).

New handsets need to be registered first before using.

1. Press ⏻ key on the BASE and hold it until the green LED blinks.
2. In the new handset, press → key, press ▲ or ▼ key to select REGISTRATION.
3. Press → key and press ▲ or ▼ key to select from BASE X +. (X: the number of registered handsets)

4. Press  key to confirm, and LCD displays PIN?
5. Enter the pin code (default 0000).
6. Press  key to confirm and LCD display SEARCHING X,



Note:

When hearing DI-DU-DI- sound, that means the new handset has been registered successfully and the LCD displays HS i(i=2,3,4 ,5)

When hearing DI-DI-DI- sound, that means the new handset has failed to register and back to idle mode.

CALL FUNCTIONS

Pre-dialing

1. In idle mode, enter the number.
2. Press R/CLR key to correct the number.
3. Press  key to dial out the number in handset talking mode.
4. Press  key again to enter speaker talking mode.
5. In handset or speaker mode, press ▲ or ▼ key to adjust its volume. Total 5 levels for selection.

Caller ID – type II

During the conversation, the phone will display the new call number when a second call is received.

This function will be valid and work after the user apply for call waiting service.

Pause

Press RD/P key will insert a 3.6 seconds pause time between two digit numbers.

Redial function

In idle state, Press  key and then press RD/P key, the last dialed number will be dialed again.

Flash

The flash function of R/CLR key can support some special network service, such as call waiting, call transfer, etc. These services require a subscription and the operations depend on the different exchanger.

To Lock/Unlock the keypad

To lock the keypad

Press and hold the  key for about 2 seconds.

You will hear a beep tone, while the keypad is locked, any key you press is invalid.

To unlock the keypad

Press and hold the  key for about 2 seconds.


You will hear a beep tone, the handset will be unlocked and it will go back to idle state.

MULTI-HANDSET FUNCTIONS

One base supports Max 5 handsets to be registered.

If you have two handsets or more registered in one base, you will have below features for working:

■ Intercom

1. In idle mode, press INT key.
2. All the handsets will be ringing,
3. Press  key to enter conversation mode.


 

■ Call transfer

1. During conversation, press INT key and the LCD displays HS X ? (X: HANSET NUMBER)

Press ▲ or ▼ key to choose other handset if existing..

2. Press 1 or other handset number.
3. The destination handset will be ringing and ready to answer the call.

■ Three-way conference call

4. HS 1 – user is during conversation, press INT key and the LCD displays HS i ?,
Press ▲ or ▼ key to choose other handset if existing for conference call.
5. Press its handset number (HS i) .
 1. HS i will be ringing and ready to answer the call.
 2. HS i – User press  key answer the call
 3. HS 1 -User press  key then you can talk all together.
 4. Press  key to end the call first, other parties will be still on line conversation .

TROUBLE SHOOTING

- ✧ No signal bar is displayed on the screen
- ✓ The handset is out of range. Move it closer to the base station
- ✧ No dialing tone
- ✓ Check your phone connections
- ✓ The handset is out of range. Move it closer to the base station
- ✧ No docking tone
- ✓ The handset is not placed properly on the base station/ charger
- ✓ The charging contacts are dirty. Disconnect the power adaptor first and clean the contact with proper damp cloth.
- ✧ The handset on the charger does not charge
- ✓ Make sure the batteries are inserted correctly.
- ✓ Make sure the handset is placed properly on the base station/ charger
- ✓ Batteries are defective. Purchase new ones for replace.
- ✧ No display
- ✓ Make sure the batteries are charged
- ✓ Make sure there is power and the phone is connected
- ✧ The handset no ring
- ✓ Make sure the handset ring tone is turned on.
- ✧ Ring volume too low
- ✓ Check if the ringing volume is set improper, reset it.
- ✧ Receive only
- ✓ Check if P/T mode is properly set.
- ✓ Check if you have set the barring number, if you want dial out this number, reset the barring number.
- ✧ The base can not page the handset
- ✓ Repeat the registration operations to register the base and handset again.
- ✧ Most of the functions failed
- ✓ Check if the batteries are strong enough, charge the batteries.
- ✓ If batteries are OK, remove the battery, unplug the lines and re-install after 10 minutes.

Note: Due to continuous product development, all features and specifications are subject to change without prior notice.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For Handset

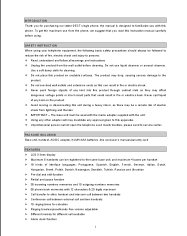
The device has been tested and comply with FCC SAR limits.

For Base

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Documents / Resources

	<p>vtech CFH8006 DECT Single Phone [pdf] User Manual 2BFFMCFH8006, CFH8006 DECT Single Phone, CFH8006, DECT Single Phone, Single Phone , Phone</p>
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.