



vtech DJ Scratch Cat Record Player Instruction Manual

[Home](#) » [vtech](#) » vtech DJ Scratch Cat Record Player Instruction Manual 

vtech DJ Scratch Cat Record Player Instruction Manual



DJ Scratch Cat Record Player™

 


Contents

- 1 INTRODUCTION
- 2 INCLUDED IN THE PACKAGE
- 3 GETTING STARTED
- 4 PRODUCT FEATURES
- 5 ACTIVITIES
- 6 MELODIES
- 7 SONG LYRICS
- 8 CARE & MAINTENANCE
- 9 TROUBLESHOOTING
- 10 Documents / Resources
 - 10.1 References

INTRODUCTION

Thank you for purchasing the **DJ Scratch Cat Record Player™**! Drop on a record and get ready to groove to the tunes! This retro inspired record player features five double-sided records showcasing jazz, techno, country, pop, and hip-hop songs and music. Dance with the kitty, slide the paw clicker and play music while you bop to the beats.

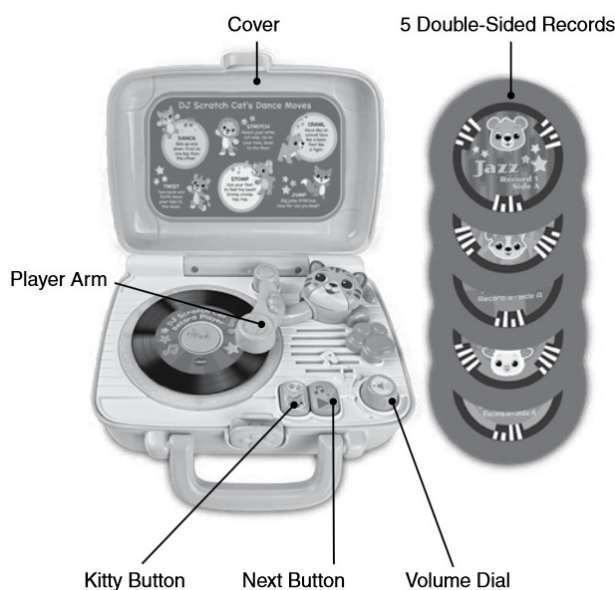

INCLUDED IN THE PACKAGE

- **DJ Scratch Cat Record Player™**
- 5 Double-Sided Records
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
NOTE

Please save this Instruction Manual as it contains important information.

NOTE

This product is in Try-Me mode in the packaging. After opening the package, please turn the DJ Scratch Cat Record Player™ off then on again to proceed with normal play.

Unlock the Packaging Locks

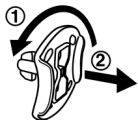

1. Rotate the packaging lock 90 degrees counterclockwise.
2. Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION


 
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.


RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES


1. On/Off Switch

 To turn the unit **On**, slide the **On/Off Switch** located on the back of the unit to the **On**  position. You will hear a short tune, a cute phrase and sounds. To turn the unit **Off**, slide the **On/Off Switch** to the **Off**  position.

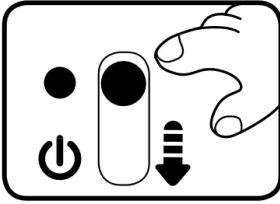


2. Volume Dial

 Turn the **Volume Dial** to adjust volume to the desired level.

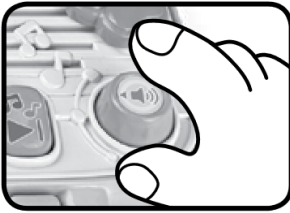

3. Storage Compartment

 When you are done using the record player, we recommend storing the records in the **Storage Compartment** on the back of the record player to prevent records from getting lost.

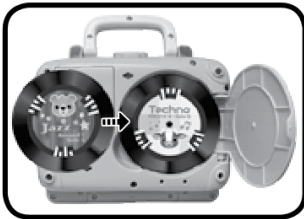

4. Automatic Shut-Off

To preserve battery life, the **DJ Scratch Cat Record Player™** will automatically power down after approximately 70 seconds without input. The unit can be turned on again by pressing any button, opening the **Cover** or moving the **Player Arm**.

 
NOTE

If the unit powers down, the light fades out, or the turntable slows or stops turning during play, please install a new set of batteries.

ACTIVITIES

1. Turntable

Place a **Record** on the **Turntable**, then slide the **Player Arm** over the record to activated it and hear it play. A sung song or a phrase and melody will play on Side A. Animal sounds, a phrase and melodies will play on Side B. The lights will flash with the sound and the kitty will sway to the music.

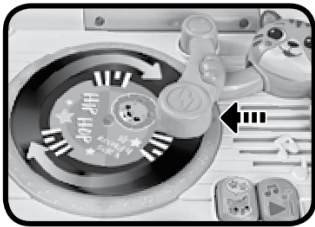


2. Kitty Button

Press the **Kitty Button** when a record is activated on the turntable to hear the animal on record's label identified. If there is no record on the turntable or the record is not activated, the kitty will say fun phrases. The lights will flash with the sound.



3. Next Button

 Press the **Next Button** when a record is activated on the turntable to play the next phrase, song, short tune or melody. If there is no record on the turntable or the record is not activated you will hear phrases to encourage play. The lights will flash with the sound.

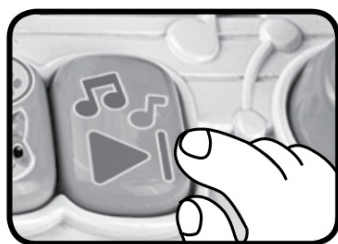

4. Record Player Cover

Open the **Cover** to hear a song, a phrase and a sound. Close the **Cover** to hear a short tune. The lights will flash with the sound.



MELODIES

1. Where Has My Little Dog Gone?
2. Oh, Dear! What Can the Matter Be?
3. Oats, Peas, Beans and Barley Grow
4. Glow Worm
5. The Green Grass Grew All Around
6. Aiken Drum
7. Good Morning Merry Sunshine

8. Skip to My Lou
9. Jack Be Nimble
10. Boys and Girls Go Out to Play
11. A-Tisket, A-Tasket
12. Little Robin Redbreast
13. Yankee Doodle
14. Wheels on the Bus
15. Ten in the Bed
16. Polly Put the Kettle On
17. One, Two, Buckle My Shoe
18. Here We Go 'Round the Mulberry Bush
19. Old MacDonald
20. Chicken Reel
21. On Top of Old Smokey
22. Little Bo Peep
23. BINGO
24. Diddle, Diddle Dumpling
25. Hickory, Dickory Dock
26. Three Little Kittens
27. Humpty Dumpty
28. Do You Know the Muffin Man?
29. London Bridge
30. Row, Row, Row Your Boat

SONG LYRICS

Song 1

I'm a cool cat, I like to sing.
I have pawsitively, purrfect vibes.

Song 2

Tiger's nimble, tiger's quick,
Dancing in the jungle, lookin' so slick!

Song 3

Hey little lion cubs, find your groove!
It's time for a jungle party, get ready to move!

Song 4

Silly foxy, little foxy fox.
Dancing on the rocks, in your silly socks.

Song 5

Bear's got the moves, his paws are a-tappin'.
Bear's found his groove, the rhythm's got him snapping.

Song 6

Elephant's floppy ears,

Flip and flop all around.
Elephant stomps her feet,
Swinging her trunk up and down.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department at 1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at vtechkids.com and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®

Model: 5681

Product Name: DJ Scratch Cat Record Player TM

Responsible Party: VTech Electronics North America, LLC

Address: 1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004

Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE

OPERATION.
CAN ICES-003(B)/NMB-003(B)

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com
vtechkids.ca


Read our complete warranty policy online at

vtechkids.com/warranty
vtechkids.ca/warranty



© 2024 VTech Holdings Limited.
All rights reserved.
IM-568100-000
Version:0

Documents / Resources

	<p>vtech DJ Scratch Cat Record Player [pdf] Instruction Manual</p> <p>DJ Scratch Cat Record Player, Scratch Cat Record Player, Cat Record Player, Record Player, Player</p>
---	---

References

- vtechkids.com
- vtechkids.com/warranty
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.