



vtech Float And Splash Flamingo Toys Instruction Manual

[Home](#) » [vtech](#) » vtech Float And Splash Flamingo Toys Instruction Manual 

Contents

- [1 vtech Float And Splash Flamingo Toys](#)
- [2 Getting Started](#)
- [3 IMPORTANT BATTERY INFORMATION](#)
- [4 Product Features](#)
- [5 Activities](#)
- [6 CARE & MAINTENANCE](#)
- [7 TROUBLESHOOTING](#)
- [8 CONSUMER SERVICES](#)
- [9 Product Warranty/ Consumer Guarantees](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



vtech Float And Splash Flamingo Toys



Specifications

- **Model:** Float & Splash
- **Battery:** 1 AAA (AM-4/LR03) battery (not included)
- **Recommended Battery Type:** Alkaline or fully charged Ni-MH rechargeable batteries

Getting Started

1. Make sure the unit is turned Off.
 2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
 3. If a used battery is present, remove it from the unit by pulling up on one end of the battery.
 4. Install 1 new AAA (AM-4/LR03) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
 5. Replace the battery cover and tighten the screw to secure it.
- **WARNING:** Adult assembly is required for battery installation. Keep batteries out of reach of children.
 - **WARNING:** All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords, and packaging screws are not part of this toy and should be discarded for your child's safety.
 - Please keep this instruction manual as it contains important information.

IMPORTANT: BATTERY INFORMATION

1. Unlock the Packaging Locks:
 - Rotate the packaging locks 90 degrees anticlockwise.
 - Pull out the packaging locks and discard them.

Disposal of batteries and product

1. **On/Off Button:** To power on the character, press the On/Off Button (). To power off the character, press this button again.
2. **Automatic Power Off:** After approximately 45 seconds of inactivity, the character will automatically power off.
 - The character can be turned on again by pressing the Light Up Button.

Activities

1. Press the On/Off Button () to hear a song and to hear the characters introduce themselves. The light will flash with the responses.
2. Keep pressing the Light Up Button to hear different phrases, sound effects, 3 songs, and 15 melodies.

WARNINGS

- Water cannot enter the electronic components if the battery compartment door is closed properly.
- Tests were carried out by immersing the toy under water to a depth of 15cm for 30 minutes.
- Acoustic performance is reduced when the toy is immersed in water.

CARE & MAINTENANCE

1. Remove the unit from the water after each use.
2. Keep the unit clean by wiping it with a slightly damp cloth.
3. Keep the unit out of direct sunlight and away from any direct heat source.
4. Make sure to rinse and dry all the elements of the unit before storing.
5. Remove the batteries when the unit will not be in use for an extended period.
6. Do not drop the unit on hard surfaces.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to play with.

FAQ

Q: What type of battery does this toy require?

- **A:** This toy requires 1 AAA (AM-4/LR03) battery (not included).
- For best performance, we recommend using alkaline batteries or fully charged Ni-MH rechargeable batteries.

Q: How do I install the battery?

- **A:** To install the battery, make sure the unit is turned off.
- Locate the battery cover on the back of the unit and use a screwdriver to loosen the screw. Open the battery cover and remove any used battery if present.
- Install 1 new AAA (AM-4/LR03) battery following the diagram inside the battery box. Finally, replace the battery cover and tighten the screw to secure it.

 
Q: Can I use this toy in water?

- **A:** Yes, this toy can be operated in water when fully assembled under the instructions.
- However, please ensure that the battery compartment is properly closed before putting the toy in contact with water.

Getting Started

Battery Removal and Installation


1. Make sure the unit is turned Off.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If a used battery is present, remove it from the unit by pulling up on one end of the battery.
4. Install 1 new AAA (AM-4/LR03) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure it.

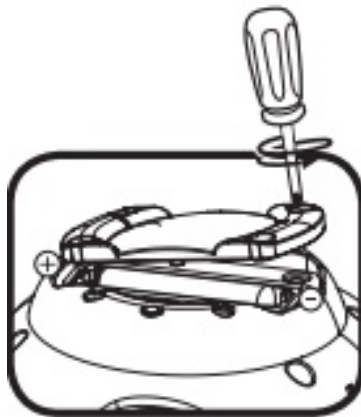

WARNING: Adult assembly is required for battery installation. Keep batteries out of reach of children.

Unlock the Packaging Locks:

 1. Rotate the packaging locks 90 degrees anticlockwise.
2. Pull out the packaging locks and discard them.

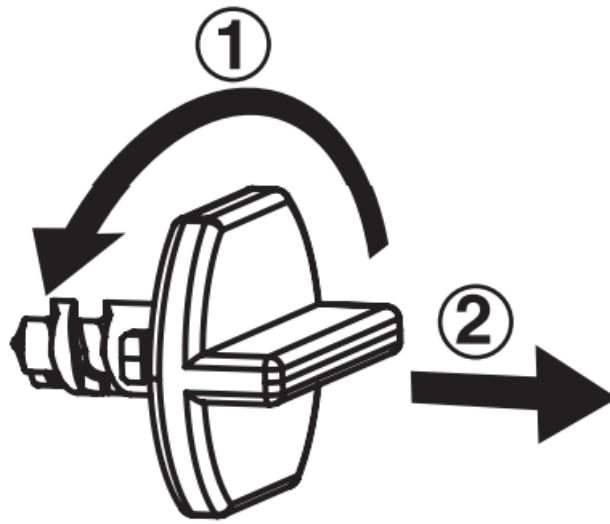

- **WARNING:** All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords, and packaging screws are not part of this toy, and should be discarded for your child's safety.
- **NOTE:** Please keep this instruction manual as it contains important information.

IMPORTANT BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in a fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.


Disposal of batteries and product

- The crossed-out wheellie bin symbols on products and batteries, or their respective packaging, indicate they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.
- The chemical symbols Hg, Cd, or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd), or lead (Pb) set out in the Batteries and Accumulators Regulation.
- The solid bar indicates that the product was placed on the market after 13th August 2005.
- Please dispose of your product and batteries responsibly.
- In the UK, give this toy a second life by disposing of it at a small electrical collection point* so all of its materials can be recycled.

- Learn more at: www.vtech.co.uk/recycle
- www.vtech.com.au/sustainability/recycled.
- Visit www.recyclenow.com to see a list of collection points near you.

 
Product Features

1. On/Off Button

- To power on the character, press the On/Off Button (). To power off the character, press this button again.


2. Automatic Power Off


- After approximately 45 seconds of inactivity, the character will automatically power off. The character can be turned on again by pressing the Light Up Button.

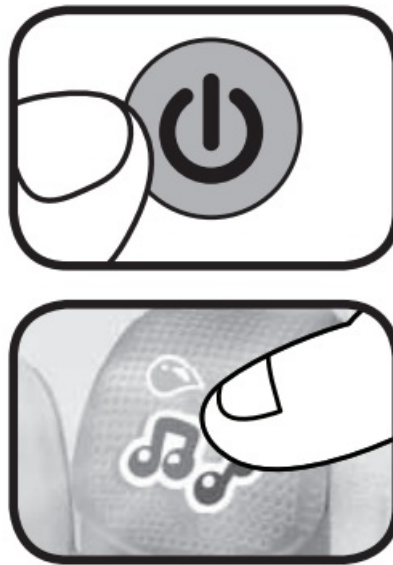

- **NOTE:** If the unit powers down whilst playing, please install a new battery.
- **WARNING:** The battery compartment must be properly closed, as per the instructions in this manual, before putting the toy in contact with water.
- The toy is to be operated in water only when fully assembled under the instructions.

Activities

 1. Press the On/Off Button () to hear a song and to hear the characters introduce themselves. The light will flash with the responses.
2. Keep pressing the Light Up Button to hear different phrases, sound effects, 3 songs, and 15 melodies.

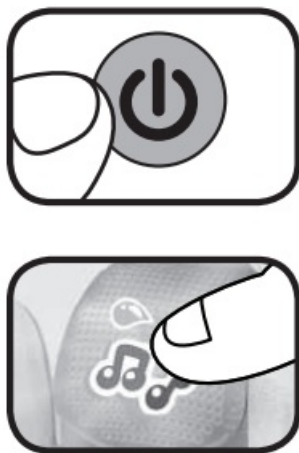

WARNINGS

- Batteries must be changed by an adult.
- Do not use the toy in salt water.
- We do not recommend submerging the unit in the water. If the unit does get submerged in the water, please dry the unit completely.
- To prevent drowning, never leave a child unattended in the bath.
- Use a thermometer to check the temperature of the water before sitting a child in the bath. Children have very sensitive skin and can burn easily if the water is too hot.
- The toy can only be used in water between 10°C and 45°C.
- After the play, empty any water that may have accumulated (particularly in the loudspeaker) and dry the toy.
- This electronic toy is intended for use in the bath and is waterproof when used as intended. Water cannot enter the electronic components if the battery compartment door is closed properly.
- Tests were carried out by immersing the toy under water to a depth of 15cm for 30 minutes. Acoustic performance is reduced when the toy is immersed in water.

CARE & MAINTENANCE

1. Remove the unit from the water after each use.
2. Keep the unit clean by wiping it with a slightly damp cloth.
3. Keep the unit out of direct sunlight and away from any direct heat source.
4. Make sure to rinse and dry all the elements of the unit before storing.
5. Remove the batteries when the unit will not be in use for an extended period.
6. Do not drop the unit on hard surfaces.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to play with again.

5. If the product still does not work, install a brand-new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help.

CONSUMER SERVICES

- Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products.
- However, errors sometimes can occur. You need to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have.
- A service representative will be happy to help you.

UK Customers:

- **Phone:** 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) **Website:** www.vtech.co.uk/support

Australian Customers:

- **Phone:** 1800 862 155
- **Website:** support.vtech.com.au


NZ Customers:

- **Phone:** 0800 400 785
- **Website:** support.vtech.com.au







Product Warranty/ Consumer Guarantees

- **UK Customers:** Read our complete warranty policy online at vtech.co.uk/warranty.
 - **Australian Customers:** VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES
 - Under the Australian Consumer Law, many consumer guarantees apply to goods and services supplied by VTech Electronics (Australia)
 - Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information
 - Visit our website for more information about our products, downloads, resources, and more.
 - www.vtech.co.uk
 - www.vtech.com.au
 - TM & © 2019 VTech Holdings Limited.
 - All rights reserved.
 - 91-003782-015 UK
-

Documents / Resources

	vtech Float And Splash Flamingo Toys [pdf] Instruction Manual Float And Splash Flamingo Toys, Splash Flamingo Toys, Flamingo Toys, Toys
---	--

References

-  [Support : VTech Electronics](#)
-  [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
-  [VTech Toys Australia - Electronic Learning Toys - Best Learning Toys - VTech Australia and New Zealand](#)
-  [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
-  [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
-  [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [User Manual](#)