

vtech Hover Spy Chase Instruction Manual

Home » vtech » vtech Hover Spy Chase Instruction Manual



nickelodeon.





Contents

- 1 Hover Spy Chase
- 2 INTRODUCTION
- **3 INCLUDED IN THE PACKAGE**
- **4 IMPORTANT NOTES**
- **5 GETTING STARTED**
- **6 ACTIVATE NORMAL PLAY MODE**
- **7 PRODUCT FEATURES**
- **8 ACTIVITIES**
- 9 CARE & MAINTENANCE
- **10 TROUBLESHOOTING**
- 11 CONSUMER SERVICES
- 12 PRODUCT WARRANTY/CONSUMER

GUARANTEES

- 13 Documents / Resources
 - 13.1 References

Hover Spy Chase



© 2024 Spin Master PAW Productions Inc. All rights reserved.

PAW Patrol and all related titles, logos and characters are trademarks of Spin Master Ltd. Nickelodeon and all

related titles and logos are trademarks of Viacom International Inc.

INTRODUCTION

Thank you for purchasing the VTech® Hover Spy Chase. Patrol around with Super Spy Chase as he moves around, talking and avoiding obstacles.



INCLUDED IN THE PACKAGE

- VTech® Hover Spy Chase
- · Quick Start Guide


WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks

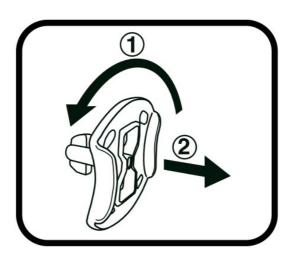


- 1. Rotate the packaging locks 90 degrees counterclockwise.
- 2. Pull out the packaging locks.

IMPORTANT NOTES


1. For optimal performance, please use the unit on a flat, smooth floor. It is advisable to play with the unit in a spacious indoor area.


NOTE: Don't put on high tables or high surfaces.



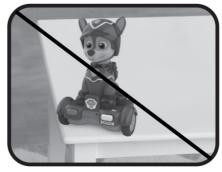

2. For your child's safety, ensure that the wheels are kept away from clothing, body or hair.

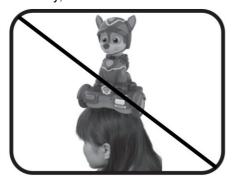

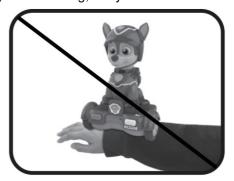

3. Avoid playing under direct sunlight as this may affect the sensors.

GETTING STARTED




WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.

Battery Removal and Installation

- 1. Make sure the unit is turned Off.
- 2. Find the two battery covers located on the bottom of the unit, use a screwdriver to loosen the screws and then open the battery covers.
- 3. Remove old batteries by pulling up on one end of each battery.
- 4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery boxes. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
- 5. Replace the battery covers and tighten the screws to secure.

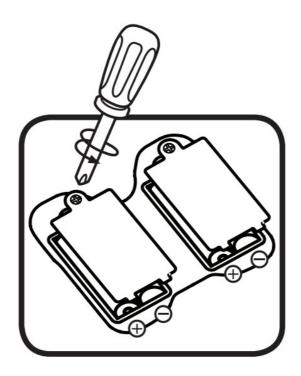


ACTIVATE NORMAL PLAY MODE

This product is in Try-Me mode in the packaging.

To activate normal play mode: Slide the Off/Low/High Volume Switch to Off.

Then slide it to Low or High)) or High

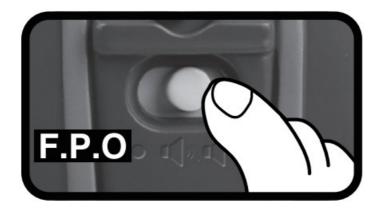

NOTE: Removing the batteries for approximately 5 seconds will also activate normal play mode. See Battery Removal and Installation instructions.

IMPORTANT: BATTERY INFORMATION

• Insert batteries with the correct polarity (+ and -).

- · Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- · Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. Power Switch & Volume Control



2. Mode Selector

Move the Mode Selector to select a mode of play. There are 3 modes to choose from.



3. Pup Pack Button

Press the Pup Pack Button to hear Chase activate his tools or answer questions.




4. Pup Tag Button

Press the Pup Tag Button to hear Chase calling the teammates answer questions.



5. Sensors

The Sensors on the front and back of the vehicle help Chase avoid obstacles and allow you to guide his movement. If you are having problems triggering the sensors, make sure the obstacles are placed directly in front of the sensors. Avoid direct sunlight as this may affect the Sensors.

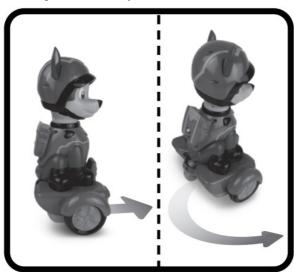

6. Automatic Shut-Off

To preserve battery life, VTech® Hover Spy Chase will automatically turn Off after several minutes without input.

VTech® Hover Spy Chase can be woken up again by pressing the Pup Tag Button or the Pup Pack Button.

NOTE: If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Free Play

Explore with Chase as he talks, zooms around and avoids obstacles. Trigger the Sensors to guide his movements. Press Pup Pack Button or Pup Tag Button to play fun phrases.

2. Hide And Seek

Find where Chase is hiding. Wait while Chase counts or plays music. After Chase finishes counting or when the music, press the Pup Pack Button or Pup Tag Button stops, find him and then...

3. Spy Time

Play I spy and press the Pup Tag Button or Pup Pack Button to answer questions.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries if the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit On. The unit should now be ready to use again.
- 5. If the unit still does not work, replace with a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S.,1-877-352-8697 in Canada, or visit our website vtechkids.com and fill out our Contact Us form located under the Customer Support link.

Creating and developing VTech® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name:	VTech®
Model:	5735
Product Name:	PAW Patrol Hover Spy Chase
Responsible Party:	VTech Electronics North America, L.L.C.
Address:	1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION. CAN ICES-003(B)/NMB-003(B)

CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers: Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/CONSUMER GUARANTEES

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED - CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by **VTech**

Electronics (Australia) Pty Limited. Please refer to <u>vtech.com.au/consumerquarantees</u> for further information.

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com vtechkids.ca vtech.com.au

Read our complete warranty policy online at vtechkids.com/warranty
vtechkids.com/warranty



TM & © 2024 VTech Holdings Limited.
All rights reserved.
IM-573500-000
Version:0

Documents / Resources



vtech Hover Spy Chase [pdf] Instruction Manual Hover Spy Chase, Hover Spy Chase, Spy Chase, Chase

References

- V Support : VTech Electronics
- vtechkids.com
- V vtechkids.com/warranty
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.