

## **Vtech IM-542500 Style and Sparkle Unicorn Instruction Manual**

Home » vtech » Vtech IM-542500 Style and Sparkle Unicorn Instruction Manual

#### **Contents**

- 1 Vtech IM-542500 Style and Sparkle Unicorn
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 INTRODUCTION**
- **5 GETTING STARTED**
- **6 PRODUCT FEATURES**
- **7 ACTIVITIES**
- **8 MELODY LIST**
- 9 CARE & MAINTENANCE
- 10 TROUBLESHOOTING
- 11 PRODUCT WARRANTY/ CONSUMER

**GUARANTEES** 

- 12 Documents / Resources
  - 12.1 References
- **13 Related Posts**



Vtech IM-542500 Style and Sparkle Unicorn



#### **Product Information**

#### **Specifications**

- Product Name: Style & Sparkle Unicorn
- Battery Type: 2 AA (AM-3/LR6) batteries
- Recommended Battery Type: Alkaline or fully charged Ni-MH rechargeable batteries
- Volume Settings: Low volume, High volume

#### **Product Usage Instructions**

### **Getting Started**

#### 1. Unlock the Packaging Locks

- Rotate the packaging locks 90 degrees anticlockwise.
- Pull out the packaging locks and discard.

#### 2. Battery Removal and Installation

- 1. Make sure the unit is turned Off.
- 2. Find the battery cover located on the side of the unit.
- 3. Use a screwdriver to loosen the screw and open the battery cover.
- 4. Remove old batteries by pulling up on one end of each battery.
- 5. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.

6. Replace the battery cover and tighten the screw to secure.

#### **Product Features**

#### 1. On/Off/Mode Switch

To turn the unit On, slide the switch to the Learning Mode or Role Play Mode position. To turn the unit Off, slide the switch to the Off position.

#### 2. Volume Switch

Find the Volume Switch located on the bottom of the unicorn. To adjust the volume, slide the Volume Switch to the Low volume or High volume position.

#### 3. Six Accessories

Place an accessory on the Head or Tail Recognition Point to learn about the accessory, counting, colors, and more. Enjoy role play fun!

#### 4. Recognition Points

Place an accessory on the Head or Tail Recognition Point on the unicorn to trigger fun responses and lights.

#### 5. Light Up Horn

The Light Up Horn lights up in blue with the voice responses and songs.

#### 6. Colour Changing Star

The Colour Changing Star lights up different colors when songs and melodies are played.

#### **FAQ (Frequently Asked Questions)**

#### Q: What type of batteries does the Style & Sparkle Unicorn require?

A: The unicorn requires 2 AA (AM-3/LR6) batteries.

#### Q: What is the recommended battery type for best performance?

A: Alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended for best performance.

#### • Q: How do I adjust the volume of the unicorn?

A: Find the Volume Switch located on the bottom of the unicorn and slide it to the Low volume or High volume position to adjust the volume.

#### • Q: What happens when I place an accessory on the Recognition Points?

A: Placing an accessory on the Head or Tail Recognition Point triggers fun responses and lights.

#### • Q: How does the Light Up Horn work?

A: The Light Up Horn lights up in blue along with the voice responses and songs.

#### • Q: What does the Colour Changing Star do?

A: The Colour Changing Star lights up in different colors when songs and melodies are played.

#### Style & Sparkle Unicorn

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

stimulate their interest

Toys that will



Interactive toys to develop their imagination and encourage language development

# I need...

Computers

for curriculum related learning

...challenging activities that can keep pace with

Electronic Learning


Cool, aspirational and inspiring computers

my growing mind



#### INTRODUCTION

Have a magical adventure with me, the Style & Sparkle Unicorn by VTech®! Adding stylish accessories to my horn and tail makes my star and horn light up. I like to be the star of the show! I can teach you about objects, colours and counting, or we can let our imagination flow. Let's have lots of fun together!

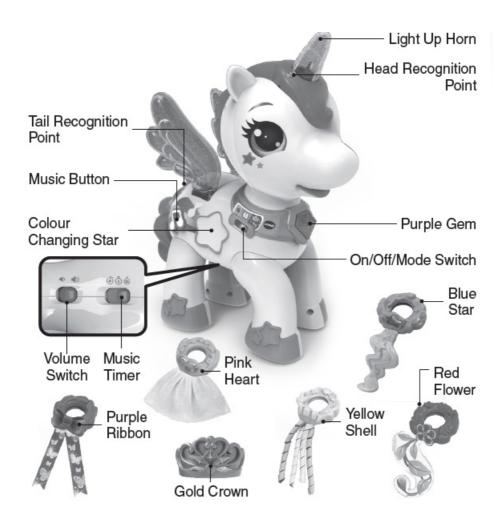

#### **INCLUDED IN THE PACKAGE**

- Style & Sparkle Unicorn
- 6 Accessories
- · Quick Start Guide

#### **WARNING**


All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

#### **NOTE**

Please keep this Instruction Manual as it contains important information.

#### **Unlock the Packaging Locks**


- 1. Rotate the packaging locks 90 degrees anticlockwise.
- 2. Pull out the packaging locks and discard.

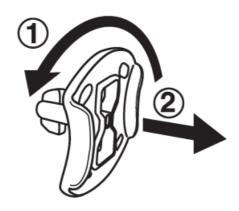

#### **GETTING STARTED**

Battery Removal and Installation

- 1. Make sure the unit is turned Off.
- 2. Find the battery cover located on the side of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.
- 4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni- MH rechargeable batteries are recommended).
- 5. Replace the battery cover and tighten the screw to secure.

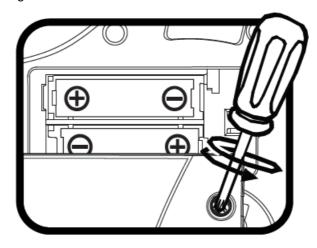

WARNING: Adult assembly required for battery installation. Keep batteries out of reach of children.

#### **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- · Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

#### RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- · Do not charge non-rechargeable batteries.

#### Disposal of batteries and product

- The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.
- The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



- The solid bar indicates that the product was placed on the market after 13th August, 2005.
- Please dispose of your product and batteries responsibly. In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled. Learn more at:
  - www.vtech.co.uk/recycle
  - www.vtech.com.au/sustainability
- \* Visit www.recyclenow.com to see a list of collection points near you.

#### **PRODUCT FEATURES**

#### 1. On/Off/Mode Switch

To turn the unit On, slide the switch to the Learning Mode




or Role Play .

Mode position. To turn


the unit Off, slide the switch to the Off




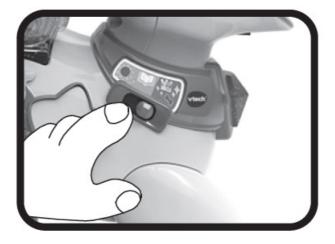

#### 2. Volume Switch

 Find the Volume Switch located on the bottom of the unicorn. To adjust the volume, slide the Volume Switch to



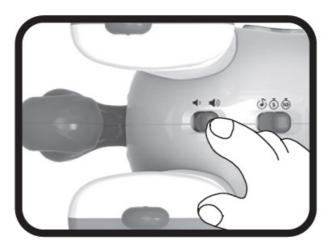

#### 3. Six Accessories

Place an accessory on the Head or Tail Recognition Point to learn about the accessory, counting, colours and more. Enjoy role play fun!

#### 4. Recognition Points

Place an accessory on the Head or Tail Recognition Point on the unicorn to trigger fun responses and lights.





#### 5. Light Up Horn

The Light Up Horn lights up in blue with the voice responses and songs.

#### 6. Colour Changing Star


The Colour Changing Star lights up different colours when songs and melodies are played.





#### 7. Music Button

Press the Music Button to play songs and melodies.

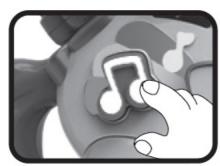

#### 8. Music Timer

Find the Music Timer located on the bottom of the unicorn. Slide the Music Timer to select Normal Play




, Five-Minute Timer



or Ten-Minute Timer




music setting.

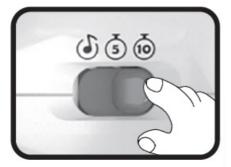

## 9. Purple Gem

Press the Purple Gem to hear fun phrases, sounds and to see the unicorn's horn light up.

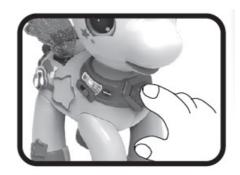

#### 10. Rolling Wheels

Push the unicorn along on the wheels built into the hooves.

#### 11. Flapping Wings

Gently flap the unicorn's wings back and forth.





#### 12. Automatic Shut-Off

To preserve battery life, Style & Sparkle Unicorn will automatically shut off after several minutes without input. The unicorn can be turned on again by sliding the On/Off/Mode



#### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

#### **ACTIVITIES**

#### 1. Learning Mode

Slide the On/Off/Mode Switch to Learning Mode and place an accessory on a Head or Tail Recognition Point to hear about objects, colours, counting and fun phrases. Press the Purple Gem to hear fun facts about unicorns.



#### 2. Role Play Mode

- 1. Slide the On/Off/Mode Switch to Role Play Mode and place an accessory on a Head or Tail Recognition Point to hear phrases for pretend play fun.
- 2. Press the Purple Gem to hear unicorn sounds and fun phrases when there is no accessory on either of the Recognition Points.


#### 3. Music Timer

1. Slide the Music Timer to , then press the Music Button to hear sing-along songs and melodies.



- 2. Slide the Music Timer to , then press the Music Button to hear melodies. The melodies will play for 10 minutes.
- 3. Place an accessory on the Head or Tail Recognition Point to hear fun sounds while the music is playing.



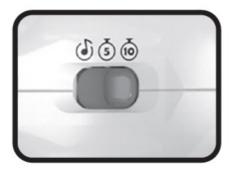

- 1. Three Little Kittens
- 2. Sugarplum Fairy
- 3. London Bridge

#### SONG LYRICS

#### 1. Song 1

It's going to be a magical day, We will sparkle wherever we go! Believe in ourselves, today is our day!

#### 2. Song 2

- 1. Let's accessorise! I can wear a crown, a star,
- 2. A heart, a shell, ribbons or flowers. The combinations are endless!

#### 3. Song 3

- 1. Beautiful colours everywhere, Gold, red, yellow, purple, blue and pink. We will explore and learn together,
- 2. In the magical world of colours!

#### 4. Song 4

- 1. Flying from here to there, Got wings on my back and colours in my hair! Oh yeah! And magic under my feet,
- 2. It's really sweet!
- 3. Won't you come and shine with me?
- 4. Let's go!

#### **CARE & MAINTENANCE**

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the product out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries if the unit will not be in use for an extended period of time.
- 4. Do not drop the product on a hard surface and do not expose the product to excess moisture or water.

#### **TROUBLESHOOTING**

If for some reason the unit stops working or malfunctions while playing with the accessories, please remove the accessories and place them back onto the unicorn.

If the unit still isn't functioning, or if for some reason the unit stops working, please follow these steps

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit back On. The unit should now be ready to use again.
- 5. If the unit still does not work, install a new set of batteries.

#### **CONSUMER SERVICES**

• Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our

products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

#### UK Customers

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

• Website: www.vtech.co.uk/support

#### Australian Customers

Phone: 1800 862 155

Website: <u>support.vtech.com.au</u>

#### NZ Customers:

Phone: 0800 400 785

Website: <u>support.vtech.com.au</u>

#### PRODUCT WARRANTY/ CONSUMER GUARANTEES

#### UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

#### Australian Customers

- VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED CONSUMER GUARANTEES
- Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to <a href="https://www.vtech.com.au/consumerguarantees">vtech.com.au/consumerguarantees</a> for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk

www.vtech.com.au

TM & © 2023 VTech Holdings Limited. All rights reserved.

IM-542500-001

Version:0

#### **Documents / Resources**



<u>Vtech IM-542500 Style and Sparkle Unicorn</u> [pdf] Instruction Manual IM-542500 Style and Sparkle Unicorn, IM-542500, Style and Sparkle Unicorn, Sparkle Unicorn, Unicorn

#### References

- **10** Support: VTech Electronics
- V Electronic Learning Toys | Best Learning Toys | VTech UK

- VTech Toys Australia Electronic Learning Toys Best Learning Toys VTech Australia and New Zealand
- ♣ Recycle Now
- V Electronic Learning Toys | Best Learning Toys | VTech UK
- ▼ Electronic Learning Toys | Best Learning Toys | VTech UK
- ■ Electronic Learning Toys | Best Learning Toys | VTech UK
- VTech Toys Australia Electronic Learning Toys Best Learning Toys VTech Australia and New Zealand
- User Manual

Manuals+, Privacy Policy