

vtech IM-573600-004-V0 Twist Adventures Dino Discoveries



vtech IM-573600-004-V0 Twist Adventures Dino Discoveries Instruction Manual

[Home](#) » [vtech](#) » vtech IM-573600-004-V0 Twist Adventures Dino Discoveries Instruction Manual 

Contents

- [1 vtech IM-573600-004-V0 Twist Adventures Dino Discoveries](#)
- [2 Product Usage Instructions](#)
- [3 Frequently Asked Questions](#)
- [4 INTRODUCTION](#)
- [5 INCLUDED IN THE PACKAGE](#)
- [6 GETTING STARTED](#)
- [7 RECHARGEABLE BATTERIES](#)
- [8 PRODUCT FEATURES](#)
- [9 ACTIVITIES](#)
- [10 CARE & MAINTENANCE](#)
- [11 TROUBLESHOOTING](#)
- [12 FCC Statement](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)



vtech IM-573600-004-V0 Twist Adventures Dino Discoveries



Specifications:

- Product Name: Twist Adventures™ Dino Discoveries
- Power Source: 2 AAA (AM-4/LR03) batteries
- Recommended Battery Type: Alkaline or fully charged Ni-MH rechargeable batteries
- Features: Power Switch, Mode Switch, Buttons with LED lights, Automatic Shut-Off

Product Usage Instructions

Getting Started:

1. Ensure the unit is turned Off.
2. Use a screwdriver to open the battery cover on the back of the unit.
3. Remove old batteries and install 2 new AAA batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw securely.

Product Features:

- **Power Switch:** Slide to turn the cube On or Off.
- **Mode Switch:** Choose from 3 modes – Discovery, Mission, or Challenge.
- **Buttons:** Press the glowing Button as instructed during gameplay.
- **Automatic Shut-Off:** Cube turns off after 1.5 minutes of inactivity to save battery life.

Activities:

1. **Discovery:** Hear fun facts about dinosaurs and fossils by aligning a picture with a zone and pressing a button.
2. **Mission:** Follow clues to find and scan dinosaurs in the Dino Zoo. Bring back escaped dinosaurs to the Dino Center in special events.
3. **Challenge:** Match specific dinosaurs/fossils within a time limit. Earn stars by making correct matches.

Care & Maintenance:

- Wipe units with a slightly damp cloth to keep them clean.
- Avoid direct sunlight and heat sources.
- Remove batteries if not in use for an extended period.
- Avoid dropping units on hard surfaces and exposure to moisture/water.

Troubleshooting:


1. If unit malfunctions, turn it Off and remove batteries.
2. Let it stand for a few minutes before replacing batteries and turning it On again.
3. If issues persist, try using a new set of batteries.

Frequently Asked Questions

- **Q: How can I switch between different modes during gameplay?**
 - A: Use the Mode Switch to select between Discovery, Mission, or Challenge modes.
- **Q: What should I do if the unit stops working?**
 - A: Try turning the unit Off, removing and replacing the batteries, then turning it back On. If issues persist, consider using a new set of batteries.

INTRODUCTION

Thank you for purchasing the Twist Adventures™ Dino Discoveries! Elevate your fidget fun all while learning about dinosaurs and other prehistoric creatures! Twist and turn to get the right dino lined up, then press to discover some great dino facts.

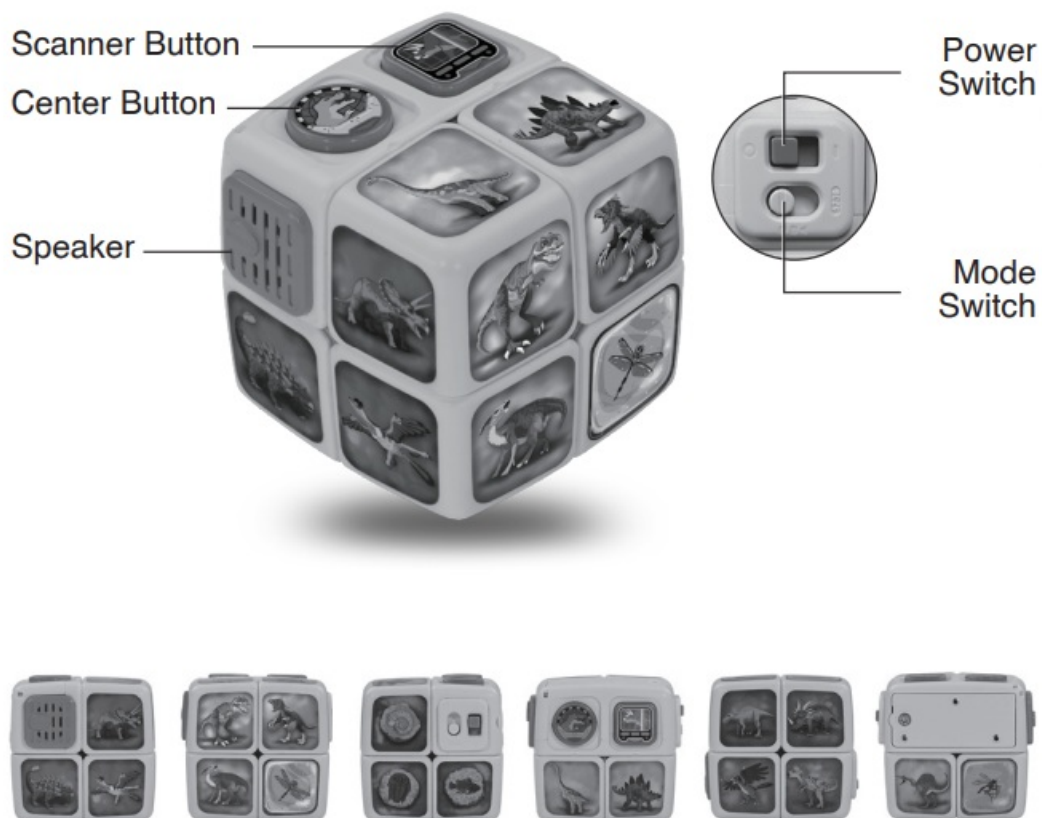

INCLUDED IN THE PACKAGE


- Twist Adventures™ Dino Discoveries Cube
- Mini Dino Field Guide
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE


Please save this Instruction Manual as it contains important information.

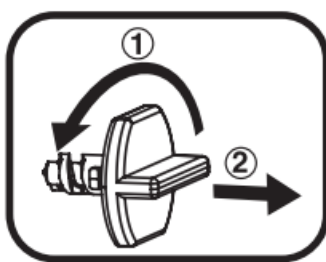

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned Off.
2. Locate the battery cover on the back of each unit, use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries into each unit following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

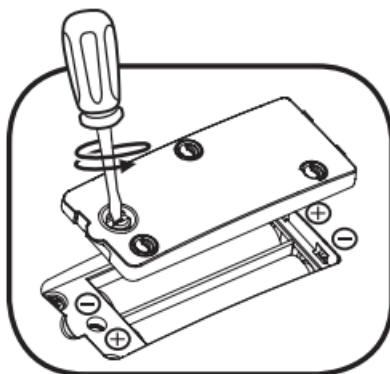

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries

WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children

PRODUCT FEATURES

Power Switch

- To turn the cube On, slide the Power Switch to the On position.
- To turn the cube Off, slide the Power Switch to the Off position.

Mode Switch

Slide the Mode Switch to different position to choose from 3 modes to play: Discovery, Mission or Challenge.

Buttons

- The Buttons will light up to indicate game responses.
- Press the glowing Button as instructed during game play.

Automatic Shut-Off

When idle for 1.5 minutes the Twist Adventures™ Dino Discoveries Cube will turn off automatically to conserve battery life. The cube can be turned on again by pressing any button.



ACTIVITIES

Discovery

This is a free discovery mode. Move a picture to align with a zone and press the button to hear fun facts about dinosaurs and fossils.

Mission

Start your adventure in the Dino Zoo. Follow the clues to find the dinosaur and scan them with the Dino Scanner

Button . In the special event, follow the clues and bring the escaped dinosaur back to the Dino Center .

Challenge

This is a timed challenge game. A specific dinosaur or fossil will be named. Twist to move that face to align with the glowing zone. Press the glowing button to confirm your answers. See how many matches you can make in a limited time and see if you can earn three stars.

CARE & MAINTENANCE

1. Keep the units clean by wiping them with a slightly damp cloth.
2. Keep the units out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the units will not be in use for an extended period of time.
4. Do not drop the units on hard surfaces and do not expose the units to moisture or water.

TROUBLESHOOTING

If a unit loses connection, stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S., 1-[877-352-8697](tel:877-352-8697) in Canada, or by going to our website vtechkids.com and filling out our Contact Us form located under the Customer Support link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

FCC Statement

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

- Trade Name: VTech®
- Model: 5736
- Product Name: Twist Adventures™ Dino Discoveries
- Responsible Party: VTech Electronics North America, L.L.C.
- Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
- Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Visit our website for more information about our products, downloads, resources and more.


- vtechkids.com
- vtechkids.ca

Read our complete warranty policy online at

- vtechkids.com/warranty
- vtechkids.ca/warranty

© 2023 VTech Holdings Limited. All rights reserved. IM-573600-004 Version:0

Documents / Resources

	<p>vtech IM-573600-004-V0 Twist Adventures Dino Discoveries [pdf] Instruction Manual IM-573600-004-V0, IM-573600-004-V0 Twist Adventures Dino Discoveries, Twist Adventures Di no Discoveries, Adventures Dino Discoveries, Dino Discoveries, Discoveries</p>
---	---

References

- [!\[\]\(cd3e54d951a9fb854f48e4697cf550f9_img.jpg\) VTech Canada | Official Electronic Learning Toys & Games for Kids](#)
- [!\[\]\(cc729e263f29c0a76fbdc4cfe67fceb0_img.jpg\) VTech Canada | Official Electronic Learning Toys & Games for Kids](#)
- [!\[\]\(90d36d418f8f7ab67431ba2525e00a5e_img.jpg\) Best Kids Tech Toys | Electronic Learning Toys | VTech America](#)
- [!\[\]\(f70e40faeec369ff477dbaef549ee05b_img.jpg\) Best Kids Tech Toys | Electronic Learning Toys | VTech America](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.