

# vtech IM-576403 Swipe and Learn Laptop Instruction Manual

## Contents

- 1 IM-576403 Swipe and Learn Laptop
  - 1.1 Swipe & Learn Laptop
  - 1.2 INTRODUCTION
  - 1.3 INCLUDED IN THIS PACKAGE
  - 1.4 GETTING STARTED BATTERY REMOVAL AND INSTALLATION
  - 1.5 IMPORTANT: BATTERY INFORMATION
  - 1.6 RECHARGEABLE BATTERIES:
  - 1.7 Disposal of batteries and product
  - 1.8 PRODUCT FEATURES
  - 1.9 ACTIVITIES
  - 1.10 CARE & MAINTENANCE
  - 1.11 TROUBLESHOOTING
  - 1.12 CONSUMER SERVICES
- 2 Documents / Resources
  - 2.1 References
- 3 Related Posts

## IM-576403 Swipe and Learn Laptop


### Swipe & Learn Laptop





## INTRODUCTION

Slide into fun play with the VTech® Swipe & Learn Laptop. Get busy learning about letters, objects, numbers, weather, and more. Move the slider to music mode to play with the animal band.

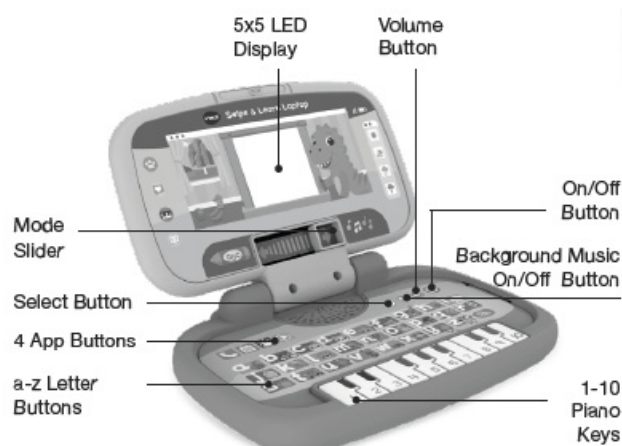

## INCLUDED IN THIS PACKAGE

- One VTech® Swipe & Learn Laptop
- Quick Start Guide


## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

**NOTE**

Please save this Instruction Manual as it contains important information.

Unlock the packaging locks:

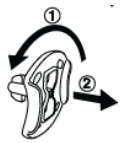

1. Rotate the packaging lock 90 degrees anticlockwise.

2. Pull out the packaging lock.

**GETTING STARTED  
BATTERY REMOVAL AND INSTALLATION**

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw. Then, open the cover.
3. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure the battery cover.

**WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

**IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

**RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product

The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly. In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)

[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

## PRODUCT FEATURES

### 1. MODE SLIDER

Slide the mode slider to the left to enter the Learning Fun Mode.

Slide the mode slider to the right to enter the Music Time Mode.

### 2. SELECT BUTTON

In the Learning Fun mode, press this button to hear letter and number key related phrases randomly.

In the Music Time mode, press this button to select the instrument to change the instrument sound or listen to the instrument tune.

### 3. BACKGROUND ON/OFF BUTTON

Press this button to turn off the background music or to turn on the background music again.

### 4. ON/OFF BUTTON

Press this button to turn the laptop on and off.

### 5. 4 APP BUTTONS

Press the different app buttons to learn different everyday situations, through the 2 modes.

### 6. SURPRISE BUTTON

The laptop will play some funny sounds and animations in each mode.

### 7. LETTER BUTTONS

Press the letter buttons to learn the letters, phonic sounds and objects or play a melody.

#### **8. PIANO KEYS**

Press the piano keys to learn numbers and counting or play a music note.

#### **9. AUTOMATIC SHUT-OFF**

To preserve battery life, the Swipe & Learn Laptop will automatically power-down after about 1 minute without input. The unit can be turned on again by pressing the On/Off button . The unit will automatically turn off when the batteries are low on power.

#### **NOTE**

If the unit powers down or if the lights fade during play, please install a new set of batteries.

### **ACTIVITIES**

The Swipe & Learn Laptop offers 2 modes and 4 apps.

#### **1. Learning Fun mode**

26 Letter Buttons – Press the letter buttons to learn letters, phonics and objects.

10 Piano Keys – Press to learn numbers & counting.

Select Button – Press to randomly hear the related phrases of letters or numbers.

Surprise Button – Press this button to play some funny sounds and animations randomly.

4 Apps:

Who's Calling Button

Press this button to learn greetings in Learning Fun mode.

#### **Notes Button**

Laptop will tell you what tasks are coming up.

Daily Weather Tips Button

Hear some weather features and tips on what to wear.

#### **Song Button**

Press to hear the animals sing a chorus.

#### **2. Music Time mode**

26 Letter Buttons – Press the letter buttons to hear a melody.

10 Piano Keys – Press to create your own music or jam the corresponding instrument sounds into the melody.

Select Button – Press to select the instrument to change the instrument sounds or listen to the instrument short tune.

Surprise Button – Press to play a funny sound and animation randomly.

#### 4 Apps:

Who's Calling Button

Press this button to listen to the animals chat.

Notes Button

Reminds you what's happening today!

Weather Report Button

Learn the weather forecast and animal facts.

Song Button

Press to hear the animals sing a chorus.

Song lyrics:

Song 1: Learning new things – one, two, three.

There's so much to do and see.

Numbers, letters and objects too.

We can't wait to learn with you!

Song 2 : We love to sing together,

in any kind of weather.

We dance and play our music,

and you can sing along.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to use again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

## CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with

any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

Australian Customers:

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

NZ Customers:

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

## PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:


Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

Australian Customers:

## VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

## Documents / Resources

	<p><a href="#">vtech IM-576403 Swipe and Learn Laptop</a> [pdf] Instruction Manual</p> <p>IM-576403 Swipe and Learn Laptop, IM-576403, Swipe and Learn Laptop, Learn Laptop, Laptop</p>
---	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.