

vtech Learn and Dance Dino User Guide

Home » vtech » vtech Learn and Dance Dino User Guide

Contents [hide

- 1 vtech Learn and Dance Dino
- **2 INTRODUCTION**
- **3 INCLUDED IN THIS PACKAGE**
- **4 GETTING STARTED**
 - **4.1 BATTERY INSTALLATION**
 - **4.2 BATTERY NOTICE**
- **5 PRODUCT FEATURES**
- **6 ACTIVATE NORMAL PLAY MODE**
- **7 ACTIVITIES**
- **8 SING-ALONG SONG LYRICS**
 - 8.1 General Songs:
 - 8.2 Hip Hop Songs:
 - 8.3 Marching Songs:
 - 8.4 Ballet Melodies:
- 9 CARE & MAINTENANCE
- 10 TROUBLESHOOTING
- 11 CONSUMER SERVICES
- 12 PRODUCT WARRANTY/ CONSUMER
- **GUARANTEES**
- 13 Documents / Resources
 - 13.1 References
- **14 Related Posts**




vtech Learn and Dance Dino



INTRODUCTION

Meet the Learn & Dance Dino by VTech®! Includes 9 action plates that will customise Dino's voice, emotions and dancing styles. When you insert one of the 3 red plates into Dino's back the voice style will change into a dino, cool robot or a fearsome monster! There are also 3 yellow plates to make Dino happy, angry or sleepy and 3 blue plates that make Dino march, dance to hip-hop or ballet.

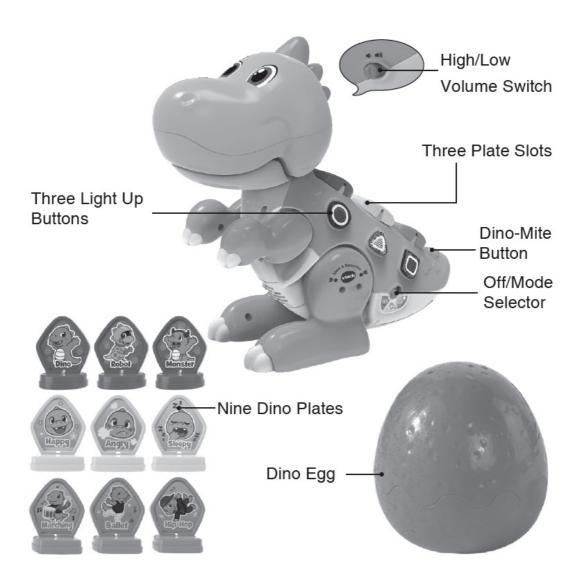

INCLUDED IN THIS PACKAGE

- One Learn & Dance Dino
- · Nine dino plates
- · One dino egg
- · One Parent's Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.


NOTE:

Please keep this Parent's Guide as it contains important information.

GETTING STARTED

Unlock the packaging lock:


- 1. Rotate the packaging lock 90 degrees anticlockwise.
- 2. Pull out the packaging lock and discard.

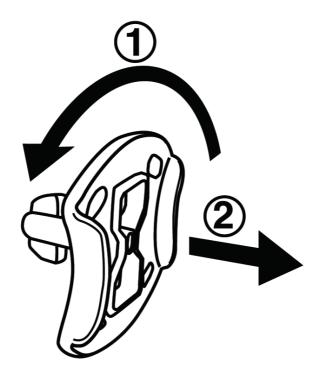

BATTERY INSTALLATION

NOTE: For best performance, remove all factory-installed batteries from the Learn & Dance Dino and use new, alkaline batteries.

- 1. Make sure the unit is turned OFF.
- 2. Locate the battery cover at the bottom of the unit and open it with a screwdriver.
- 3. Install 4 new AA batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
- 4. Replace the battery cover and tighten the screw to secure.

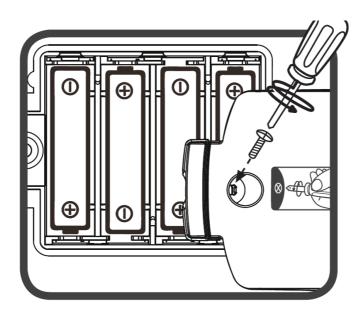

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metalhydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.

- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable, or new and used batteries.
- · Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- · Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005. Help protect the environment by disposing of your product or batteries responsibly. For more information, please visit:

www.recycle-more.co.uk www.recyclenow.com

PRODUCT FEATURES

1. Off/Mode Selector

Slide the Off/Mode Selector to turn the unit On and choose a mode. To turn the unit off, slide the Off/Mode Selector to the Off position.



2. High/Low Volume Switch

Slide the High/Low Volume Switch to select Low or High volume.



3. Light Up Buttons

If there's no Dino Plates inserted on Dino's back, press the Light Up Buttons to learn colours and shapes. If there is a Dino Plate inserted, press the buttons to hear phrases about the corresponding plate.



4. Dino-Mite Button

Press the Dino-Mite Button to see Dino dance in different styles with different songs.



5. Three Plate Slots

Insert a red character plate in the round slot, a yellow emotion plate in the triangle slot and a blue music style plate in the square slot.



6. Nine Dino Plates

Each Dino plate represents a characteristic, emotion or music style. Customise Dino by putting the plates on his back. Once all three slots are filled, Dino will dance and sing according to the combination on his back. There are 27 combinations to discover.

Red Dino Plates include: dino, robot and monster characteristics.



Yellow Dino Plates include: happy, angry and sleepy emotions.



Blue Dino Plates include: marching, ballet and hip hop music styles.



7. Dino Egg

When you have finished playing, store all of the Dino Plates in the Dino Egg.

8. Automatic Shut Off

To preserve battery life, the Learn & Dance Dino will shut off automatically after several minutes without any input. The unit can be turned on again by sliding the Off/Mode Selector or by pressing the Light Up Buttons or Dino-Mite Button. The unit

will also automatically turn off when the batteries are very low.

ACTIVATE NORMAL PLAY MODE

The Learn & Dance Dino is in a try-me mode in the packaging. There are two ways to activate normal play mode:

- 1. Turn the unit On. Move the High/Low Volume Switch from High to Low. You will hear two beeps indicating the unit has entered normal mode.
- 2. When the unit is off, move the High/Low Volume Switch from High to Low and then turn the unit On.

ACTIVITIES

Dino Dances

In this activity, customise Dino by putting the Dino Plates on his back to change his characteristics, emotions and music styles.

Once all 3 plates are in Dino's back, he will sing and dance according to which Dino Plates are inserted. There are 27 different combinations.

Press the Light Up Buttons to learn about colours and shapes or repeat the responses of the inserted Dino Plates. Press the Dino-Mite Button to see Dino sing and dance based on the inserted plates.

Talk With Dino

Let's play a game with Dino! Put the Dino Plates on Dino's back to hear what he says about the inserted plate. Press the three Light Up Buttons to learn about colours and shapes or repeat the responses. Press the Dino-Mite Button to see Dino sing and dance based on the inserted plates.

SING-ALONG SONG LYRICS

General Songs:

Opening Song

I'm a dinosaur.
I'll sing and show my dance moves.
I can't wait to play with you!

Rewarding Song 1

You are so great, and your moves are awesome, too! Thanks for playing with me. Thanks for being you!

Rewarding Song 2

Playing with you is so much fun. Put in more plates and let's do it again!

Mode Song 1

We'll be silly and have a great time.

Mode Song 2

I am your dino friend and I wanna play with you! Put in some plates, and we'll play some games, too!

Hip Hop Songs:

Song 1 (Happy + Dino + Hip Hop)

I'm a happy dino and I'm here to say, I love playing with you each and every day. Our dancing's fly, our flow is fun. We can be friends with everyone!

Song 2 (Happy + Robot + Hip Hop)

I'm a happy robot, beep, beep, beep. I like to move to the robot beat. Come on now and dance with me, Dance like a robot, beep, beep, beep.

Song 3 (Happy + Monster + Hip Hop)

I'm a happy monster, yes I am. Let's dance, let's groove, get ready to jam. Move like a monster, big and strong. It makes me so happy when you dance along.

Song 4 (Angry + Dino + Hip Hop)

I'm a really angry dinosaur.

Don't get too close 'cause I'm ready to roar!

I may seem sweet, but not today.

'Cause I'm roarin' mad, I just had to say!

Song 5 (Angry + Robot + Hip Hop)

Beep, beep, l'm an angry robot. I'm so, so mad, l'm getting hot. I need some space, beep, beep, beep, boop! Give me a minute, and l'll reboot.

Song 6 (Angry + Monster + Hip Hop)

I'm an angry monster, I feel so mad.
'Cause my day wasn't good, it was really bad.
But I'll stomp around and sing this tune,
And know I will feel better soon.

Song 7 (Sleepy + Dino + Hip Hop)

I'm a sleepy dinosaur, ready to snore. When I get so tired, I make a sleepy roar. I just need a quick dino-nap, a little snooze. See you soon!

Song 8 (Sleepy + Robot + Hip Hop)

I'm a sleepy robot, ready to sleep. Sometimes I wanna stay up, beep, beep, beep, beep. But it's time to power down, and rest my head. To get fully charged, I have to go to bed.

Song 9 (Sleepy + Monster + Hip Hop)

I'm a sleepy monster, ready for some rest.

All day I made scary faces, did my very best.

All I want to do is catch up on my sleep.

Close my eyes, and snore some monster sized

Marching Songs:

Song 1 (Happy + Dino + Marching)

Oh when I'm happy,
I like to march.
Oh when I'm happy, I like to march.
Yes, I am happy when I am marching.
And always when I am with you!

Song 2 (Happy + Robot + Marching)

Friend, won't you march.
Friend, won't you march.
Friend, won't you march with me?
Friend, won't you march.
Friend, won't you march.
Friend, won't you march with me?
Singin fee, fi, fiddly-i-o, fee, fi, fiddly-i-oooo.
Fee, fi, fiddly-i-o.
Being a robot makes me so happy!

Song 3 (Happy + Monster + Marching)

Happy marching monster, that is me! Hello, and how are you? I hope you're feeling happy. Please join me on my march.

Song 4 (Angry + Dino + Marching)

I'm a mad dino, stomp, stomp, stomp. I'll march it out, stomp, stomp, stomp. Let it out, march around. I feel so much better now!

Song 5 (Angry + Robot + Marching)

I am a robot and I am marching mad, Marching mad, Marching mad. I am a robot and I am marching mad, Let's stomp around.

Song 6 (Angry + Monster + Marching)

I'm a monster and I'm mad, hoorah, hoorah. I'm a monster and I'm mad, hoorah, hoorah. I'm so mad, so I march mad.
When I get mad, sometimes I feel bad.
But I'll keep marching on, and I know,
I'll feel less mad soon, boom, boom, boom.

Song 7 (Sleepy + Dino + Marching)

Sleepy, sleepy dinosaur. Can I rest and dino-snore?

Song 8 (Sleepy + Robot + Marching)

I am a bot running on low, But I can march. For a little bit, bot, boop. Powering down.

Song 9 (Sleepy + Monster + Marching)

Rock a bye monster. No time to sleep. When the band starts, Time to march your feet.

Ballet Melodies:

Melody 1 (Happy + Dino + Ballet)

Haydn Serenade

Melody 2 (Happy + Robot + Ballet)

Schumann Happy Farmer

Melody 3 (Happy + Monster + Ballet)

Beethoven Minuet in G

Melody 4 (Angry + Dino + Ballet)

Alouette

Melody 5 (Angry + Robot + Ballet)

Mozart Symphony No. 25

Melody 6 (Angry + Monster + Ballet)

Beethoven Symphony No. 5

Melody 7 (Sleepy + Dino + Ballet)

Bach/Gounod Ave Maria

Melody 8 (Sleepy + Robot + Ballet)

Tchaikovsky Dance of the Sugar Plum Fairy

Melody 9 (Sleepy + Monster + Ballet)

Brahms' Lullaby

CARE & MAINTENANCE

- 1. Keep your Learn & Dance Dino and the Dino Plates clean by wiping them with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit is not in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit ON. The unit should now be ready to play again.
- 5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur.

It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED - CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech

Electronics (Australia) Pty Limited. Please refer to vtech.com.au/ consumer guarantees for further information.





vtech Learn and Dance Dino [pdf] User Guide Learn and Dance Dino

References

- V Electronic Learning Toys | Best Learning Toys | VTech UK
- VTech Toys Australia Electronic Learning Toys Best Learning Toys VTech Australia and New Zealand
- X Everything you need to know to Recycle More
- <u>V</u> <u>Electronic Learning Toys | Best Learning Toys | VTech UK</u>
- V Electronic Learning Toys | Best Learning Toys | VTech UK
- VTech Toys Australia Electronic Learning Toys Best Learning Toys VTech Australia and New Zealand

Manuals+, home privacy