



# vtech Mix It Up DJ Learning Toys Instruction Manual

[Home](#) » [vtech](#) » vtech Mix It Up DJ Learning Toys Instruction Manual 

## Contents

- [1 vtech Mix It Up DJ Learning Toys](#)
- [2 Product Usage Instructions](#)
- [3 INTRODUCTION](#)
- [4 GETTING STARTED](#)
- [5 IMPORTANT: BATTERY INFORMATION](#)
- [6 Disposal of batteries and product](#)
- [7 PRODUCT FEATURES](#)
- [8 Modes](#)
- [9 SONG LYRICS](#)
- [10 TROUBLESHOOTING](#)
- [11 CONSUMER SERVICES](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)



**vtech Mix It Up DJ Learning Toys**



### Specifications:

- Power Source: 3 AA (AM-3/LR6) batteries
- Recommended Battery Type: Alkaline or fully charged Ni-MH rechargeable batteries
- Features: Back-lit screen, light-up buttons, record/play functionality, multiple mode buttons, piano keys, light-up disc, music style buttons, volume buttons, tempo buttons, DJ phrase button, OK button

### Product Usage Instructions

#### Getting Started:

1. Rotate the packaging locks 90 degrees anticlockwise and discard them.
2. Turn on the Mix It Up DJ and press the Settings Button at the back to exit Try-Me mode.
3. If the unit powers down during play, replace the batteries with a new set of 3 AA batteries.

#### Battery Removal and Installation:

1. Ensure the unit is turned off before proceeding.
2. Locate the battery cover on the bottom of the unit and open it using a screwdriver.
3. If there are old batteries, remove them and install 3 new AA batteries following the diagram inside the battery box.
4. For optimal performance, use alkaline or fully charged Ni-MH rechargeable batteries.
5. Secure the battery cover back in place.

#### Product Features Overview:

1. **Power Button:** Turn the unit on/off with this button.
2. **Mode Buttons:** Change between different modes by pressing one of these buttons.
3. **Piano Keys:** Use these keys for music notes and rhythm patterns in various modes.
4. **Light Up Disc:** Spin to add sound effects and see lights flash with music.

5. **Light Up Buttons:** Choose instruments or characters by pressing these buttons.
6. **Music Style Buttons:** Change music style in different modes.
7. **Stop Button:** Stop music playback in Mix and Create modes.
8. **Volume Buttons:** Adjust the overall volume level.
9. **Tempo Buttons:** Modify the tempo of built-in songs in Mix and Create modes.
10. **DJ Phrase Button:** Add DJ phrases into the music.
11. **OK Button:** Confirm selections in Record/Play or Settings menu.

#### **Frequently Asked Questions (FAQ):**

- **Q: What should I do if the Mix It Up DJ does not power on?**

A: Check if the batteries are correctly installed and replace them with new ones if needed. Ensure the unit is switched on using the Power Button.

- **Q: How do I change to a different music track within the same style?**

A: Press the Music Style Button corresponding to the current style again to switch to another track within that style.

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

#### **vtech Baby**

Toys that will stimulate their interest in different textures, sounds and colours

#### **I am...**

...responding to colours, sounds and textures  
...understanding cause and effect  
...learning to touch, reach, grasp, sit-up, crawl and toddle

#### **Pre-School**

Interactive toys to develop their imagination and encourage language development

#### **I want...**

by stating my preschool alphabet and counting  
...my learning to be as fun, easy and exciting as can be  
...to show my creativity with drawing and music so my whole brain develops

#### **Electronic Learning Computers**

Cool, aspirational and inspiring computers for curriculum related learning

#### **I need...**

...challenging activities that can keep pace with my growing mind  
...intelligent technology that adapts to my level of learning  
...National Curriculum based content to support what I'm learning at school  
To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

## **INTRODUCTION**

Thank you for purchasing the Mix It Up DJ! Get in the DJ booth and create your own custom music mixes! Press the light up buttons to choose instruments or characters, then jam to mix new music with sounds, sing-along songs and melodies!



1. Back-lit Screen
2. Stop Button
3. Record/Play Button
4. Two Volume Buttons
5. Two Tempo Buttons
6. Light Up Disc
7. Settings Button at the back
8. Nine Light Up Buttons
9. Power Button
10. Four Mode Buttons
11. OK Button
12. DJ Phrase Button
13. Three Music Style Buttons
14. Eight Piano Keys

## INCLUDED IN THE PACKAGE

- Mix It Up DJ
- Quick Start Guide


## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## Unlock the Packaging Locks

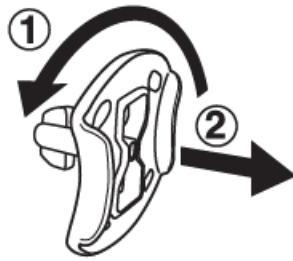

1. Rotate the packaging locks 90 degrees anticlockwise.
2. Pull out the packaging locks and discard.

## GETTING STARTED

### NOTE

This product is in Try-Me mode in the packaging. Turn on the Mix It Up DJ, then press the Settings Button at the back. You will hear 3 short beeps and the unit will restart. Mix It Up DJ is now ready for Normal Play! If the Mix It Up DJ powers down during play, please install a brand new set of batteries.




### WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned Off.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

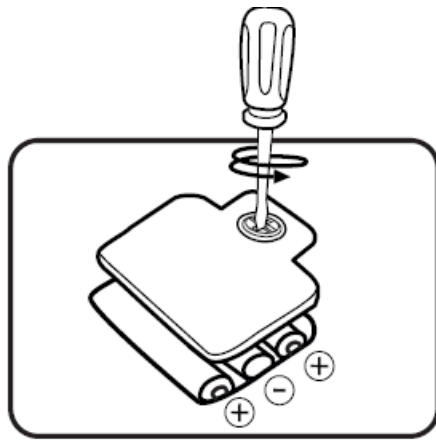

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at: [www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)  
[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

## PRODUCT FEATURES

### 1. Power Button

Press the Power Button to power On the unit. Press the button again to power Off the unit.

### 2. Four Mode Buttons

Press one of the Mode Buttons to change mode.



### 3. Eight Piano Keys

Press the Piano Keys to hear music notes in Mix mode, Create mode and Trio mode. Use the piano keys to repeat the rhythm patterns in Learn mode.

### 4. Light Up Disc

Spin the Light Up Disc back and forth to add sound effects to your music. The lights will also flash with music and sounds.



### 5. Nine Light Up Buttons

Press the Light Up Buttons to choose the instruments or characters. After a Light Up Button is pressed, it will illuminate.





6. Three Music Style Buttons Press one of the Music Style Buttons to change the music style in Mix mode, Create mode and Trio mode. Press the same Music Style Button again to change to another music track in the same style. There are 3 music styles: Hip-Hop, Chill Out and Dance.

7. Stop Button

Press the Stop Button to stop the music in Mix mode and Create mode.



8. Record/Play Button

Press the Record/Play Button to start recording in Mix mode and Create mode. The system will record the sound from the Light Up Disc, Piano Keys, DJ Phrase Button and tempo changes. When you finish the recording, press the OK Button to save your mix. The recording will also end automatically after 2 minutes. After recording, press the Record/Play Button to enter the Record/Play menu, then spin the Light Up Disc to select Play, followed by pressing the OK Button to playback your mix.

**Note:** When recording a new mix, your previous recording will be overwritten.



9. Two Volume Buttons

Press the Volume Buttons to adjust the overall volume.

10. Two Tempo Buttons

In Mix mode and Create mode, press the Tempo Buttons to adjust the tempo of the built-in songs and melodies.





#### 11. DJ Phrase Button

Press the DJ Phrase Button to add DJ phrases into the music.

#### 12. OK Button

Press the OK Button to confirm the selection when in the Record/Play menu or in the Settings menu.



#### 13. Settings Button

When starting the Mix It Up DJ for the first time, press the Settings Button to exit Try-me mode. Then, press the Settings Button during normal play to enter the Settings menu. From here you can choose if you'd like the disc light ON/OFF, or to adjust the screen contrast. Spin the Light Up Disc to make a selection and then press the OK Button to confirm.



#### 14. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically shut off after several minutes without input. The unit can be

turned on again by pressing the Power Button. The unit will also automatically turn off when battery power is very low.

**Note:** If the Mix It Up DJ powers down repeatedly, please install a brand new set of batteries.

## Modes



### Mix Mode

Create your own unique music combinations. Press the Light Up Buttons and mix up to four tracks into the music. Press the Piano Keys, DJ Phrase Button, or spin the Light Up Disc to jam fun sounds. You can also press the three Music Style Buttons to choose different songs. Press the same Music Style Button again to change to another music track in the same style.



### Create Mode

Create a melody using any instrument sound you'd like. Press one of the Light Up Buttons to select the sound for the Piano Keys and the Light Up Disc. Press the DJ Phrase Button to jam fun sounds. You can also press the three Music Style Buttons to choose backing music. Press the same Music Style Button again to change to another music track in the same style, and press the Tempo Buttons to adjust the backing music tempo.



### Trio Mode

Form your own Trio! Press the Light Up Buttons to select instruments or characters to perform in a trio. The newly chosen instrument/character will replace the oldest one. Press the Piano Keys, DJ Phrase Button, or spin the Light Up Disc to jam fun sounds. You can also press the three Music Style Buttons to choose different melodies. Press the same Music Style Button again to change to another music track in the same style.



### Learn Mode

See how well you can repeat rhythm patterns. Press one of the Light Up Buttons to select a theme. A rhythm pattern will then play for you to repeat. To repeat the rhythm pattern, press any Piano Key in rhythm with the pattern you just heard. When asked to turn the disc, spin the Light Up Disc. Repeat a rhythm pattern with 50% or more notes correct to master the pattern. Master 4 or more patterns to win the game.

## SONG LYRICS

### Hip-hop

#### Song 1

The rhythm will move us. The beat will groove us. As we sing our song. As we sing our song. The rhythm will move us. The beat will groove us. As we sing our song. As we sing our song.

#### Song 2

One, two, three, C'mon and move with me! Four, five, six, Scratch that disc and mix! Seven, eight, nine and ten!

Let's play that song again!

### **Song 3**

A – B – C – D – E – F – G, H – I – J – K – L-M-N-O-P, Q – R – S, T – U – V, W – X, Y and Z!

Now I know my A – B – Cs!

Next time won't you sing with me? (Yeah! Ready?)

### **Chill**

#### **Song 1**

You are special, Like a snowflake! One of a kind,

Special in your way!

Like no one else, just be yourself!

And let your light shine through!

#### **Song 2**

R, Red, I'm chilling on my bed, G, Green, I'm a rhythm machine, B, Blue, Now I'm feeling the groove, Headphones on, just the music and me!

#### **Song 3**

Hey diddle diddle, The cat in the fiddle, The cow jumped over the moon, The little dog laughed to see such fun, And the dish ran away with the spoon!

### **Dance**

#### **Song 1**

We love the music, And let it move us, (Move your body!) As we run and play!

As we run and play! (3, 2, 1, go!) We love the music, And let it move us, (Hey! Yeah!)

As we run and play!

As we run and play! (3, 2, 1, yeah!)

#### **Song 2**

Hickory, dickory, dock!

The mouse ran up the clock!

The clock struck one, The mouse ran down, Hickory, dickory, dock!

#### **Song 3**

Let's clap our hands, And dance with our friends! We'll rock to the beat, And move our feet!

Hop! Hop! Hop! Move!

### **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a brand new set of batteries.

### **TROUBLESHOOTING**

**If for some reason the program/activity stops working or malfunctions, please follow these steps:**

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

## CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### UK Customers:

- Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
- Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

### Australian Customers:

- Phone: 1800 862 155
- Website: [support.vtech.com.au](http://support.vtech.com.au)

### NZ Customers:

- Phone: 0800 400 785
- Website: [support.vtech.com.au](http://support.vtech.com.au)

## PRODUCT WARRANTY/ CONSUMER GUARANTEES

### UK Customers:

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

### Australian Customers:

#### VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

Visit our website for more information about our products, downloads, resources and more.


[www.vtech.co.uk](http://www.vtech.co.uk)

[www.vtech.com.au](http://www.vtech.com.au)

© 2024 VTech.

All rights reserved.

## Documents / Resources

|   |  |
|---|--|
|  | <p><a href="#">vtech Mix It Up DJ Learning Toys</a> [pdf] Instruction Manual<br/>Mix It Up DJ Learning Toys, Mix It Up DJ, Learning Toys, Toys</p> |
|---|--|

## References

- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.