



PJ Masks Super Learning Watch User Manual

[Home](#) » [vtech](#) » PJ Masks Super Learning Watch User Manual 

PJ Masks Super Learning Watch User Manual



Parent's Guide

Super Catboy Learning Watch Super Owlette Learning Watch Super Gekko Learning Watch



©2017 Frog Box/Entertainment One UK Limited
91-003447-004 US

Contents

 
- 1 INTRODUCTION
- 2 FEATURES
- 3 INCLUDED IN THIS PACKAGE
- 4 PRODUCT SPECIFICATION
- 5 GETTING STARTED
- 6 BATTERY INSTALLATION
- 7 BATTERY NOTICE
- 8 TO BEGIN USING THE PJ MASKS SUPER LEARNING WATCH
- 9 AUTOMATIC POWER OFF
- 10 ACTIVITIES
 - 10.1 Clock Display
 - 10.2 Home Menu
 - 10.2.1 1. Alarm Clock
 - 10.2.2 2. Stopwatch
 - 10.2.3 3. Timer
 - 10.2.4 4. Games
 - 10.2.4.1 4.1. Gekko-Mobile Pursuit
 - 10.2.4.2 4.2. Running Math
 - 10.2.4.3 4.3. Flying Discs
 - 10.2.4.4 4.4. Ninjalino Numbers
 - 10.2.5 5. Settings
 - 10.2.5.1 5.1. Clock Face
 - 10.2.5.2 5.2. Cuckoo Clock
 - 10.2.5.3 5.3. Time Setting
- 11 CARE & MAINTENANCE
- 12 TROUBLESHOOTING
- 13 PRODUCT WARRANTY
 - 13.1 Related Posts

INTRODUCTION

Thank you for purchasing the VTech® PJ Masks Super Learning Watch. This watch is full of great learning fun for children! Not only will this watch show you the time, but there are also alarm, timer and stopwatch functions. It also includes four built-in games to reinforce learning of numbers, shapes and counting as you go into the night to save the day with Catboy, Owlette and Gekko!

FEATURES

PRODUCT LAYOUT AND BUTTONS

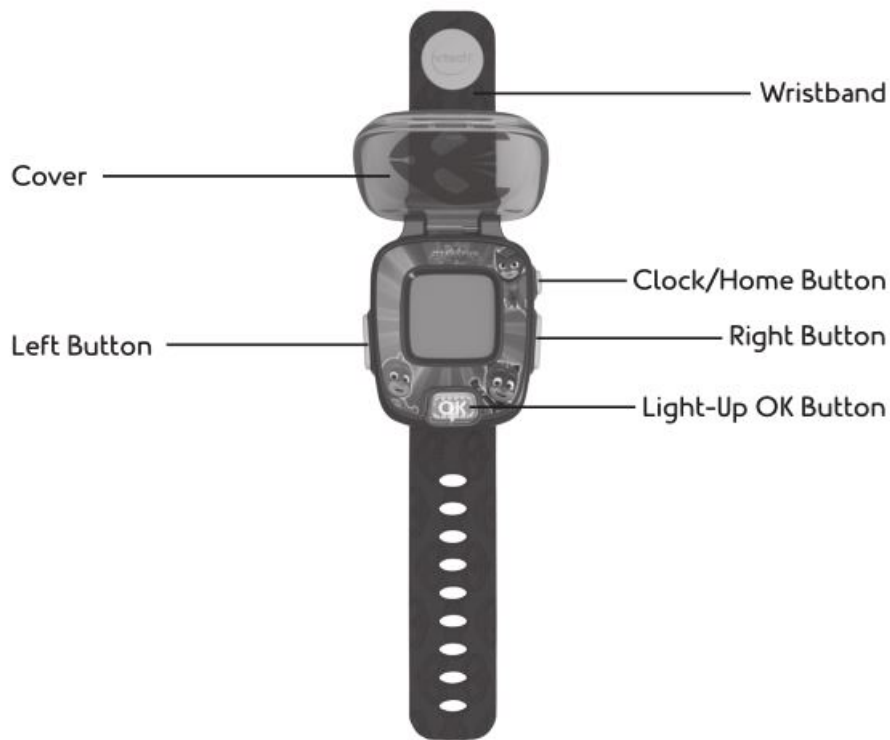

INCLUDED IN THIS PACKAGE

- One PJ Masks Super Learning Watch
- One Parent's Guide
- One CR2450 battery (placed inside the product)

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parent's guide as it contains important information.

PRODUCT SPECIFICATION

BATTERY : One CR2450 battery

TIME FORMAT : 12h or 24h

DISPLAY : DIGITAL

OPTIMUM OPERATING AND CHARGING TEMPERATURE : 32°F – 104°F (0°C – 40°C)

Important Note:

- Do not place the watch under running water.
- Do not submerge. Not suitable for showering, bathing or swimming.
- Keep the cover closed when the watch is not in use.

WARNING:

People with very sensitive skin may notice some irritation after wearing the PJ Masks Super Learning Watch for

extended periods of time. The skin may become irritated when moisture, sweat, soap or other irritants get trapped under the wristband and are left in contact with the skin. To prevent this, we suggest children remove the watch before going to bed for the night, take the watch off if it's feeling uncomfortable, and keep their wrist and the band clean and dry.

In addition, wearing the watch too tightly may also cause irritation. Make sure the fit is good – tight enough so the watch stays in place but not so tight that it's uncomfortable. If you notice any redness, swelling, or other irritation, you may want to consult a doctor before wearing the watch again.

Cover

Open the cover to view the time. When the cover is closed, tap the bottom of the cover to play PJ Masks music with a fun light effect.

Left/Right Buttons

Use the Left and Right Buttons to select an activity or option, or to select options in settings or navigate in the games.

Light-Up OK Button OK

Press the Light-Up OK Button to confirm a selection in different activities.

Clock/Home Button

Press the Clock Button to return to the clock from any other function or activity.

GETTING STARTED



 
WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

BATTERY INSTALLATION

NOTE: For best performance, remove the factory- installed battery from the PJ Masks Super Learning Watch and use a new battery.

1. Locate the battery cover on the back of the unit and open it with a screwdriver (not included).
2. Remove the battery cover and insert a CR2450 battery as illustrated.
3. Replace the battery cover and fasten the screw.

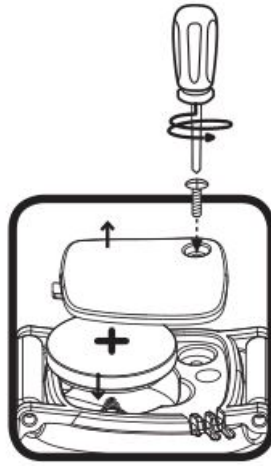

BATTERY NOTICE

- Use one CR2450 Lithium coin battery only for this toy. Do not use rechargeable Lithium ion battery LIR2450. This toy is not compatible with LIR2450.
- The coin battery used with this product should be kept away from small children who might still put things in their mouths. If the coin battery is swallowed, consult a doctor immediately.
- Insert the coin battery with the correct polarity.
- Do not use a damaged coin battery.
- Do not short-circuit the coin battery terminals.
- Remove exhausted coin battery from the product.
- Remove coin battery during long periods of non-use.
- Do not dispose of coin battery in fire.
- Do not charge non-rechargeable coin battery.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

TO BEGIN USING THE PJ MASKS SUPER LEARNING WATCH

When you use the watch for the first time, open the cover, then press the LEFT+RIGHT+OK Buttons for approximately 5 seconds to unlock the try me mode. You will hear three beeping sounds when the try me mode is unlocked. You can then press any button to activate the watch and set the time.

Press the Left/Right Buttons to select, then press the OK Button to confirm and move to the next option. A checkmark will be displayed when the setting is complete.

Note:

- When the battery level is low, most functions on the watch may not be activated, except for the clock display. It is recommended to replace with a new battery as soon as possible before further use.
- If the battery level is too low and cannot keep the clock running, you will need to enter the time and date again after the battery has been replaced.

AUTOMATIC POWER OFF

To save power, the PJ Masks Super Learning Watch will automatically power off when there has been no input for about 30 seconds. Press any button or open the cover to turn the unit ON again.

The unit will also automatically turn OFF when the battery power is very low. If you see the Low Battery icon appear on screen, please replace the battery.








ACTIVITIES

Clock Display

When the Clock/Home Button is pressed, the time will be displayed. Press the Left or Right Buttons to display the Home Menu where other activities can be selected.

Home Menu

Press the Left or Right Buttons to display the Home Menu. There are 5 options to choose from:

1. Alarm Clock 	2. Stopwatch 	3. Timer 
4. Games 	5. Settings 	

- Press the Left or Right Buttons to scroll through the menu options.
- Press the OK Button to confirm.

1. Alarm Clock

You can set an alarm with a choice of three alarm tones.

- Press the Left or Right Buttons to select the time/alarm tone.
- Press the OK Button to confirm and move to the next setting.



2. Stopwatch

Access the stopwatch here.

- Press the OK Button to start the stopwatch, press again to stop.
- When the stopwatch is stopped, you can press the Left or Right Buttons to reset.



3. Timer

Set a countdown timer here.

- Press the Left or Right Buttons to change the time.
- Press the OK Button to confirm.
- When you press the OK Button to confirm the timer duration, the countdown will start immediately.
- While the timer is running, you can press the OK Button to pause/resume, and press the Left or Right Button to reset.

 


4. Games

In the games menu, press the Left or Right Buttons to scroll through the different options:


4.1. Gekko-Mobile Pursuit

Gekko is driving the Gekko-mobile to track down the location of Romeo's mobile laboratory. Use the shape clues to work out which way Romeo has gone. Press the Left or Right Buttons to select.

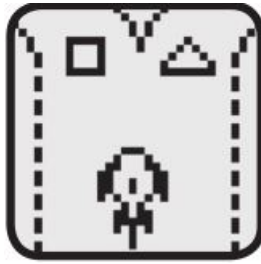

4.2. Running Math

 Owlette is chasing Luna Girl through the streets and Luna Girl has hidden inside a building. A math problem will be shown on the screen with two answers displayed on two different doors. Choose the correct door to help Owlette find Luna Girl. Press the Left or Right Buttons to select.

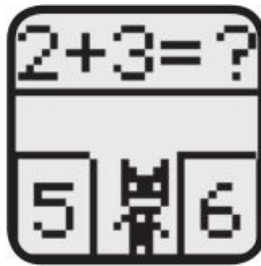


4.3. Flying Discs

Catboy is practicing his skills with some flying discs. Follow the instructions to hit the largest or smallest number. Press the OK Button to launch the flying disc.



4.4. Ninjalino Numbers

 The PJ Masks are chasing Night Ninja and the Ninjalinos have hidden in the park. Help the PJ Masks count the number of Ninjalinos. Press the Left or Right Buttons to select.

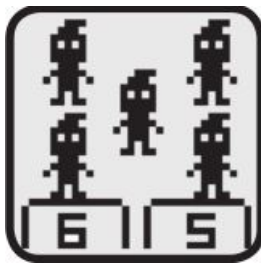

5. Settings

In the settings menu, press the Left or Right Buttons to scroll through the various options:

5.1. Clock Face

- Press the Left or Right Buttons to select from nine different clock faces.
- Press OK to confirm.



5.2. Cuckoo Clock

When the cuckoo clock is activated, the watch will briefly chime at the top of each hour between 7 AM and 7 PM. The cuckoo clock will not ring if a game is in progress.

- Press the Left or Right Buttons to turn the cuckoo clock ON or OFF.
- Press OK to confirm.



5.3. Time Setting

- Press the Left or Right Buttons to change the options. (AM/PM setting is only applicable in 12-hour time format)
- Press OK to confirm.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the battery when not using it for an extended period of time.
4. Avoid dropping it. Never try to dismantle it.
5. Always keep the unit away from water.

TROUBLESHOOTING

If for some reason the program/activity stops working or the unit can't be turned on again, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the battery.
3. Let the unit sit for a few minutes, then replace the battery.
4. Turn the unit back ON. The unit should now be ready to play again.
5. If the product still does not work, replace with a new battery.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



PRODUCT WARRANTY



This Warranty is applicable only to the original purchaser, is non-transferable and applies only to “VTech” products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner’s manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com



TM & © 2017 VTech Holdings Limited. All rights reserved. Printed in China.
©2017 Frog Box/Entertainment One UK Limited

PJ Masks Super Learning Watch User Manual – [Optimized PDF](#)
PJ Masks Super Learning Watch User Manual – [Original PDF](#)

Manuals+.