



## vtech Play & Chase Puppy User Guide

[Home](#) » [vtech](#) » vtech Play & Chase Puppy User Guide 

vtech Play & Chase Puppy User Guide



## Contents

- 1 INTRODUCTION
- 2 INCLUDED IN THE PACKAGE
- 3 GETTING STARTED
- 4 PRODUCT FEATURES
- 5 ACTIVITIES
- 6 MELODY LIST
- 7 SONG LYRICS
- 8 CARE & MAINTENANCE
- 9 TROUBLESHOOTING
- 10 CONSUMER SERVICES
- 11 Product Warranty/ Consumer  
Gu
- 12 Documents / Resources
  - 12.1 References
- 13 Related Posts

## INTRODUCTION

Thank you for purchasing the Play & **Chase Puppy**

Follow this cute puppy for three ways to play! Explore numbers and counting with sit-down play, then get up and dance with this interactive friend! Keep the giggles going with a game of follow the leader!



## INCLUDED IN THE PACKAGE

- Play & Chase Puppy
- Parent's Guide

 
### WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety

### NOTE

Please save this parent's guide as it contains important information.

## Removing the Packaging Locks

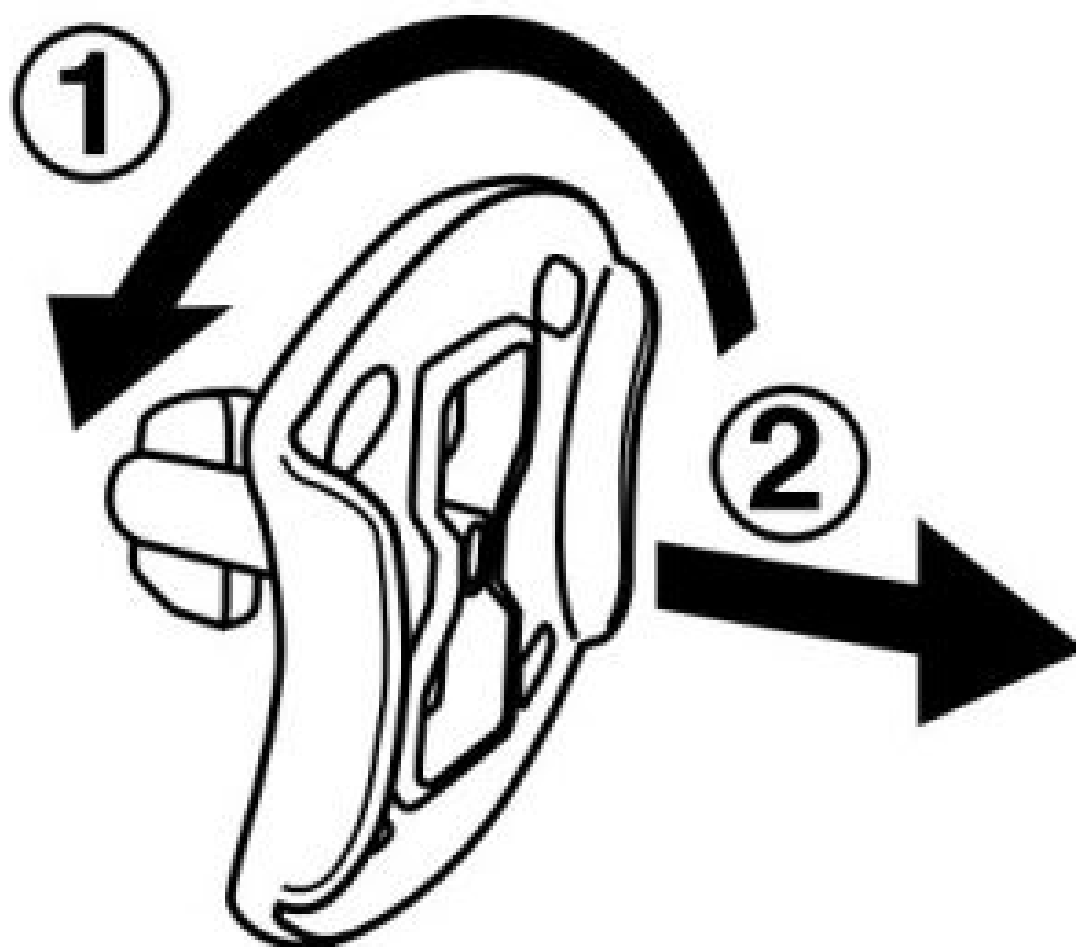

1. Rotate the packaging locks anticlockwise 90 degrees.
2. Pull out the packaging locks and discard.

### NOTE

Please cut and discard the plastic strap that attaches the Play & Chase Puppy to the box. The strap is no

## GETTING STARTED

### Battery Removal and Installation

1. Make sure the unit is turned Off.

2. Find the two battery covers located on the bottom of the unit, use a screwdriver to loosen the screws and then open the battery covers.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA batteries following the diagram inside the battery boxes. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery covers and tighten the screws to secure.



**WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

**IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

**RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.



VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

 
In the UK:

Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.




In Australia & New Zealand:

Check with your local council for kerbside collections.
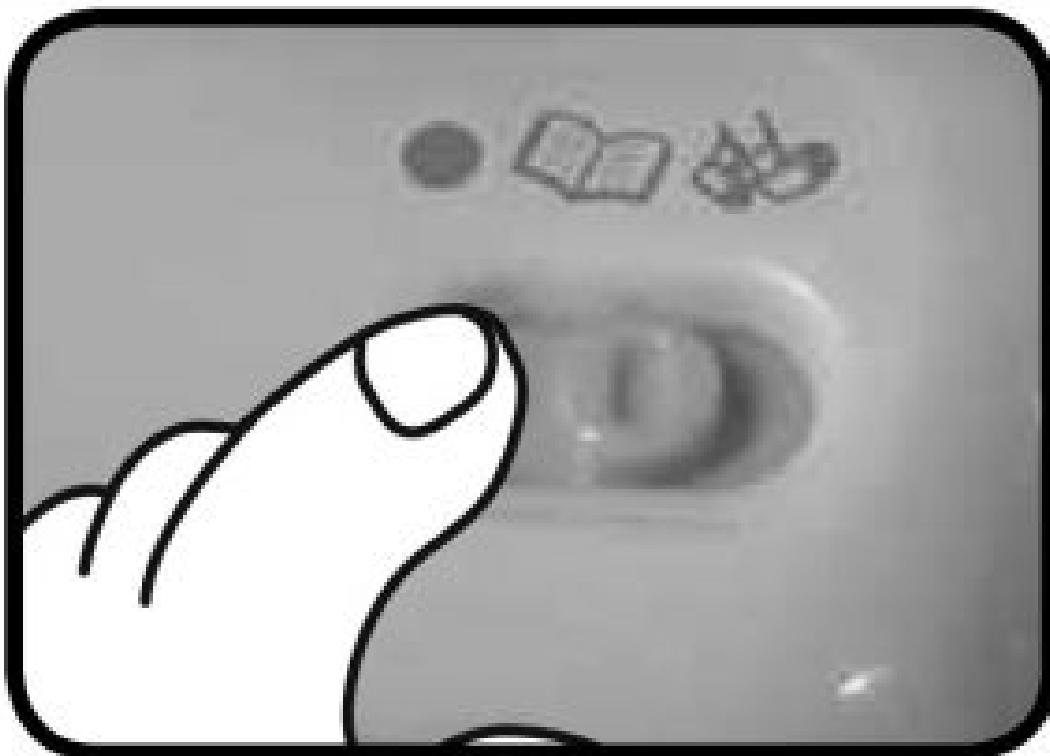
## PRODUCT FEATURES



## 1. On/Off/Mode Switch

To turn the unit On, slide the **On/Off/Mode** Switch to the Learning mode  or the Follow mode  position. You will hear a song, playful phrases and sounds. To turn the unit Off, slide the **On/Off/Mode** Switch to the Off  position.

## 2. Automatic Shut-Off

To preserve battery life, the Play & Chase Puppy will automatically shut off after approximately 50 seconds without input, or when the front and back sensors have been continuously activated for 10 minutes without other inputs. The unit can be turned on again by pressing any button, or by sliding the **On/Off/Mode** Switch.

### NOTE

This product is in Try-Me mode in the packaging. After opening the package, please remove the demo tag from the bottom of the unit.

Then, turn the **Play & Chase** Puppy off and on again to proceed with normal play. If the unit powers down or if the light fades out during play, please install a new set of batteries.

## ACTIVITIES

 
### 1. Light Up Buttons

Press the Light Up Buttons to learn numbers, counting, feelings and motions, as well as hearing singalong songs and music. The puppy will dance and move in response to the voice and sound responses if it is on the floor. The lights will flash with the sounds.



### 2. Hand Button

Give puppy a high five by pressing the Hand Button, as well as hearing playful phrases and music. The lights will flash with the sounds.

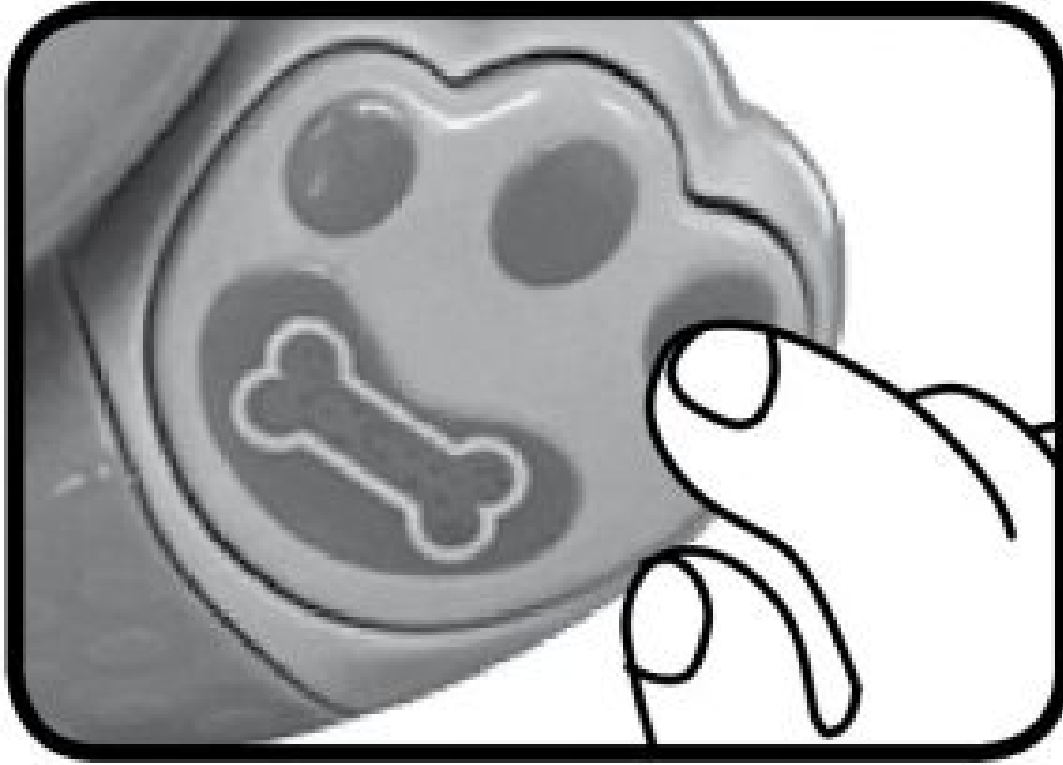

### 3. Front and Back Sensors

The puppy is equipped with special sensors on the front and back of the hoverboard. Approach the sensors to activate them and see the puppy ride away or rotate and respond with playful phrases, music and sounds. The lights will flash with the sounds



#### NOTE

The infrared light sensors in the hoverboard are sensitive to sunlight.

The sensors may not perform properly in brightly lit, sunny rooms or under direct sunlight.

### 4. Pick-Up Sensor

The puppy has a special sensor on the bottom of the hoverboard, so the puppy knows when it has been picked up. Each time you pick up the puppy, you will hear a cute phrase. The puppy's heart button will flash with the sounds.



## MELODY LIST

1. A-Tisket, A-Tasket
2. Bingo
3. The Entertainer
4. Glow Worm
5. Hey, Diddle Diddle
6. Skip to My Lou
7. One Man Went to Mow a Meadow
8. Hickory, Dickory, Dock
9. Aiken Drum
10. Bear Went Over the Mountain
11. Did You Ever See a Lassie?
12. Where Has My Little Dog Gone?
13. Old MacDonald
14. Humpty Dumpty
15. The Wheels on the Bus

## SONG LYRICS

### Song 1

Follow me. One, two, three.

I am moving really fast, can you catch me?

### Song 2



Ride, ride, ride my board, Turning round and round.  
I like to move, I like to groove, Every day and night.

### **Song 3**

I hop on to my hoverboard and zoom around the ground.  
I wiggle my body, I wag my ears and spin all around.

## **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water

## **TROUBLESHOOTING**

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

## **CONSUMER SERVICES**

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

**Phone:** 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

**Website:** [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

Australian Customers:

**Phone:** 1800 862 155

**Website:** [support.vtech.com.au](http://support.vtech.com.au)

NZ Customers:

**Phone:** 0800 400 785

**Website:** [support.vtech.com.au](http://support.vtech.com.au)

## **Product Warranty/ Consumer Gu**

**UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

**Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.


Visit our website for more information about our products, downloads, resources and more.

[www.vtech.co.uk](http://www.vtech.co.uk)






[www.vtech.com.au](http://www.vtech.com.au)



## Documents / Resources

 The image shows the front cover of a 'Parent's Guide' for the 'Play & Chase Puppy' toy. It features the Vtech logo at the top left, the title 'Parent's Guide' and 'Play & Chase Puppy' in the center, and a photograph of the grey puppy toy at the bottom. A small '1' is visible in the bottom left corner of the cover.	<p><a href="#">vtech Play &amp; Chase Puppy</a> [pdf] User Guide vtech, Play Chase Puppy</p>
---	--

## References

-  [Support : VTech Electronics](#)
-  [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
-  [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
-  [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
-  [VTech Toys Australia - Electronic Learning Toys - Best Learning Toys - VTech Australia and New Zealand](#)