



vtech Pop and Play Activity Tree Instruction Manual

[Home](#) » [vtech](#) » vtech Pop and Play Activity Tree Instruction Manual 



**Pop & Play Activity Tree
Instruction Manual**

Contents

- 1 Pop and Play Activity Tree
- 2 INTRODUCTION
- 3 INCLUDED IN THE PACKAGE
- 4 GETTING STARTED
- 5 IMPORTANT: BATTERY INFORMATION
- 6 Disposal of batteries and product
- 7 PRODUCT FEATURES
- 8 ACTIVITIES
- 9 SING-ALONG SONG LYRICS
- 10 MELODY LIST
- 11 CARE & MAINTENANCE
- 12 TROUBLESHOOTING
- 13 CONSUMER SERVICES
- 14 PRODUCT WARRANTY/ CONSUMER GUARANTEES
- 15 Documents / Resources
 - 15.1 References
- 16 Related Posts

Pop and Play Activity Tree



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

... learning to touch, reach, grasp, sit-up, crawl and toddle

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

 
...to show my creativity with drawing and music so my whole brain develops



INTRODUCTION

Introducing the Pop & Play Activity Tree by VTech®.

Discover numbers, colours and more with this interactive discovery tree! Drop the multicoloured balls into the tree to hear them be counted aloud! Features a spiral track with random ball routes, so you'll never know where the balls will go!

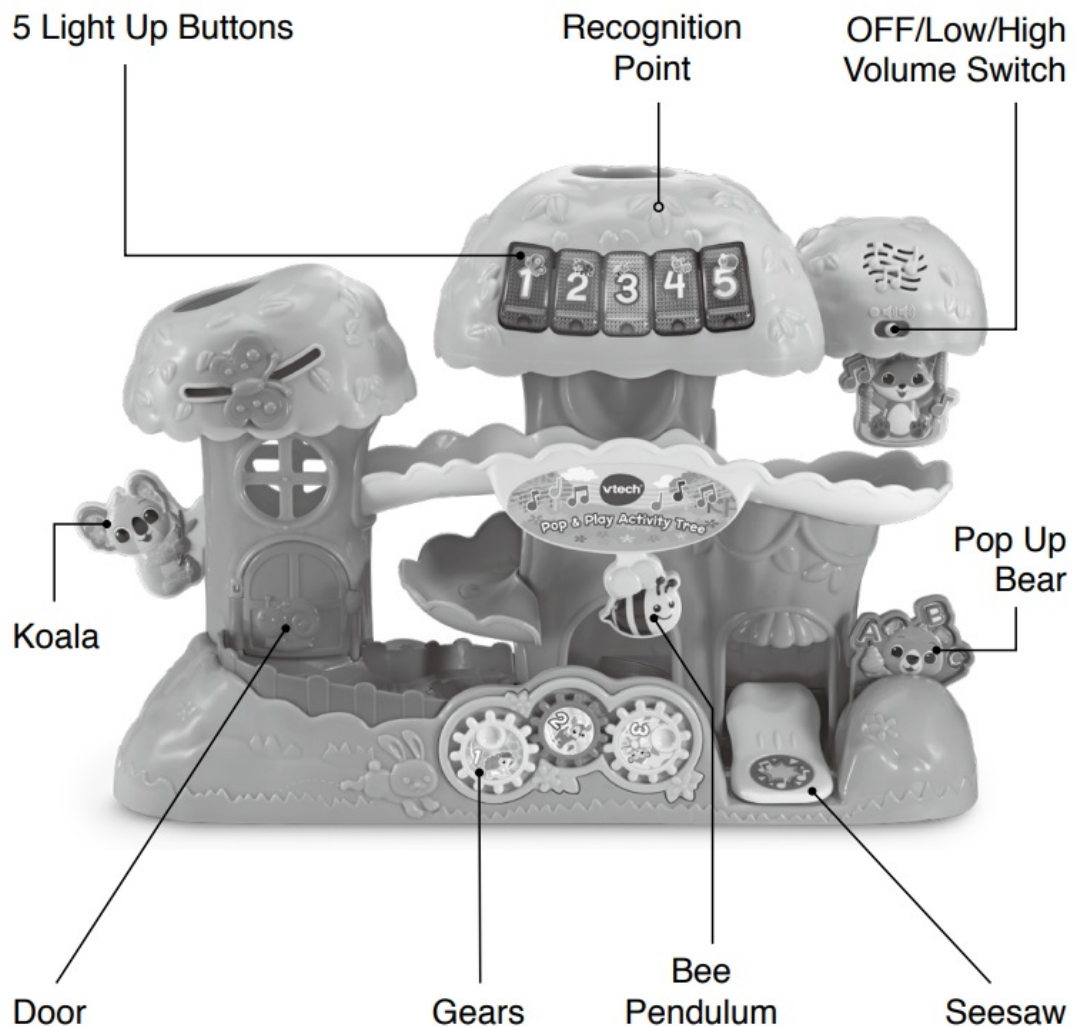

INCLUDED IN THE PACKAGE

- One Pop & Play Activity Tree
- One Quick Start Guide
- Four balls

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.


Removing the Packaging Locks:

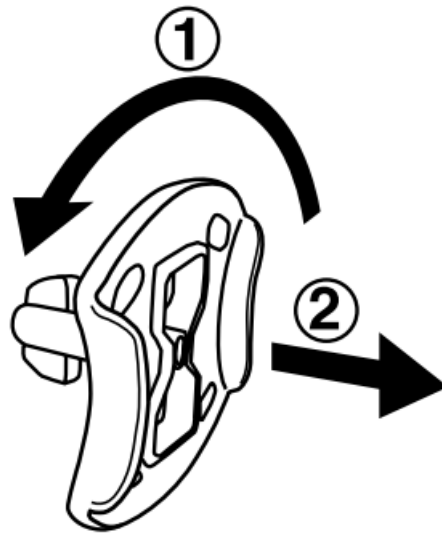

1. Rotate the packaging locks 90 degrees anticlockwise.
2. Pull out the packaging locks and discard.

GETTING STARTED

 BATTERY REMOVAL AND INSTALLATION

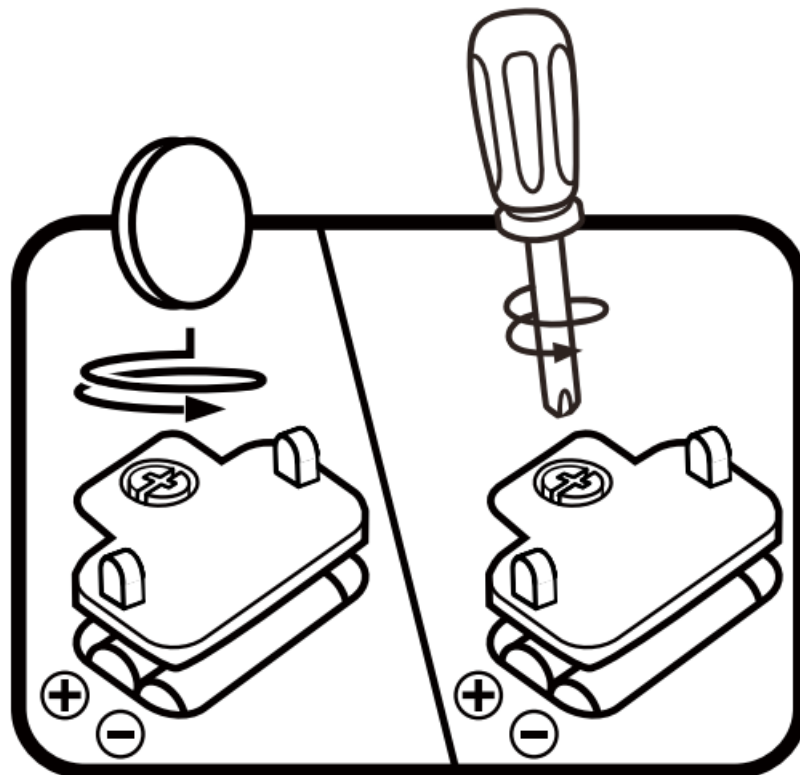

1. Make sure the unit is turned OFF.
2. Locate the battery cover located on the bottom of the unit, Use a coin or a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product

The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

 
www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Off/Low/High Volume Switch To turn the unit On, slide the Off/Low/ High Volume Switch to the Low or High position. You will hear a playful song, a phrase and sounds. To turn the unit Off, slide the Off/Low/High Volume Switch to the Off position.

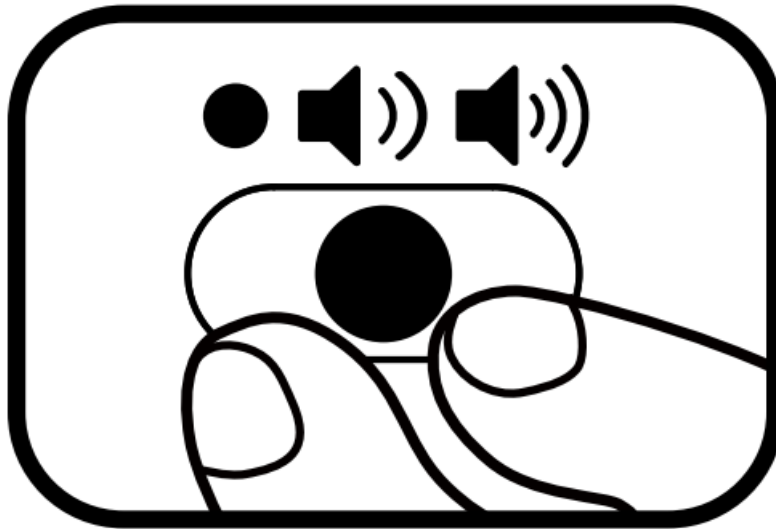

2. Automatic Shut Off

To preserve battery life, the Pop & Play Activity Tree will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by pressing the light up buttons or by inserting the ball into the tree top.

NOTE

If the unit powers down whilst playing, please install a brand new set of batteries.

WARNING: Do not aim at eyes or face.

ACTIVITIES

 
1. Press the five Light Up Buttons to hear songs, phrases, sounds and melodies. The light will flash with the sounds.



2. Drop the balls into the tree and it will count them aloud.



3. Press the seesaw to pop the ball up onto the purple track for looping play and to hear fun sounds.

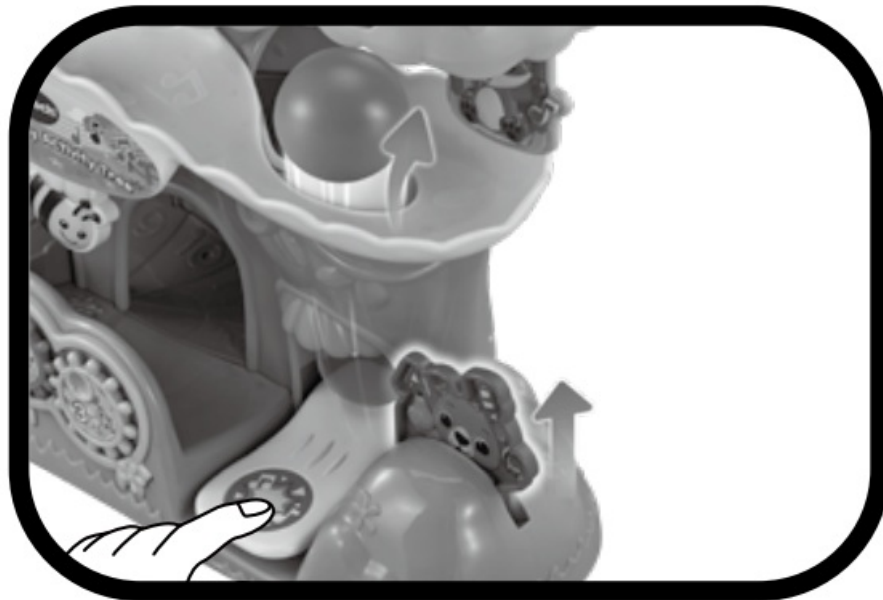


4. Touch the bee pendulum to hear fun sounds.



5. Pull the koala to release a ball to see it roll down.



 6. Spin the gears for added fun!

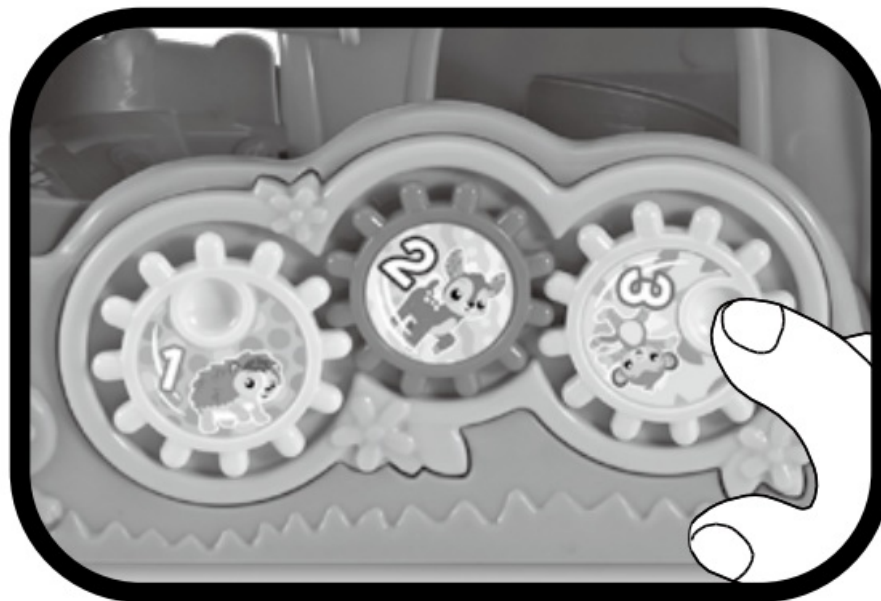

SING-ALONG SONG LYRICS

Song 1

Red, yellow, purple and blue!
Drop the balls in the top of the tree!
Watch them slide, watch them roll, Which direction will they go?

Song 2

Look around the playful trees, what animals do you see?
A honey bee buzzing in the tree!
A bear playing peek-a-boo!

Song 3

1, 2, 3, 4, and 5, Drop in a ball and count with me, 6, 7, 8, 9 and 10,
Let's count the balls together!

Song 4

Colourful butterfly likes to flutter from flower to flower.

Song 5

Ladybird all red and black, crawls along the bright green grass.

Song 6

Nibble, nibble, crunch, crunch. Yum, yum, yum!
Caterpillar snacks on big green leaves.

Song 7

Busy buzzy honeybee, sipping nectar to make some honey.

Song 8

Snail moves slowly, snail is never in a hurry.

MELODY LIST

1. Row, Row, Row Your Boat
2. Flying Trapeze
3. Girls and Boys Come Out to Play
4. Hey Diddle Diddle
5. Looby Loo
6. One Man Went to Mow a Meadow
7. Skip to My Lou
8. Toyland
9. Yankee Doodle
10. Wheels on the Bus
11. Teddy Bears' Picnic
12. Pat-A-Cake
13. Mulberry Bush
14. Little Bo-Peep
15. Humpty Dumpty

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products.

However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers: Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED —CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk

www.vtech.com.au



TM & © 2023 VTech Holdings Limited.

All rights reserved.

IM-564900-000

Version:1

Documents / Resources

The image shows the front cover of the instruction manual for the Vtech Pop & Play Activity Tree. It features the Vtech logo at the top left, the title "Pop & Play Activity Tree" in the center, and a photograph of the toy at the bottom. The background is white with some grey accents.	<p>vtech Pop and Play Activity Tree [pdf] Instruction Manual</p> <p>Pop and Play Activity Tree, Play Activity Tree, Activity Tree, Tree</p>
--	---

References

- [V Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [V Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [VTech Toys Australia - Electronic Learning Toys - Best Learning Toys - VTech Australia and New Zealand](#)

