



vtech Sparklings Penny User Guide

[Home](#) » [vtech](#) » vtech Sparklings Penny User Guide 

Contents

- 1 vtech Sparklings Penny User Guide
- 2 Parent's Guide
- 3 INTRODUCTION
- 4 INCLUDED IN THIS PACKAGE
- 5 WARNING:
- 6 NOTE:
- 7 WARNING:
- 8 GETTING STARTED
 - 8.1 NOTE:
- 9 Battery Removal and Installation
- 10 WARNING:
- 11 IMPORTANT: BATTERY INFORMATION
- 12 RECHARGEABLE BATTERIES:
- 13 Disposal of batteries and product
- 14 PRODUCT FEATURES
- 15 ACTIVITIES
- 16 CARE & MAINTENANCE
- 17 TROUBLESHOOTING
- 18 CONSUMER SERVICES
 - 18.1 UK Customers:
 - 18.2 Australian Customers:
 - 18.3 NZ Customers:
- 19 PRODUCT WARRANTY/ CONSUMER GUARANTEES
 - 19.1 Australian Customers:
- 20 Read More About This Manual & Download PDF:
- 21 Documents / Resources
 - 21.1 References
- 22 Related Posts

vtech Sparklings Penny User Guide



Parent's Guide

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers
Cool, aspirational and inspiring computers for curriculum related learning

Pre-School
Interactive toys to develop their imagination and encourage language development

vtech baby
Toys that will stimulate their interest in different textures, sounds and colours

I am...

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

I need...

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school

Birth-36 months

3-6 years

 
4-10 years

To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing **Sparklings Penny**!

Hi, I'm Penny, welcome to my colour full world of magic! Press my charm to choose a colour, then touch my crest, eyes or tail to decorate them with that colour. Let's have fun together!

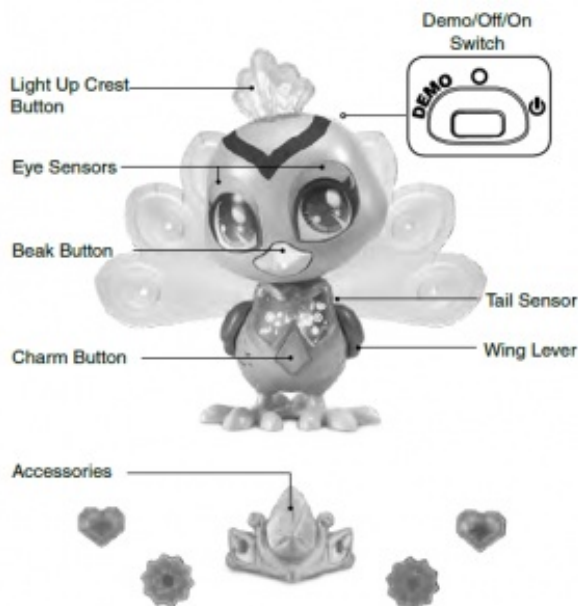

INCLUDED IN THIS PACKAGE

- Sparklings Penny
- Two flower-shape accessories
- Two heart-shape accessories
- One crown
- Parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please keep this Parent's Guide as it contains important information.

WARNING:

This toy produces flashes that may trigger epilepsy in sensitised individuals.

 
GETTING STARTED

The batteries included are for demo purposes only. Please replace the low capacity Try Me batteries with new batteries for the best performance. Slide the **Demo/Off/On Switch** to the **ON** position to start.

NOTE:

Playing at close range for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.

Battery Removal and Installation

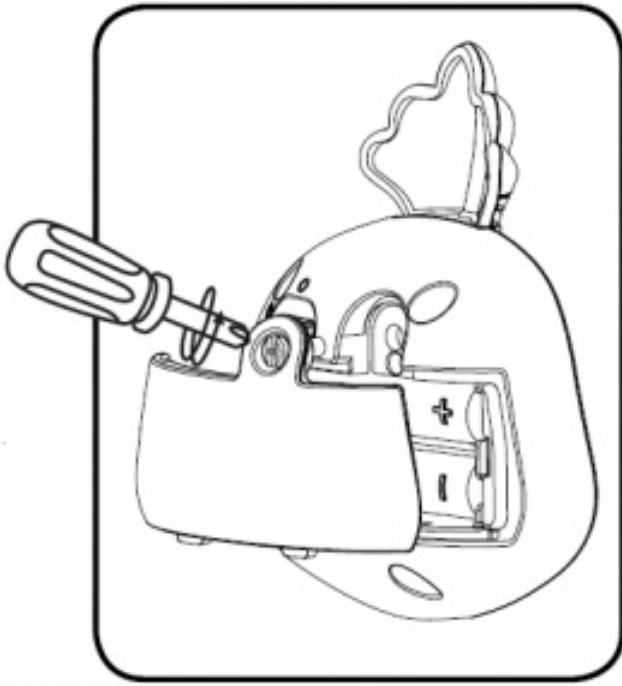

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit, use a screwdriver to loosen the screw and open the battery box.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 AAA (LR03/AM-4) batteries following the diagram inside the battery box.
(The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005. Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet. Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled. In the UK:

Visit www.recyclenow.com to see a list of collection points near you. In Australia & New Zealand: Check with you local council for kerbside collections.

PRODUCT FEATURES

1. Demo/Off/On Switch

To turn the unit ON, slide the Demo/Off/On Switch to the ON position. To turn the unit OFF, slide the Demo/Off/On Switch to the OFF position.

2. Automatic Shut Off

To preserve battery life, Penny will automatically power down after several seconds without input. The unit can be turned on again by pressing the crest button, beak button or charm button.

NOTE: If the unit powers down while playing, please install a new set of batteries.

ACTIVITIES

1. Colour Penny

Penny lights up in the colours you choose for her. Press Penny's

Charm Button to choose a colour. Then, touch her eyes, crest and tail to add the selected colour to them.



2. Penny's Mood

Penny expresses her mood through colour.

 
Press her Light Up Crest Button to see how she feels. Then, touch her eyes or tail for some additional colour commentary.



3. Colour Fun

Penny likes to pick a lucky colour for you.

Push her Tail Sensor and she'll select a lucky colour and tell you how that colour makes her feel.

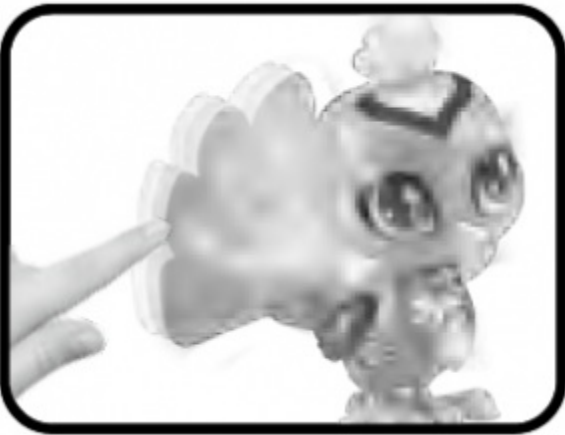

4. Tell Penny Your Hopes

Penny wants you to share your hopes and dreams with her. Cover and hold one of Penny's Eye Sensors and she'll ask you to tell her your hopes. Keep her Eye Sensor covered as you tell her. Uncover her Eye Sensor and she'll tell you how fantastic your hopes are



 
5. Musical Penny

Penny loves to sing. Tap Penny's Beak Button, and she will sing, hum or even surprise you with a kiss! Careful, sometimes she even burps!




6. Flying Fun

Penny loves to fly! Help her flap her tail by pushing her Wing Lever. She'll make magical sounds and cheer as she pretends to zoom through the sky.

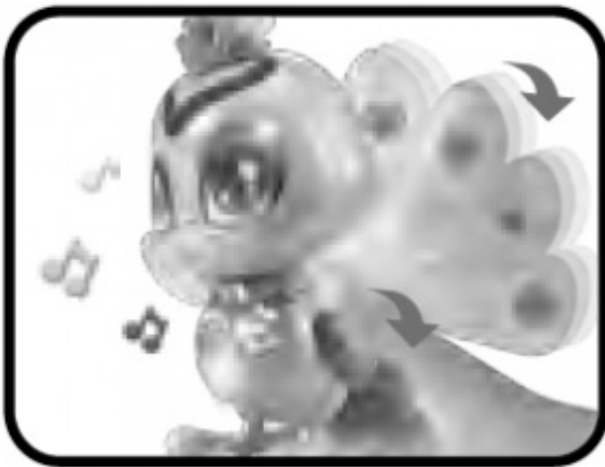

7. Cuddle and Care

 Every peacock needs love. Pet Penny's Eye Sensors or Tail Sensor to take care of her and get some fun surprises.

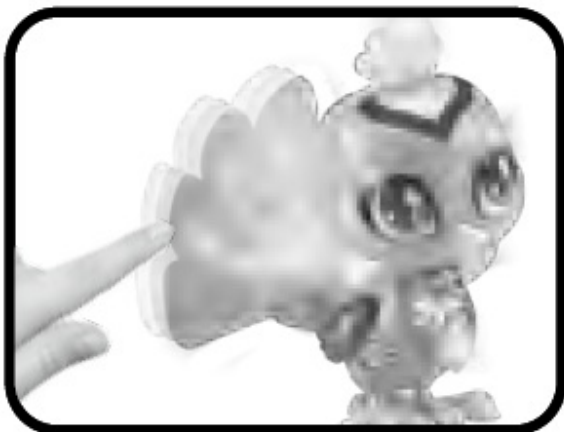

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.

4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit will now be ready to play with again.
5. If the unit still does not work, install a new set of new batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:
Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:


VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech

Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Read More About This Manual & Download PDF:

Documents / Resources

	vtech Sparklings Penny [pdf] User Guide vtech, Sparklings Penny
---	--

References

- [📄 Support : VTech Electronics](#)
- [📄 Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [📄 VTech Toys Australia - Electronic Learning Toys - Best Learning Toys - VTech Australia and New Zealand](#)
- [📄 Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [📄 Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [📄 VTech Toys Australia - Electronic Learning Toys - Best Learning Toys - VTech Australia and New Zealand](#)