 


vtech SWiTCH and Go DINOS Talon the Pterodactyl

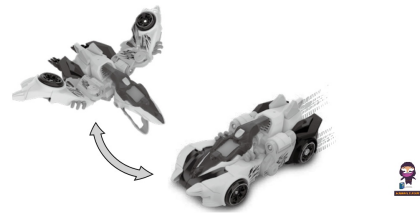

# vtech SWiTCH and Go DINOS Talon the Pterodactyl Instruction Manual

 
[Home](#) » [vtech](#) » vtech SWiTCH and Go DINOS Talon the Pterodactyl Instruction Manual 

## Contents

- 1 vtech SWiTCH and Go DINOS Talon the Pterodactyl
- 2 Product Usage Instructions
- 3 FAQ
- 4 INTRODUCTION
- 5 INCLUDED IN THE PACKAGE
- 6 GETTING STARTED
- 7 Disposal of batteries and product
- 8 HOW TO SWITCH
- 9 PRODUCT FEATURES
- 10 CARE & MAINTENANCE
- 11 TROUBLESHOOTING
- 12 CONSUMER SERVICES
- 13 PRODUCT WARRANTY/ CONSUMER GUARANTEES
- 14 Documents / Resources
  - 14.1 References
- 15 Related Posts



vtech SWiTCH and Go DINOS Talon the Pterodactyl

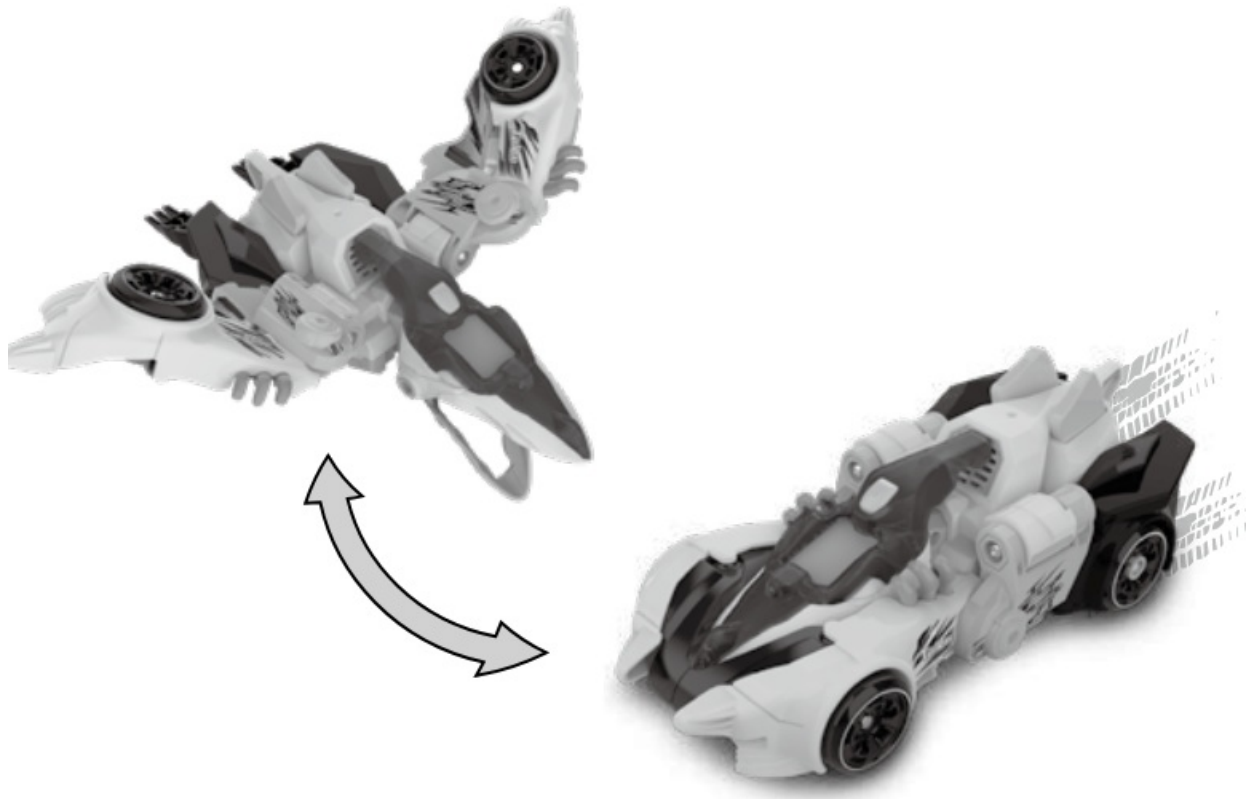

## Specifications

- Product Name: Talon the Pterodactyl
- Power Source: 2 AA (AM-3/LR6) batteries
- Recommended Battery Type: Alkaline or Ni-MH rechargeable

## Product Usage Instructions

### Getting Started

**WARNING:** Adult assembly required for battery installation. Keep batteries out of reach of children.

1. Make sure the unit is turned Off.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove them from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

### How to Switch Modes

1. Dino mode
2. Close the dino's beak.
3. Flip the black pieces on the underside of the wings out.
4. Turn the wings forwards.

5. Fold the wings down.
6. Fold in the feet and wing side panels.

## Product Features

1. **Power Switch:** Slide the switch to Low or High Volume for On operation. Slide to Off to turn the unit Off.
2. **Head Button:** Press to hear fun phrases, facts, and sounds. Light projection accompanies responses.
3. **Action Button:** Press for sound effects and wing flapping. Ensure wings are fully extended before pressing.
4. **LCD Screen:** Displays animations based on mode.
5. **Projection Light:** Flashing light synchronized with sounds.
6. **Automatic Shut-off:** Unit will turn off automatically.

## Care & Maintenance

1. Clean with a slightly damp cloth.
2. Avoid direct sunlight and heat sources.
3. Remove batteries if not in use for an extended period.
4. Avoid dropping on hard surfaces or exposure to moisture.
5. If malfunctioning, install new batteries.

## FAQ

### Q: How can I contact consumer services?

**A:** For UK Customers: Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK), Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

**Australian Customers:** Phone: 1800 862 155, Website: [support.vtech.com.au](http://support.vtech.com.au)

**NZ Customers:** Phone: 0800 400 785, Website: [support.vtech.com.au](http://support.vtech.com.au)

### Q: What is the warranty policy?

**A:** UK Customers can read the complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level ...

**vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

### I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

 
...to show my creativity with drawing and music so my whole brain develops

### I need...

...challenging activities that can keep pace with my growing mind


...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

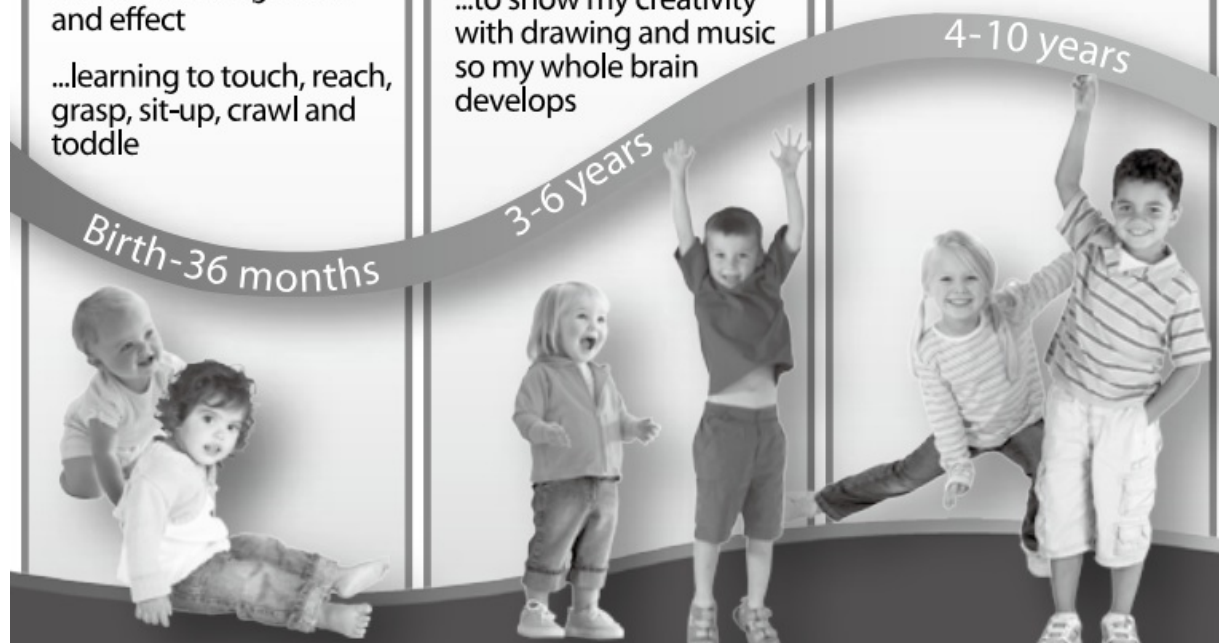

## INTRODUCTION

 Switch into fun with Switch & Go Dinos® Talon the Pterodactyl! Switch this agile Pterodactyl into speedy race car and back again in just a few simple steps! 60+ sounds and phrases, cool light effects and an animated LCD screen bring the action to life in your very own dino universe!

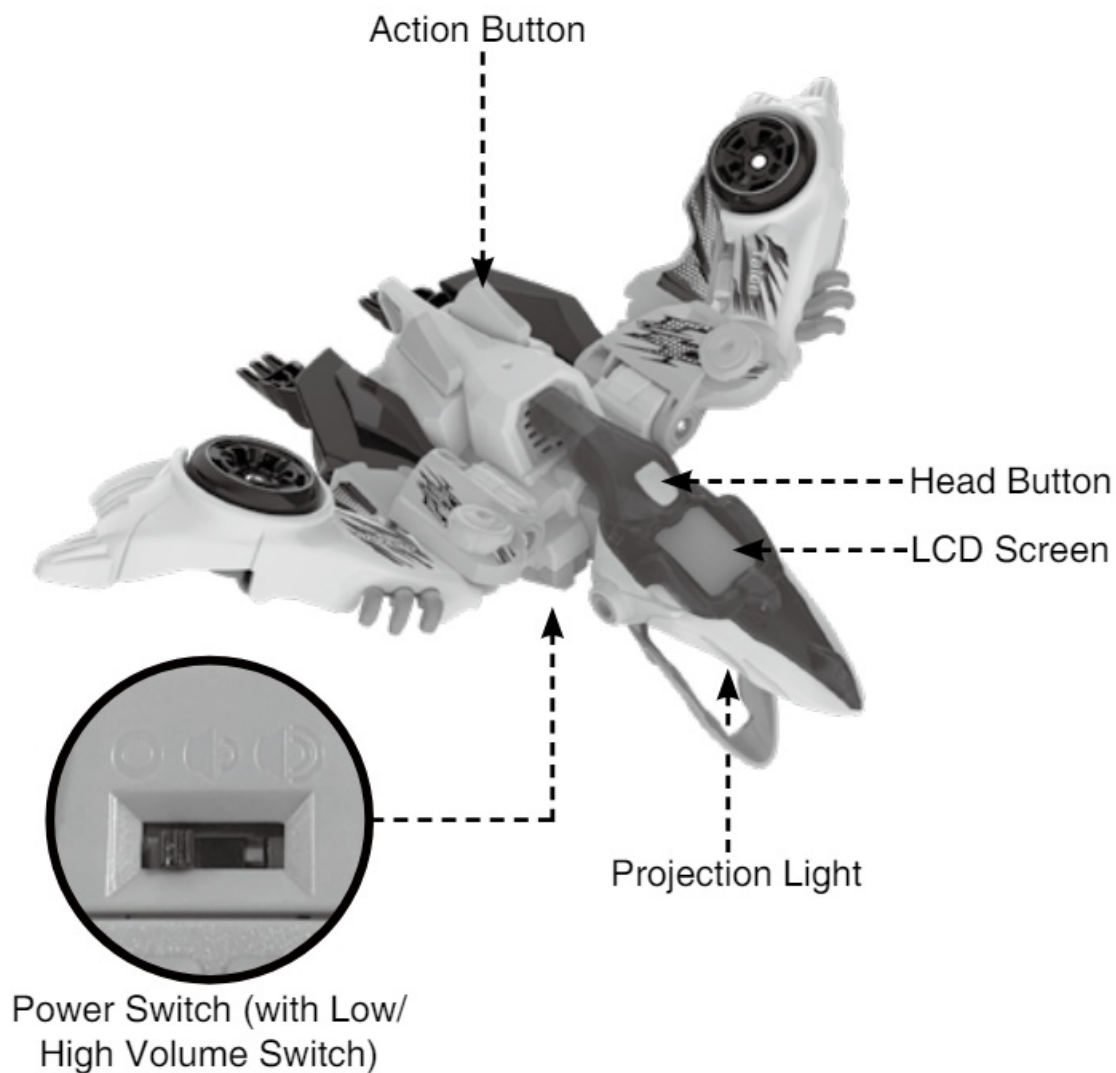

## INCLUDED IN THE PACKAGE

- Switch & Go Dinos® Talon the Pterodactyl
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## GETTING STARTED

### WARNING:

 
Adult assembly required for battery installation.  
Keep batteries out of reach of children.

### Battery Removal and Installation

1. Make sure the unit is turned Off.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the

battery cover.

3. If used batteries are present, remove them from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

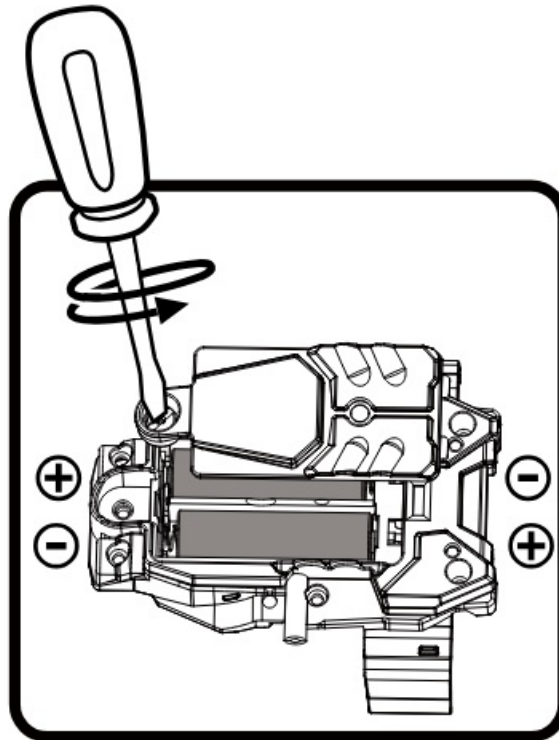

#### **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

#### **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

#### **Disposal of batteries and product**

 
- The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.
- The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified

value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.


- The solid bar indicates that the product was placed on the market after 13th August, 2005.
- Please dispose of your product and batteries responsibly.
- In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.
- Learn more at: [www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)  
[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)
- Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

## HOW TO SWITCH


1. Dino mode.
2. Close the dino's beak.
3. Flip the black pieces on the underside of the wings out.
4. Turn the wings forwards.

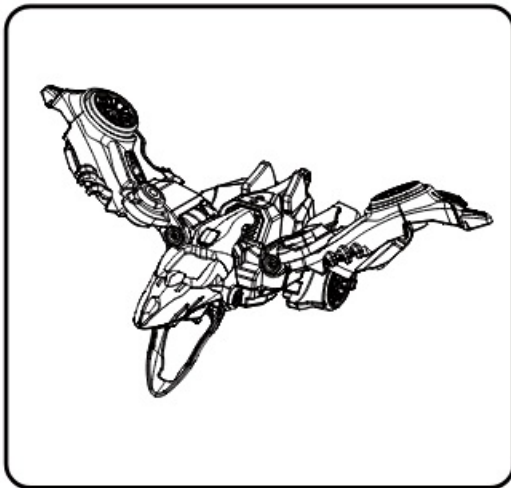

 
1. Dino mode.

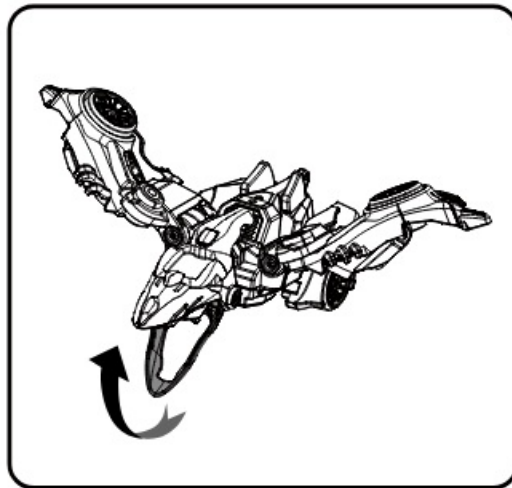

 2. Close the dino's beak.

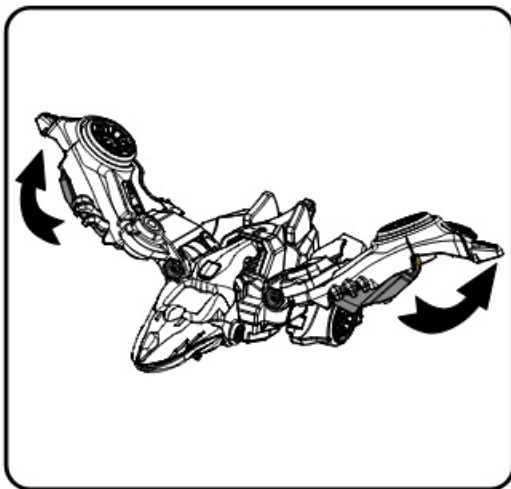

 
3. Flip the black pieces on the underside of the wings out.

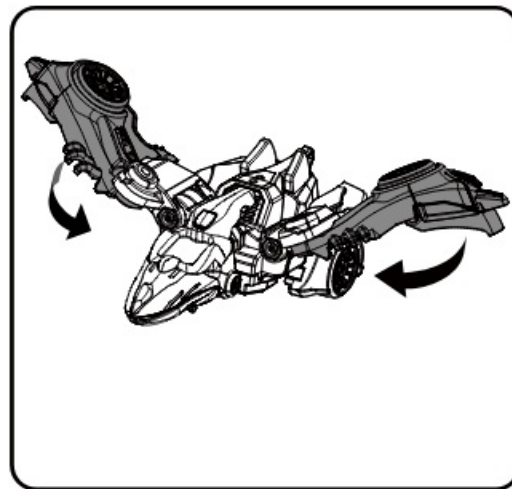


4. Turn the wings forwards.

 5. Fold the wings down.
6. Fold in the feet and wing side panels.
7. Vehicle mode.




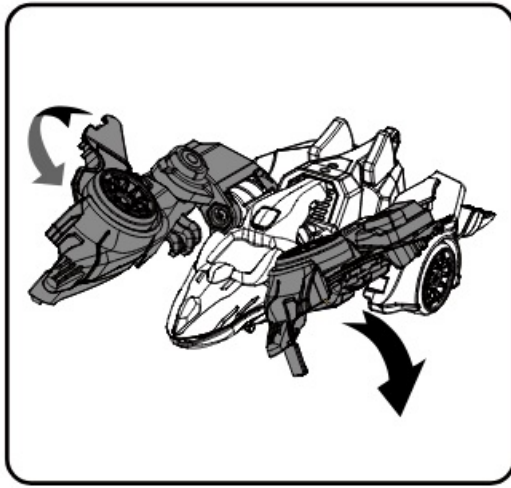

 5. Fold the wings down.

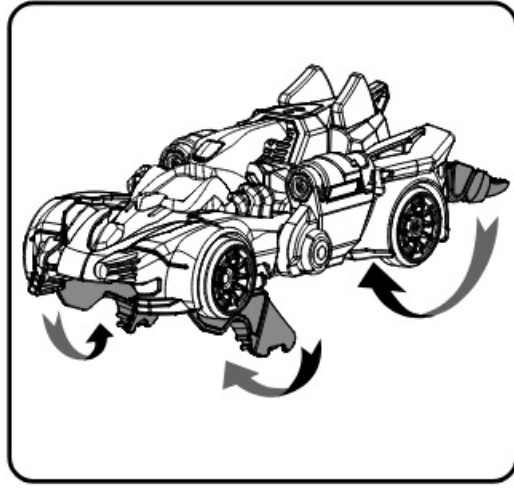

 6. Fold in the feet and wing side panels.

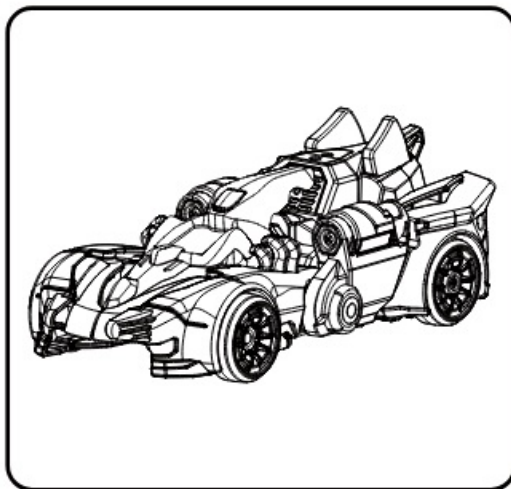

Note: To switch from Vehicle Mode to Dino Mode, follow the above steps in reverse order.

## PRODUCT FEATURES

### 1. Power Switch

To turn the unit On or to adjust the volume, slide the switch to the Low or High Volume position. To turn the unit Off, slide the switch to the Off position.

 
### 2. Head Button

In Dino mode, press the Head Button to hear fun phrases, Dino facts and dinosaur sounds. A light projection will accompany the response. In Vehicle mode, press the Head Button to hear fun phrases and cool vehicle sounds.

### 3. Action Button

Press the Action Button to hear cool sound effects and to flap Talon's wings.



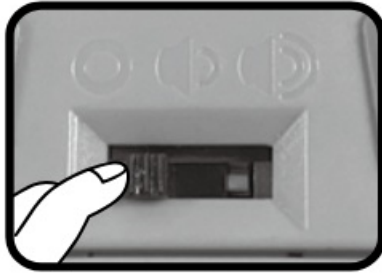

Note: Make sure Talon's wings are folded out fully before pressing the Action Button.

#### 4. **LCD Screen**

 
The LCD Screen shows dino eye animations in Dino mode and shows driver animations in Vehicle mode.

#### 5. **Projection Light**

The Projection Light will flash along with the sounds in Dino mode and Vehicle mode.

#### 6. **Automatic Shut-off**

To preserve battery life, Switch & Go Dinos® Talon the Pterodactyl will automatically power down after several seconds without input. Talon can be turned on again by pressing the Head Button or Action Button. Talon will also automatically turn off when battery power is very low.

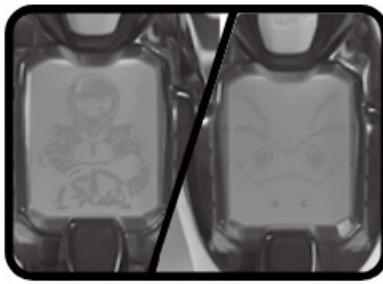

**Note:** If Talon repeatedly powers down or has abnormal responses when switched on, please install brand new batteries.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a brand new set of batteries.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

## CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur.

It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

**Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

**NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

**PRODUCT WARRANTY/ CONSUMER GUARANTEES****UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

**Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

 
Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

Visit our website for more information about our products, downloads, resources and more.

[www.vtech.co.uk](http://www.vtech.co.uk)

[www.vtech.com.au](http://www.vtech.com.au)

**Documents / Resources**

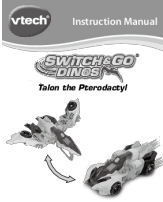	<p><a href="#">vtech SWITCH and Go DINOS Talon the Pterodactyl</a> [pdf] Instruction Manual SWITCH and Go DINOS Talon the Pterodactyl, SWITCH and Go DINOS, Talon the Pterodactyl, Pterodactyl</p>
---	--

**References**

- [Support : VTech Electronics](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.