

vtech the T-Rex Switch and Go Dinos Instruction Manual



 
Contents

- 1 Instruction Manual**
 - 1.1 Thrash the T-Rex**
 - 1.1.1 vtech Baby
 - 1.1.2 Pre-School
 - 1.1.3 Electronic Learning computers
 - 1.2 INTRODUCTION**
 - 1.3 INCLUDED IN THIS PACKAGE**
 - 1.4 INSTRUCTIONS**
 - 1.4.1 BATTERY REMOVAL AND INSTALLATION**
 - 1.4.2 IMPORTANT: BATTERY INFORMATION**
 - 1.5 PRODUCT FEATURES**
 - 1.6 HOW TO SWITCH**
 - 1.7 CARE & MAINTENANCE**
 - 1.8 TROUBLESHOOTING**
 - 1.9 CONSUMER SERVICES**
 - 1.10 PRODUCT WARRANTY/ CONSUMER GUARANTEES**
- 2 Documents / Resources**
 - 2.1 References
- 3 Related Posts**

Instruction Manual



Thrash the T-Rex

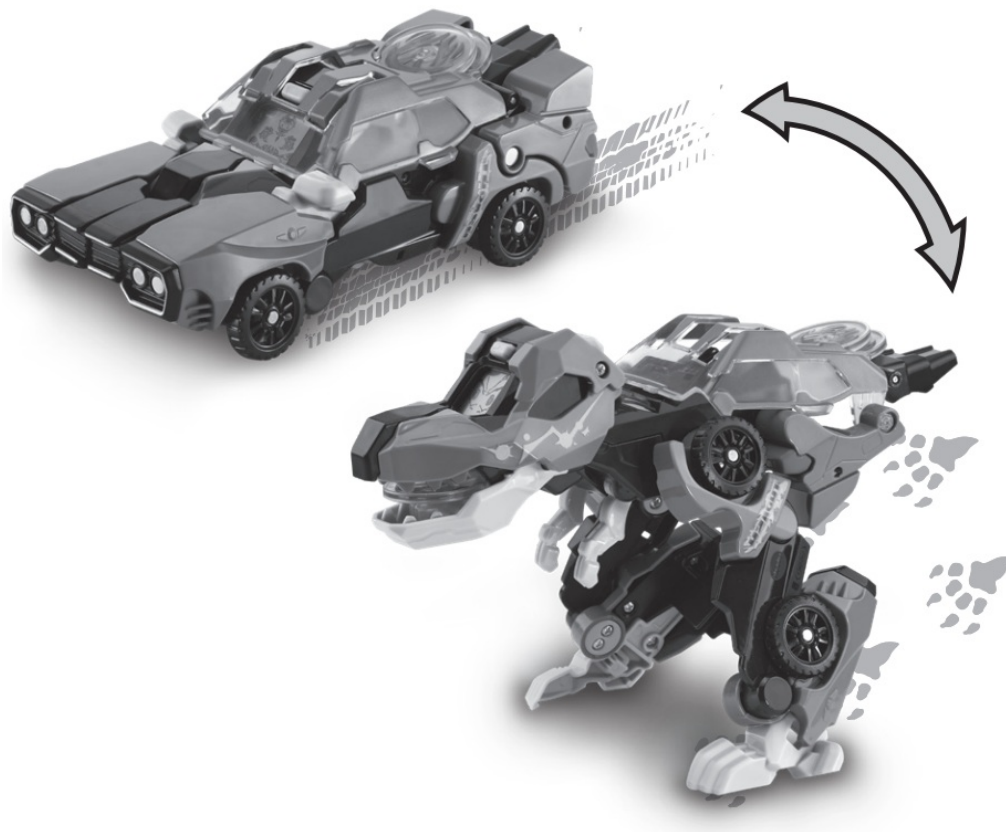

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle



Pre-School

 
Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

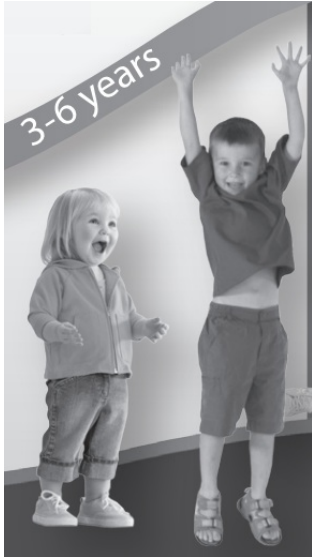

Electronic Learning computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

 
...National Curriculum based content to support what I'm learning at school



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Time for some roaring fun with **Thrash the T-Rex!** This wild Switch & Go Dino is an exciting 2-in-1 toy which switches between a wild T-Rex and a fast Vehicle! Load a Disc into the Dino mouth and press the Launch Button to launch the Disc for fun! Press the Talk Button to hear fun phrases and cool sound effects! Let's Switch & Go!

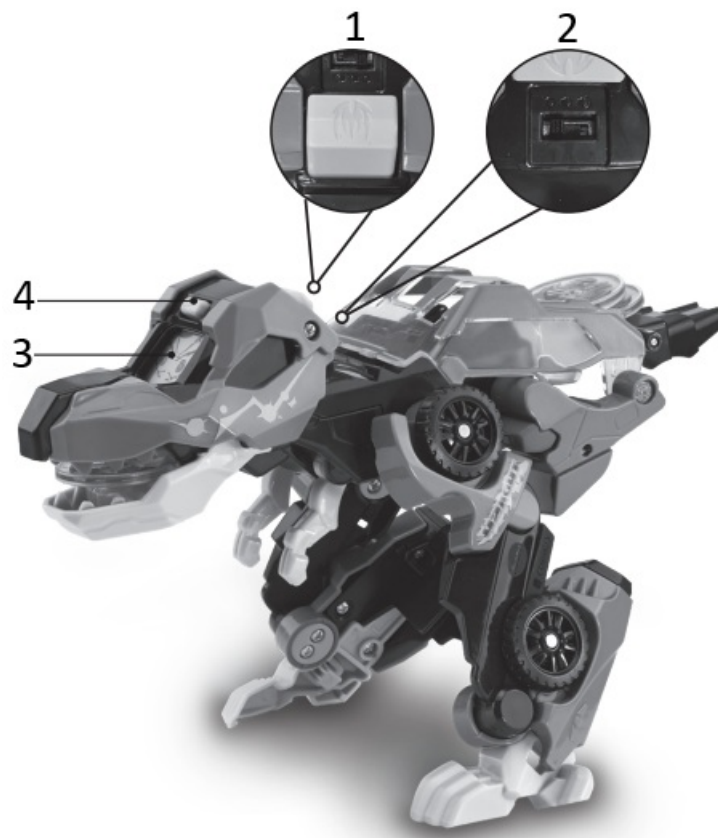

1. Launch Button
2. Off/Low/High Volume Switch
3. LCD Screen
4. Talk Button

INCLUDED IN THIS PACKAGE

- **Switch & Go Dinos Thrash the T-Rex**
- 3 Discs
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

 
NOTE:

Please save this Instruction Manual as it contains important information.

INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

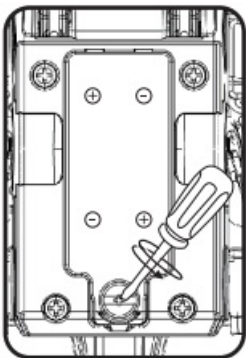

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

WARNING:

Do not aim at eyes or face.

WARNING:

Do not discharge any object other than the projectile provided with this toy.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.

- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005. Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:




Visit www.recyclenow.com to see a list of collection points near you.

 
In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

To turn the unit **On** or to adjust the volume, slide the switch to the Low  or High Volume  position. To turn the unit **Off**, slide the switch to the Off  position.

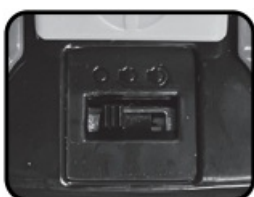

2. Talk Button

Press the **Talk Button** to hear fun phrases and cool dinosaur sounds in Dino mode. In Vehicle mode, press the **Talk Button** to hear fun phrases and great vehicle sounds.



3. Launch Button

Load a Disc into the Dino mouth and then press the Launch Button to launch the Disc.



4. LCD Screen

 
The **LCD Screen** switches between Dino eye animations in Dino mode and driver animations in Vehicle mode.




5. Automatic Shut-off

To preserve battery life, the unit will automatically shut off after approximately 20 seconds without input. The unit can be woken up again by pressing the **Talk Button** or by switching between Dino and Vehicle modes. The unit will also automatically turn off when battery power is very low.


HOW TO SWITCH

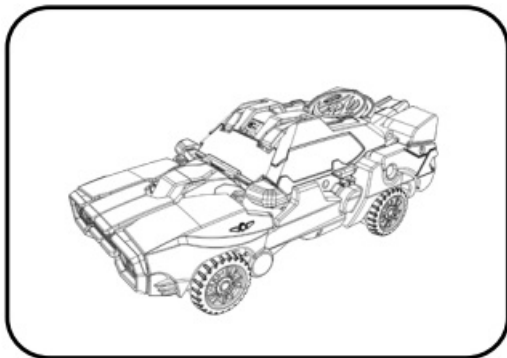

 
1. Vehicle mode.

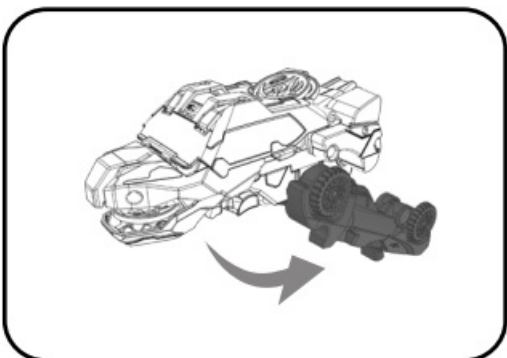

 
2. Rotate the leg section back.

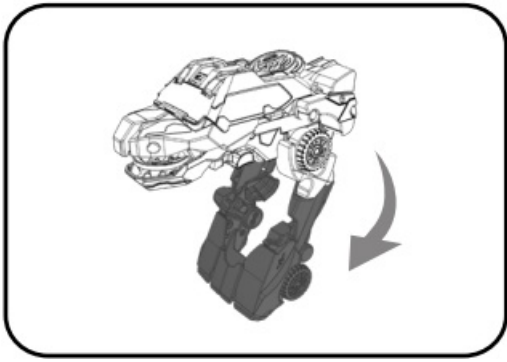

 
3. Rotate the main leg joints forward.

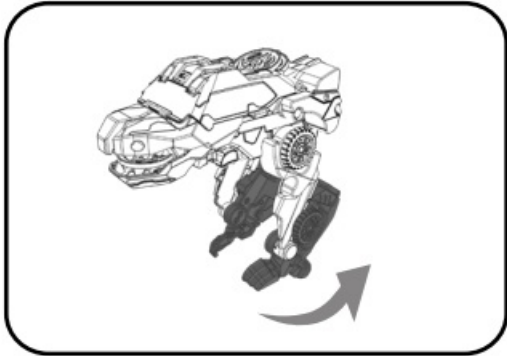

 
4. Rotate the lower leg joints back.

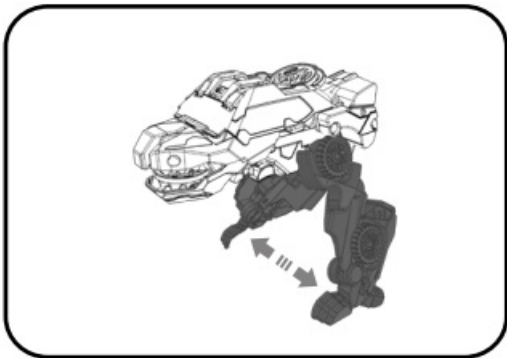

 
5. Separate the leg section apart.

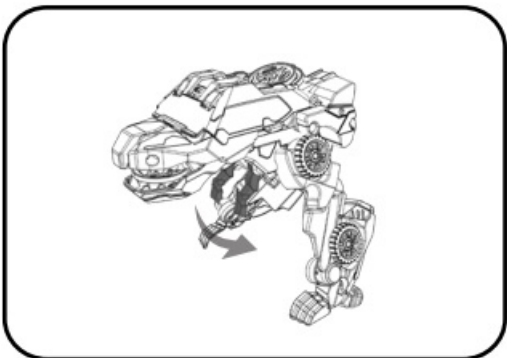

 6. Flip the arms down.

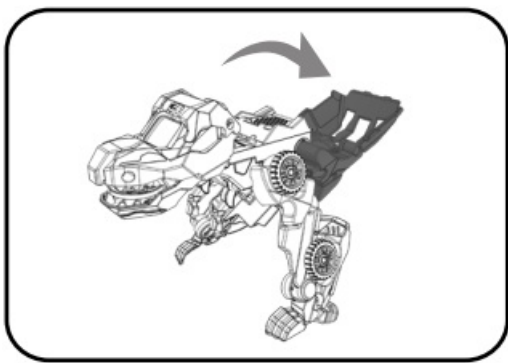

 7. Flip car roof back.

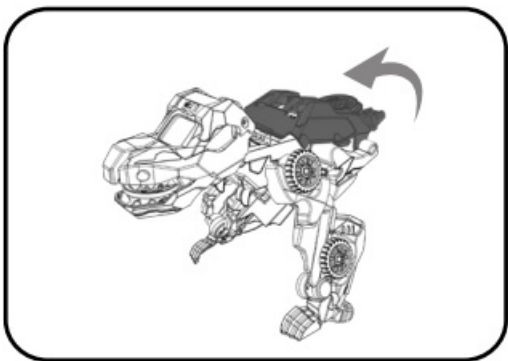

8. Flip the tail up. Thrash is now in Dino mode.

NOTE

To switch Thrash back into a Vehicle, follow the above steps in reverse order.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products.

However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk

www.vtech.com.au



TM & © 2022 VTech Holdings Limited.

All rights reserved.

IM-559000-000

Version:0

Documents / Resources



[vtech the T-Rex Switch and Go Dinos](#) [pdf] Instruction Manual
the T-Rex Switch and Go Dinos, the T-Rex, Switch and Go Dinos, Go Dinos, Dinos

References

- [Support : VTech Electronics](#)
- [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [Electronic Learning Toys | Best Learning Toys | VTech UK](#)
- [VTech Toys Australia - Electronic Learning Toys - Best Learning Toys - VTech Australia and New Zealand](#)