

VTECH 80-138150 LITTLE SMARTPHONE



VTech 80-138150 Little Smartphone User's Manual

[Home](#) » [vtech](#) » VTech 80-138150 Little Smartphone User's Manual 

Contents

- 1 VTech 80-138150 Little Smartphone
- 2 INTRODUCTION
- 3 INSTRUCTIONS
- 4 PRODUCT FEATURES
- 5 ACTIVITIES
- 6 MELODY LIST
- 7 SUNG SONG LYRICS
- 8 CARE & MAINTENANCE
- 9 TROUBLESHOOTING
- 10 PRODUCT WARRANTY
- 11 FREQUENTLY ASKED QUESTIONS
- 12 VIDEO – PRODUCT OVERVIEW
- 13 References
- 14 Related Posts



VTech 80-138150 Little Smartphone



Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the Infant Learning® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s Infant Learning® toys develop babies' mental and physical abilities by inspiring, engaging, and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

Your friends at VTech®

To learn more about VTech® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the VTech® Little SmartPhone™ learning toy! The VTech® Little SmartPhone™ is a trendy phone just for infants! Its small and sleek size is perfect for little hands. Your child can press the buttons to learn numbers and colors. The music, voice mail, and phone buttons encourage sing-along and role-play fun. For added interactivity, a holographic image with puppy and kitty characters stimulates your child's imagination as they pretend and play!



INCLUDED IN THIS PACKAGE

 
- One VTech® Little SmartPhone™ learning toy
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this user's manual as it contains important information.

Demo strip removal: When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode.


Unlock the Packaging Locks:

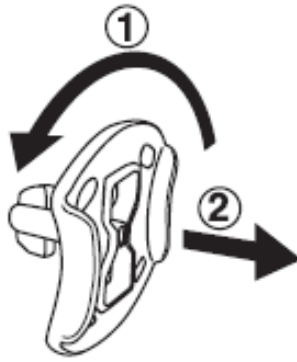

1. Rotate the packaging locks 90 degrees counter-clockwise.
2. Pull out the packaging locks.

INSTRUCTIONS

 BATTERY INSTALLATION

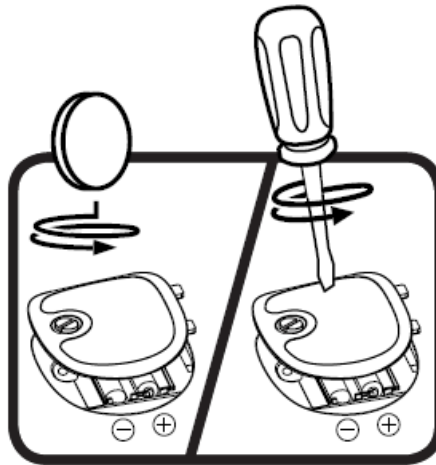

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the product. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

BATTERY NOTICE



- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.

- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES



1. ON/OFF SWITCH

 
To turn the unit ON, slide the ON/OFF SWITCH to the ON () position. To turn the unit OFF, slide the ON/OFF SWITCH to the OFF () position.

2. AUTOMATIC SHUT-OFF


To preserve battery life, the VTech® Little SmartPhone™ will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Slide the on/off button to turn the unit on. You will hear a short tune and a phrase with a happy sing-along song. The lights will flash with the sound.
2. Press the light-up voice mail button to hear animal sounds and fun phrases. You can also check your messages! The lights will flash with the sound.

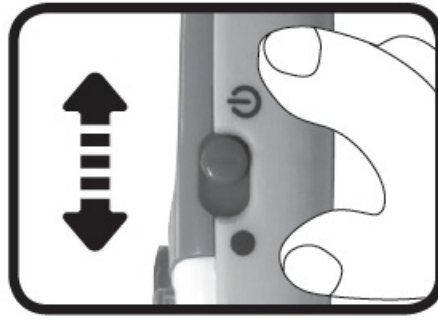

 3. Press the light-up phone button to hear fun sounds, phrases and a fun sing-along song. The lights will flash with the sound.
4. Press the light-up music button to hear fun sing-along songs and playful melodies. When a melody is playing, press the number buttons to hear the melody played one note at a time. The lights will flash with the sound.
5. Press the number buttons to learn numbers and colors and hear short tunes and phone sounds. The lights will flash with the sound.

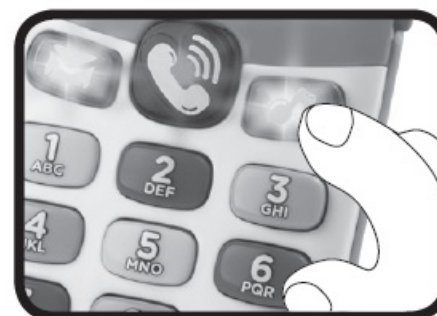

MELODY LIST

1. Mary Had a Little Lamb
2. Teddy Bears' Picnic
3. Pat-a-cake
4. Here We Go Round the Mullberry Bush
5. Yankee Doodle
6. A-Tisket, A-Tasket
7. Camptown Races
8. Bingo

SUNG SONG LYRICS

• SONG 1

- 1-2-3,
- 4-5-6,
- 7-8 and 9,
- Press the number buttons to call your friends.

• SONG 2

- A-B-C-D-E-F-G,
- H-I-J-K-L-M-N-O-P,
- Q-R-S-T-U-V,
- W-X-Y and Z!
- Now I know my ABC's,
- Next time won't you sing with me?

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace it with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada.

IMPORTANT NOTE: Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S., or 1-[877-352-8697](tel:877-352-8697) in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PRODUCT WARRANTY

- This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

- Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-[800-521-2010](tel:800-521-2010). If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:
- If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase data and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.
- THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.
- To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.
- This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech .

To register your product online at www.vtechkids.com/warranty

FREQUENTLY ASKED QUESTIONS

What are the product dimensions of the VTech 80-138150 Little Smartphone?

The VTech 80-138150 Little Smartphone measures 3 x 4.2 x 5.8 inches.

What is the weight of the VTech 80-138150 Little Smartphone?

The VTech 80-138150 Little Smartphone weighs 4.8 ounces.

What age range is recommended for the VTech 80-138150 Little Smartphone?

The VTech 80-138150 Little Smartphone is recommended for children aged 6 months to 3 years.

What type of batteries does the VTech 80-138150 Little Smartphone require?

The VTech 80-138150 Little Smartphone requires 2 AAA batteries.

What should I do if the VTech 80-138150 Little Smartphone does not turn on?

Ensure the 2 AAA batteries are properly installed and not depleted. If the VTech 80-138150 Little Smartphone still does not turn on, try replacing the batteries with new ones.

How can I fix the issue if the lights on the VTech 80-138150 Little Smartphone are not working?

Verify that the batteries are correctly installed and have sufficient charge. If the lights still do not work, try replacing the batteries with new ones.

What steps should I take if the sound on the VTech 80-138150 Little Smartphone is too low or distorted?

Check the battery level and replace the batteries if necessary. Low battery power can cause sound issues in the VTech 80-138150 Little Smartphone.

How can I reset the VTech 80-138150 Little Smartphone if it freezes or becomes unresponsive?

Remove the 2 AAA batteries for a few minutes, then reinsert them. This can reset the VTech 80-138150 Little Smartphone and resolve any temporary issues.

What should I do if the touch-sensitive buttons on the VTech 80-138150 Little Smartphone are not responding?

Ensure the buttons are clean and free from debris. Gently clean the buttons with a dry cloth and check that the batteries are not depleted.

Why is my VTech 80-138150 Little Smartphone intermittently turning off?

Check the battery compartment to ensure the batteries are securely in place. Loose batteries can cause the VTech 80-138150 Little Smartphone to turn off unexpectedly. Replace the batteries if the issue continues.

What can I do if the VTech 80-138150 Little Smartphone is not playing sounds?

Make sure the volume is turned up. If the volume is set correctly and the sounds are still not playing, check and replace the batteries if needed.

How do I address the issue if the songs on the VTech 80-138150 Little Smartphone are not playing?

Ensure the volume is turned up. If the volume is set correctly and the songs are still not playing, check and replace the batteries if necessary.

What should I do if the screen on the VTech 80-138150 Little Smartphone is not displaying correctly?

Verify that the batteries are properly installed and have sufficient charge. If the screen still does not display correctly, try resetting the device by removing and reinserting the batteries.

How can I resolve issues with the VTech 80-138150 Little Smartphone not switching between modes?

Turn off the VTech 80-138150 Little Smartphone, remove the batteries, and wait a few minutes before reinserting them. This can help reset the mode settings and resolve the issue.

VIDEO – PRODUCT OVERVIEW



[Download the PDF link: https://www.manualslib.com/manual/166150/Apple-iPhone-11-Series-Manual-Smartphone-Users-Manual.mp4](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.