



P

VTech 80-139300 Call and Chat Learning Phone User's Manual

Home » vtech » VTech 80-139300 Call and Chat Learning Phone User's Manual

Contents

- 1 VTech 80-139300 Call and Chat Learning
- **Phone**
- **2 INTRODUCTION**
- **3 GETTING STARTED**
- **4 PRODUCT FEATURES**
- **5 ACTIVITIES**
- **6 CARE & MAINTENANCE**
- **7 TROUBLESHOOTING**
- **8 PRODUCT WARRANTY**
- 9 FREQUENTLY ASKED QUESTIONS
- 10 VIDEO PRODUCT OVERVIEW
- 11 References
- **12 Related Posts**



VTech 80-139300 Call and Chat Learning Phone



Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the Infant Learning® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s Infant Learning® toys develop babies' mental and physical abilities by inspiring, engaging, and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,


Your friends at VTech®

To learn more about VTech® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the VTech® Call & Chat Learning PhoneTM. The VTech® Call & Chat Learning

PhoneTM helps your child learn while experiencing great pretend play with their very own smart phone. 10 activities teach letters, alphabetical order, numbers, time concepts, music and more! A special microphone feature also allows your child to use real voice activation play, and a phone book allows for pretend calls to family and friends. Ready for a chat? Just pick up your Call & Chat Learning PhoneTM and start talking!

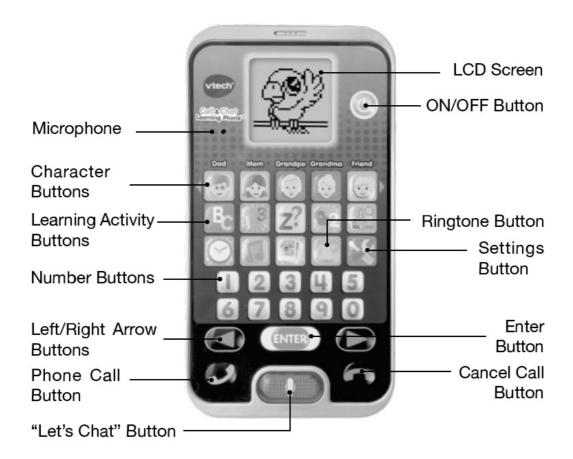


INCLUDED IN THIS PACKAGE

- One VTech® Call & Chat Learning PhoneTM
- · One user's manual

WARNING: All packing materials such as tape, plastic sheets, packing locks and tag are not part of this toy, and should be discarded for your child's safety.

Note: Please keep this user's manual as it contains important information.


Unlock the packaging locks:

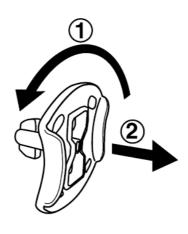

- 1. Rotate the packaging locks 90 degrees counter-clockwise.
- 2. Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

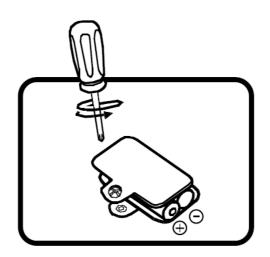

- 1. Make sure the unit is OFF.
- 2. Locate the battery cover on the back of the unit.
- 3. Use a screwdriver to open the battery cover.
- 4. Install 2 new "AAA" Size (AM-4/LR03) batteries following the diagram inside the battery box.
- 5. Replace the battery cover.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- · Insert batteries with the correct polarity.
- · Do not short-circuit the battery terminals.

- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- · Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF BUTTON



Press the ON/OFF Button to turn the unit ON and press it again to turn the unit OFF.

2. 5 CHARACTER BUTTONS

Press one of the 5 CHARACTER BUTTONS to bring up that person's phone number.











3. LEARNING ACTIVITY BUTTONS

Press the LEARNING ACTIVITY BUTTONS directly to play one of the 8 learning activities.















4. LET'S CHAT BUTTON



Press the LET'S CHAT BUTTON to enter the Let's Chat activity. This activity uses the voice activation feature.

5. RINGTONE BUTTON



Press the RINGTONE BUTTON to set the ringtone of your phone. There are 5 different ringtones to choose from. Use the arrow buttons to select one and then press Enter to confirm. The selected ringtone will be heard when pressing the PHONE CALL BUTTON.

6. SETTINGS BUTTON



Press the SETTINGS BUTTON to adjust the screen contrast or turn the background music on/off. Use the arrow buttons and Enter to select which item to adjust, then use the arrow buttons to make adjustments. Press Enter to confirm and exit the Settings menu.

7. PHONE CALL BUTTON

Press the PHONE CALL BUTTON to make a phone call. You will hear the phone ringing and then be able to leave a message on the answering machine.

8. CANCEL CALL BUTTON

Press the Cancel Call Button at any time to exit the current activity and return to the opening animation.

9. MICROPHONE

This Microphone hole is used for the voice activation feature. The suggested distance to keep between the microphone and your mouth is about 4-5 inches.



10. ENTER BUTTON ENTER

Press the ENTER Button to confirm your choice.

11. ARROW BUTTONS

Press the ARROW BUTTONS to make a selection in activities or menus.

12. NUMBER BUTTONS

Press the NUMBER BUTTONS to learn numbers or to answer number-related questions.



13. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after several minutes without input. The unit can be turned on again by pressing the ON/OFF Button. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

ACTIVITIES

The VTech® Call & Chat Learning PhoneTM offers a total of 10 fun activities to play.

1. Phone Book

Press any of the 5 CHARACTER BUTTONS to enter that person's phone number page. Press the Call button to call them, then use the microphone feature to leave a message when you see the light go on. You can also edit the default phone number for each person. Just press Enter when in the phone number page and use the arrow and number buttons to change the phone number.

2. Letter Chat


In this activity, you can learn the letters of the alphabet by using the arrow buttons to scroll from A to Z.

3. Number Counting

In this activity, press any number to show the number and see a counting animation. Use the arrow buttons to scroll from one number to the next.

4. Letter Quiz

In this activity, you will be asked some letter questions. Use the arrow buttons to choose your answer and then press Enter.

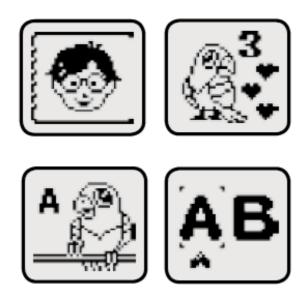

5. Number Quiz

In this activity, you will be asked some number questions that will gradually get more challenging. Use the arrow buttons to choose your answer and then press Enter, or press the number buttons directly to answer the question.

6. Charge It Up!


Uh oh! The cell phone's battery is low. Let's charge the phone by using wind power and solar power. Listen to the instructions and then blow into the microphone to spin the windmill or move the clouds away from the sun.

7. My Clock

In this activity, you can learn the different hours on a clock. Use the arrow buttons to move the clock hands and press Enter to hear the clock chime out the number.

8. Music Fun

In this activity, you can choose from 5 different melodies to enjoy. While listening to the melody, press the arrow buttons to change instruments for added fun.

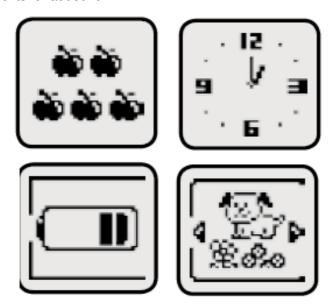

9. Picture Fun

In this activity, you can choose from 8 different pictures to enjoy. Use the arrow buttons to choose another picture and press Enter to watch an animation.

10. Let's Chat

In this activity, you can press the Let's Chat button to make a call to the friendly bird. He loves to chat and will ask you questions. Use the microphone to have a chat with him and respond to his questions. Press the cancel

button at any time to hang up.





CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit ON. The unit should now be ready to play again.
- 5. If the product still does not work, replace it with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE: Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part

15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- 1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- 2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PRODUCT WARRANTY

- This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.
- Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:
- If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the
 purchase data and location of the product, we will at our discretion replace the product with a new unit or
 product of comparable value. A replacement product or parts assumes the remaining Warranty of the original
 product or 30 days from the date of replacement, whichever provides longer coverage.
- THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY,

EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

- To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.
- This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

To register your product online at www.vtechkids.com/warranty

FREQUENTLY ASKED QUESTIONS

What is the VTech 80-139300 Call and Chat Learning Phone?

The VTech 80-139300 Call and Chat Learning Phone is an interactive toy designed to mimic a real phone, helping children aged 24 months to 5 years learn through pretend play and educational activities.

What are the dimensions of the VTech 80-139300 Call and Chat Learning Phone?

The VTech 80-139300 Call and Chat Learning Phone measures 0.91 inches in length, 3.27 inches in width, and 5.91 inches in height.

How much does the VTech 80-139300 Call and Chat Learning Phone weigh?

The VTech 80-139300 Call and Chat Learning Phone weighs 4.8 ounces.

What age group is the VTech 80-139300 Call and Chat Learning Phone suitable for?

The VTech 80-139300 Call and Chat Learning Phone is suitable for children aged 24 months to 5 years.

What kind of batteries does the VTech 80-139300 Call and Chat Learning Phone require?

The VTech 80-139300 Call and Chat Learning Phone requires 2 AAA batteries.

What is the price of the VTech 80-139300 Call and Chat Learning Phone?

The VTech 80-139300 Call and Chat Learning Phone is priced at \$12.88.

What is the item model number for the VTech 80-139300 Call and Chat Learning Phone?

The item model number for the VTech 80-139300 Call and Chat Learning Phone is 80-139300.

Who is the manufacturer of the VTech 80-139300 Call and Chat Learning Phone?

The manufacturer of the VTech 80-139300 Call and Chat Learning Phone is VTech.

How do you clean the VTech 80-139300 Call and Chat Learning Phone?

To clean the VTech 80-139300 Call and Chat Learning Phone, wipe it with a damp cloth and mild soap. Avoid submerging the phone in water, as it contains electronic components.

Does the VTech 80-139300 Call and Chat Learning Phone come with a warranty?

VTech 80-139300 Call and Chat Learning Phone comes with a 3-month warranty.

Why is my VTech 80-139300 Call and Chat Learning Phone not turning on?

Ensure the batteries in the VTech 80-139300 Call and Chat Learning Phone are properly installed and have sufficient charge. Replace the batteries if necessary. Check that the power switch is set to the On position.

What should I do if the sound on my VTech 80-139300 Call and Chat Learning Phone is not working?

Check the volume settings on the VTech 80-139300 Call and Chat Learning Phone. Make sure the batteries are not depleted and are correctly installed. Try replacing the batteries with fresh ones if the sound issue persists.

Why does my VTech 80-139300 Call and Chat Learning Phone stop working intermittently?

This could be due to low battery power. Replace the batteries in the VTech 80-139300 Call and Chat Learning Phone with new ones. Ensure the battery compartment is clean and free from any corrosion.

How can I fix my VTech 80-139300 Call and Chat Learning Phone if the buttons are not responding?

Clean around the buttons of the VTech 80-139300 Call and Chat Learning Phone to remove any debris or sticky residue. Ensure the buttons are not jammed.

What should I do if the screen on my VTech 80-139300 Call and Chat Learning Phone is not displaying properly?

Ensure the VTech 80-139300 Call and Chat Learning Phone has fresh batteries installed. If the screen still does not function correctly, check for any loose connections inside the battery compartment.

VIDEO - PRODUCT OVERVIEW

REFERENCE: VTech 80-139300 Call and Chat Learning Phone User's Manual -Device.Report

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.