



80-141470  
SWITCH & GO  
VELOCIRAPTOR  
HELICOPTER



# VTech 80-141470 Switch & Go Velociraptor Helicopter User's Guide

[Home](#) » [vtech](#) » VTech 80-141470 Switch & Go Velociraptor Helicopter User's Guide 

## Contents

- [1 VTech 80-141470 Switch & Go Velociraptor Helicopter](#)
- [2 INTRODUCTION](#)
- [3 GETTING STARTED](#)
- [4 PRODUCT FEATURES](#)
- [5 TRANSFORMATION](#)
- [6 CARE & MAINTENANCE](#)
- [7 TROUBLESHOOTING](#)
- [8 PRODUCT WARRANTY](#)
- [9 FREQUENTLY ASKED QUESTIONS](#)
- [10 VIDEO – PRODUCT OVERVIEW](#)
- [11 References](#)
- [12 Related Posts](#)




**VTech 80-141470 Switch & Go Velociraptor Helicopter**



## INTRODUCTION

 Thank you for purchasing the Switch & GoTM Velociraptor Helicopter. Engage your imagination with the helicopter that transforms into a fierce velociraptor. Use the action button and sound effects to bring the Velociraptor Helicopter to life in your very own dinosaur universe.

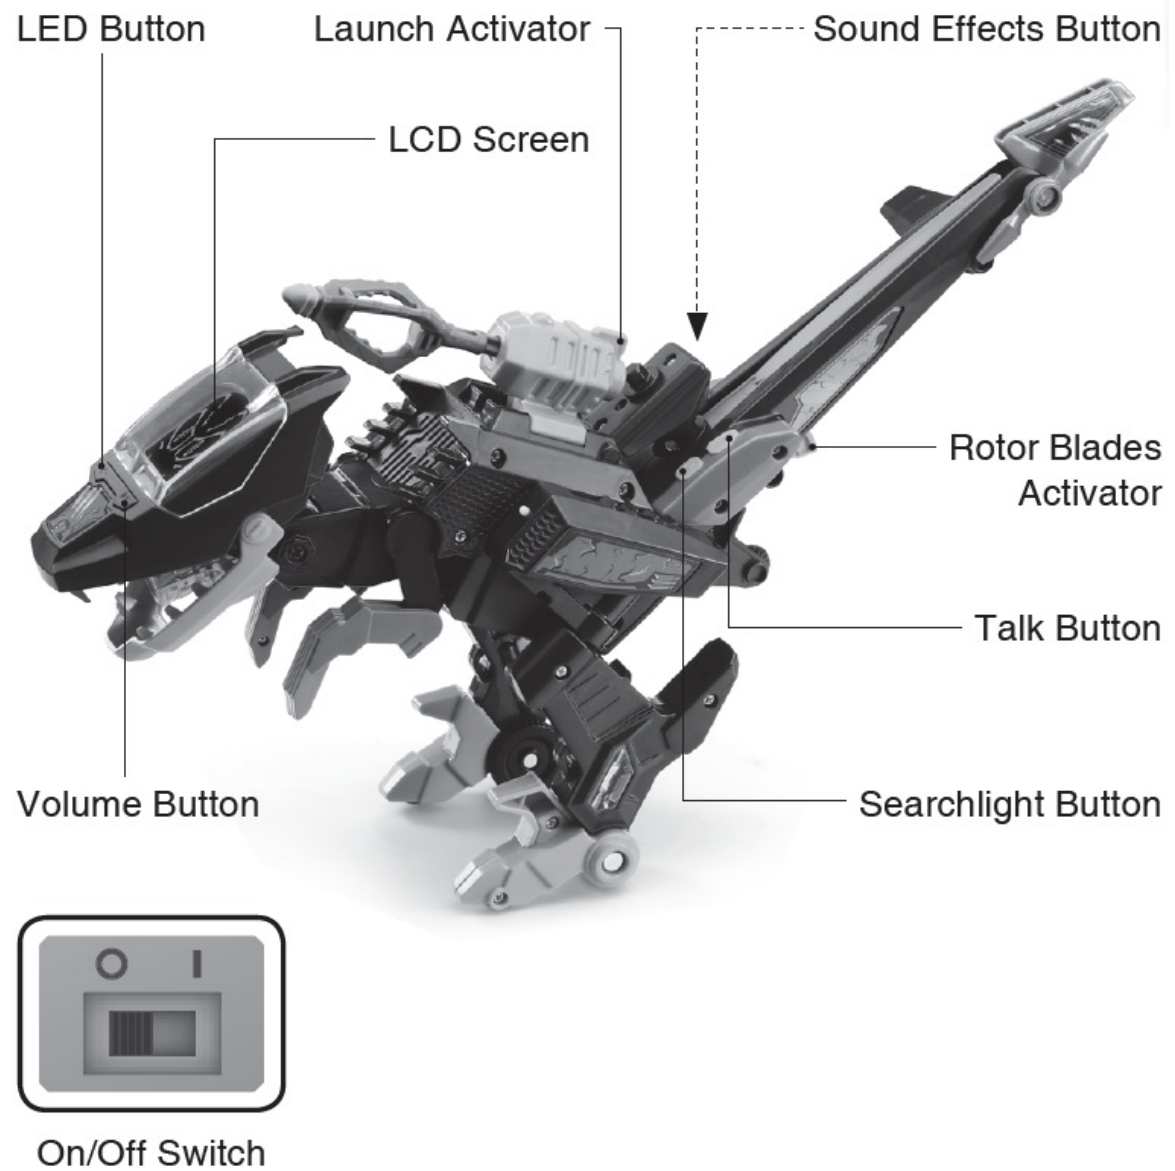

## INCLUDED IN THIS PACKAGE

 
- Switch & Go™ Velociraptor Helicopter
- Parent's guide

**WARNING** All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE** Please keep this parent's guide as it contains important information.

## GETTING STARTED

### Battery Removal and Installation

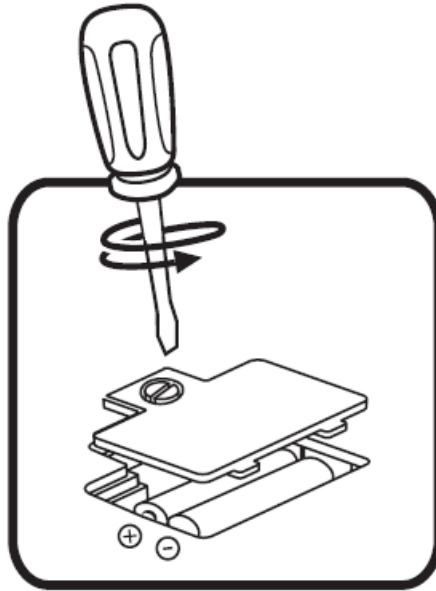




1. Make sure the unit is turned Off.
2. Find the battery cover located on the bottom of the unit and use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure it.

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## PRODUCT FEATURES

1. **On/Off Switch** 

Slide the On/Off Switch to the On position  to turn the unit On. Slide the On/Off Switch to the Off position   
or hold the Talk Button  for a few seconds to turn the unit Off.

## 2. LED Button

Press the LED Button to make the LED light flash.

## 3. Volume Button

 
 
 
 
Press the Volume Button to adjust the volume.

## 4. Talk Button

Press the Talk Button to hear the dino or pilot talk.

## 5. Sound Effects Button

Press the Sound Effects Button to hear cool sound effects.

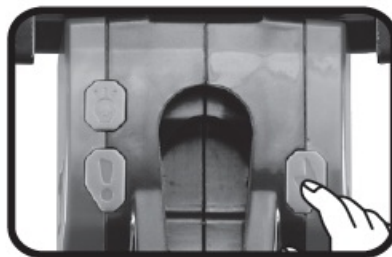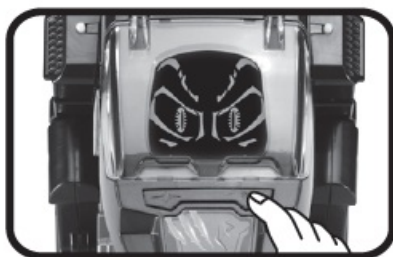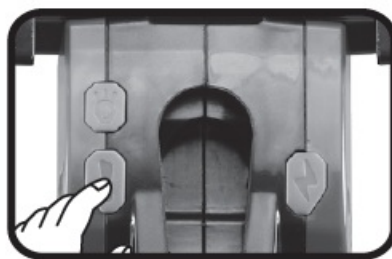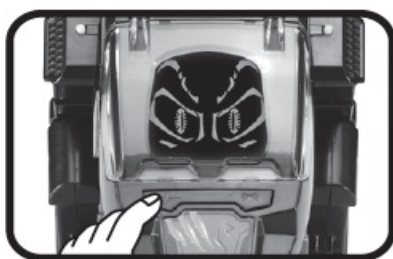

## 6. Searchlight Button

Press the Searchlight Button to turn on the searchlight.

## 7. Launch Activator

 
 
 
Press the Launch Activator to launch the rocket.

## 8. Propeller Activator

Press the Propeller Activator to spin the propeller.

## 9. Motion Sensor

Move the helicopter through the air to activate the Motion Sensor and hear fun flying sounds!

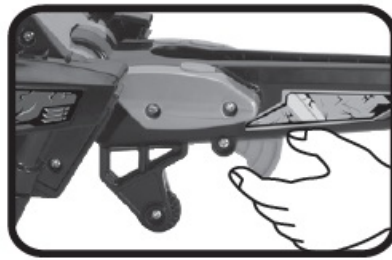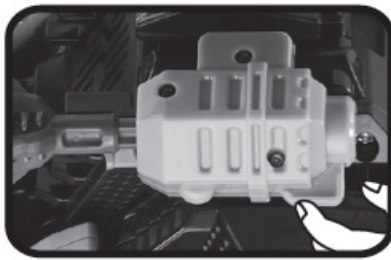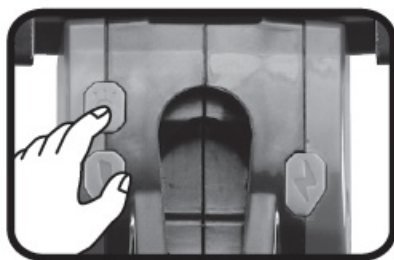

## 10. TURNING THE UNIT OFF/ AUTOMATIC SHUT-OFF

 
 
 
 
To preserve battery life, the Velociraptor Helicopter will automatically shut off after several seconds without input. The unit can be turned on again by pressing the Talk Button or Sound Effects Button.

**NOTE** If the unit powers down or if the light fades out during play, please install a new set of batteries.







## TRANSFORMATION

1. Begin in Dino mode.
2. Flip the head up.
3. Flip the launcher to the side.
4. Tuck in the arms.

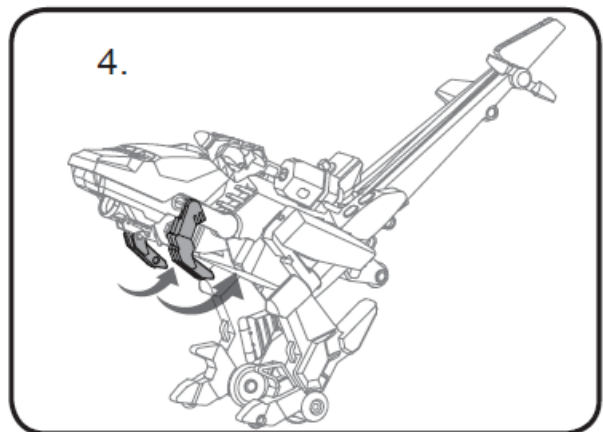
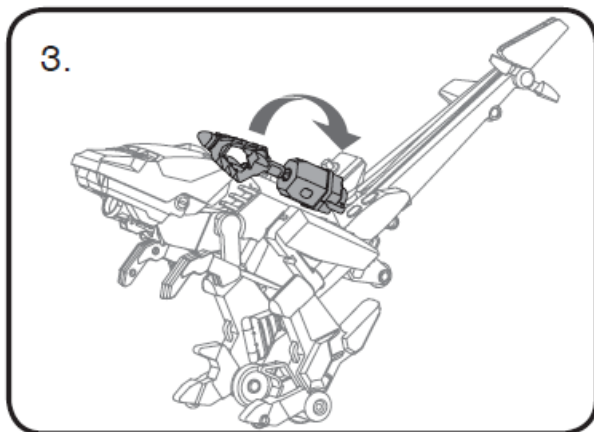
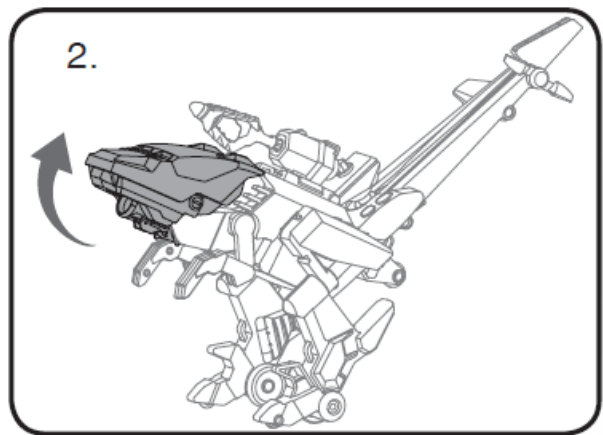
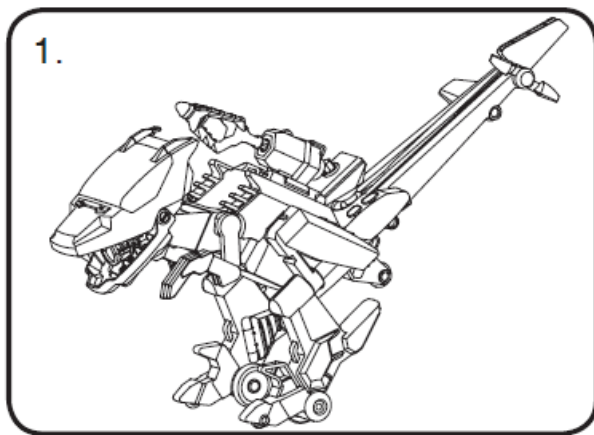


    5. Swing the tail down.
6. Flip the rotor blades to the front of the helicopter.
7. Fan out the rotor blades.
8. Flip the rear wing at the end of the tail forward.



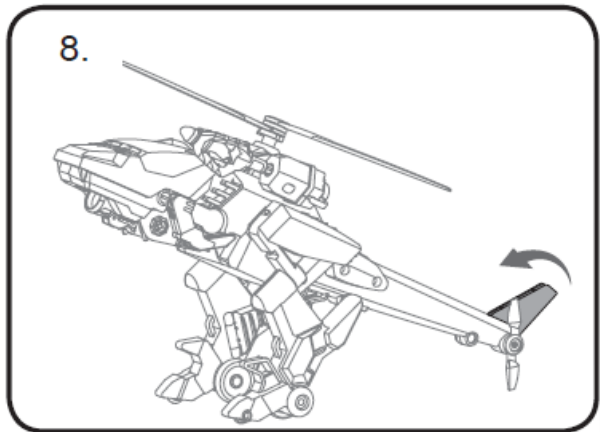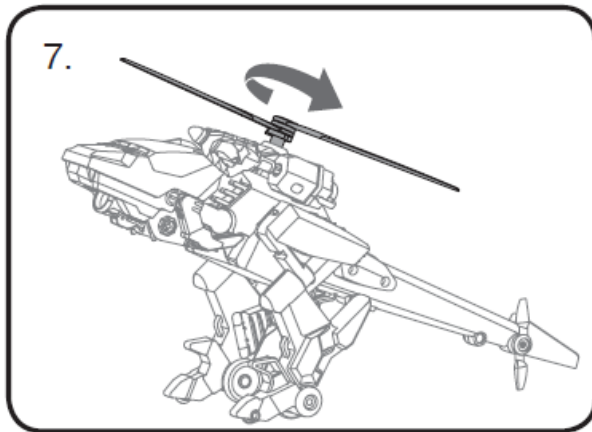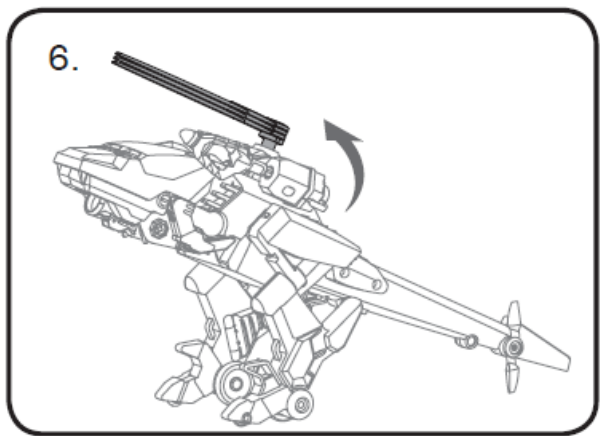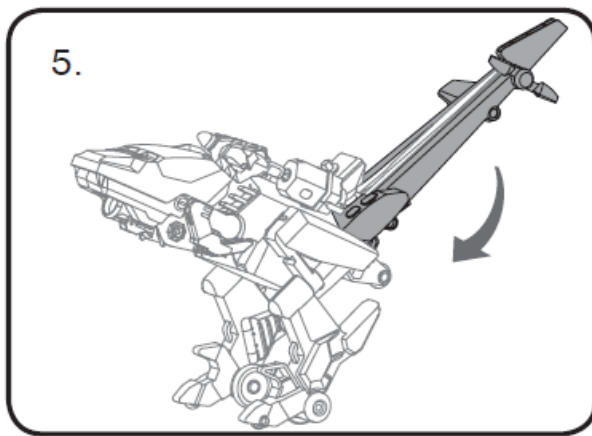

    9. Swivel the legs up.  
 10. Rotate the feet up.  
 11. Snap the wings down.  
 12. You are now in Vehicle mode.

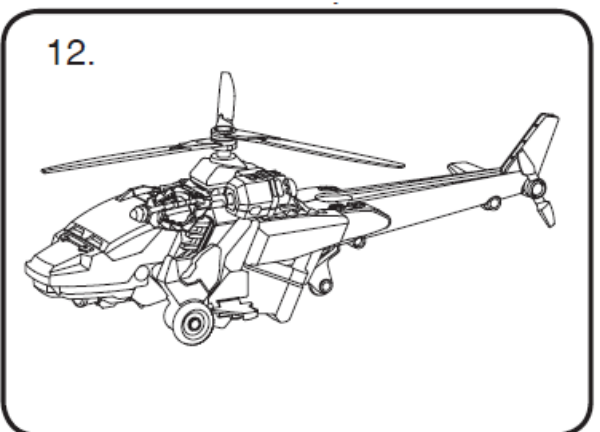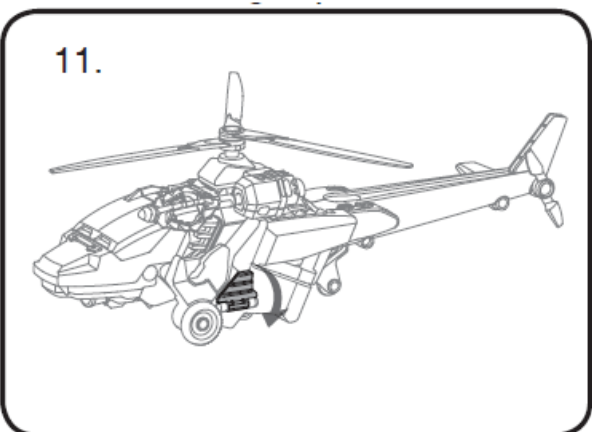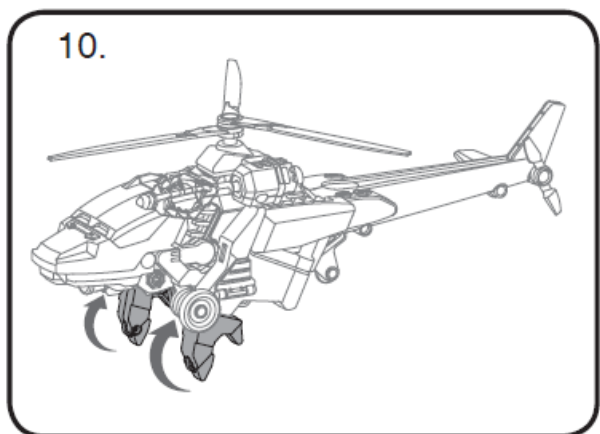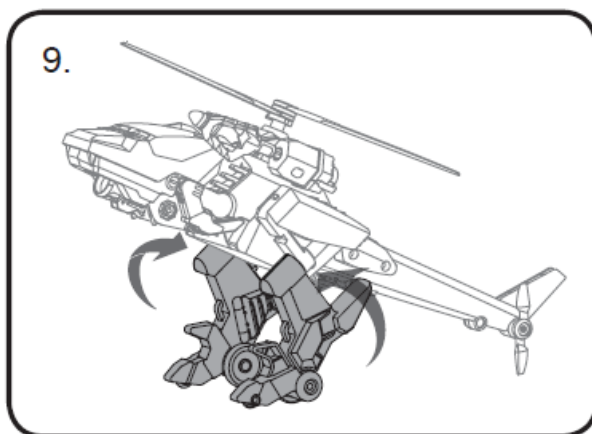

**Note** To switch the vehicle back into a dino, follow the above steps in reverse order.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

**If for some reason the program/activity stops working or malfunctions, please follow these steps:**

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace it with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada.

**IMPORTANT NOTE:** Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S., or 1-[877-352-8697](tel:877-352-8697) in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

- **Trade Name:** VTech®
- **Model:** 1414



- **Product Name:** Switch & Go™ Velociraptor Helicopter
- **Responsible Party:** VTech Electronics North America, LLC
- **Address:** 1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
- **Website:** [vtechkids.com](http://vtechkids.com)

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:**

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Caution:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**PRODUCT WARRANTY**

- This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.
- Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to [vtechkids@vtechkids.com](mailto:vtechkids@vtechkids.com) or calling 1-[800-521-2010](tel:800-521-2010)>[800-521-2010](tel:800-521-2010). If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:
- If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase data and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.
- THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.
- To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential

damages resulting from any breach of Warranty.

- This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech .

To register your product online at [www.vtechkids.com/warranty](http://www.vtechkids.com/warranty)

## **FREQUENTLY ASKED QUESTIONS**

What is the brand and model of the toy?

The toy is the VTech 80-141470 Switch & Go Velociraptor Helicopter.

What are the dimensions of the VTech 80-141470 Switch & Go Velociraptor Helicopter?

The dimensions of the VTech 80-141470 Switch & Go Velociraptor Helicopter are 4.02 x 14.57 x 9.06 inches.

How much does the VTech 80-141470 Switch & Go Velociraptor Helicopter weigh?

The VTech 80-141470 Switch & Go Velociraptor Helicopter weighs 1.11 pounds.

What is the recommended age range for the VTech 80-141470 Switch & Go Velociraptor Helicopter?

The VTech 80-141470 Switch & Go Velociraptor Helicopter is recommended for children aged 4 to 8 years.

What type of batteries does the VTech 80-141470 Switch & Go Velociraptor Helicopter require?

The VTech 80-141470 Switch & Go Velociraptor Helicopter requires 2 AA batteries.

What is the price of the VTech 80-141470 Switch & Go Velociraptor Helicopter?

The VTech 80-141470 Switch & Go Velociraptor Helicopter is priced at \$29.99.

What is the warranty period for the VTech 80-141470 Switch & Go Velociraptor Helicopter?

The warranty period for the VTech 80-141470 Switch & Go Velociraptor Helicopter is 3 months.

Who is the manufacturer of the VTech 80-141470 Switch & Go Velociraptor Helicopter?

The manufacturer of the VTech 80-141470 Switch & Go Velociraptor Helicopter is VTech.

How do you operate the VTech 80-141470 Switch & Go Velociraptor Helicopter?

The VTech 80-141470 Switch & Go Velociraptor Helicopter is operated using the control buttons and features transformation mechanisms. Ensure the batteries are installed correctly to activate the sounds and functions.

Why isn't the VTech 80-141470 Switch & Go Velociraptor Helicopter turning on?

Ensure the batteries are properly installed and have sufficient charge. Check the battery compartment for any corrosion or loose connections. If the issue persists, try replacing the batteries with new ones.

What should I do if the VTech 80-141470 Switch & Go Velociraptor Helicopter's sound is not working?

Verify that the volume is turned up and the sound switch is on. Check the batteries to ensure they are fully charged. If there is still no sound, the speaker may be defective, and you should contact VTech customer service.

Why does the VTech 80-141470 Switch & Go Velociraptor Helicopter not transform properly?

Ensure that all parts are properly aligned and there are no obstructions in the transformation mechanism. If parts are stuck, gently move them to the correct position.

How can I fix the VTech 80-141470 Switch & Go Velociraptor Helicopter if it is not responding to button presses?

Check that the batteries are fully charged and correctly installed. Inspect the buttons for any dirt or debris that might be obstructing them.

Why does the VTech 80-141470 Switch & Go Velociraptor Helicopter keep shutting off unexpectedly?

Make sure the batteries are fully charged and the battery compartment is securely closed. Overheating can cause shutdowns, so ensure the toy is not in a hot environment.

What should I do if the lights on the VTech 80-141470 Switch & Go Velociraptor Helicopter are not working?

Ensure the toy is turned on and the batteries are properly installed. Check the light settings and make sure they are enabled. If the lights still do not work, there may be an issue with the internal wiring, and you should contact VTech for support.

## VIDEO – PRODUCT OVERVIEW



[Download the PDF link: VTech 80-141470 Switch & Go Velociraptor Helicopter User's Guide](#)  
[Velociraptor-Helicopter-Users-Guide.mp4](#)

REFERENCE: [VTech 80-141470 Switch & Go Velociraptor Helicopter User's Guide -Device.Report](#)

## References

- [User Manual](#)

## **Manuals+. Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.