

VTECH
80-166010
LIL' CRITTERS
MOOSICAL
BEADS



VTech 80-166010 Lil' Critters Moosical Beads User's Manual

[Home](#) » [vtech](#) » VTech 80-166010 Lil' Critters Moosical Beads User's Manual 

Contents

- [1 VTech 80-166010 Lil' Critters Moosical Beads](#)
- [2 INTRODUCTION](#)
- [3 GETTING STARTED](#)
- [4 PRODUCT FEATURES](#)
- [5 ACTIVITIES](#)
- [6 SUNG SONG LYRICS](#)
- [7 MELODY LIST](#)
- [8 CARE & MAINTENANCE](#)
- [9 TROUBLESHOOTING](#)
- [10 PRODUCT WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)
- [14 Related Posts](#)



VTech 80-166010 Lil' Critters Moosical Beads



Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the Infant Learning® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s Infant Learning® toys develop babies' mental and physical abilities by inspiring, engaging, and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at VTech®

To learn more about VTech® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the VTech® Lil' Critters Moosical Beads™ learning toy! Cuddle and learn with the Lil'

Critters Moosical Beads™. Press the buttons or spin the square bead to hear songs and phrases that teach shapes, colors, numbers and letters.

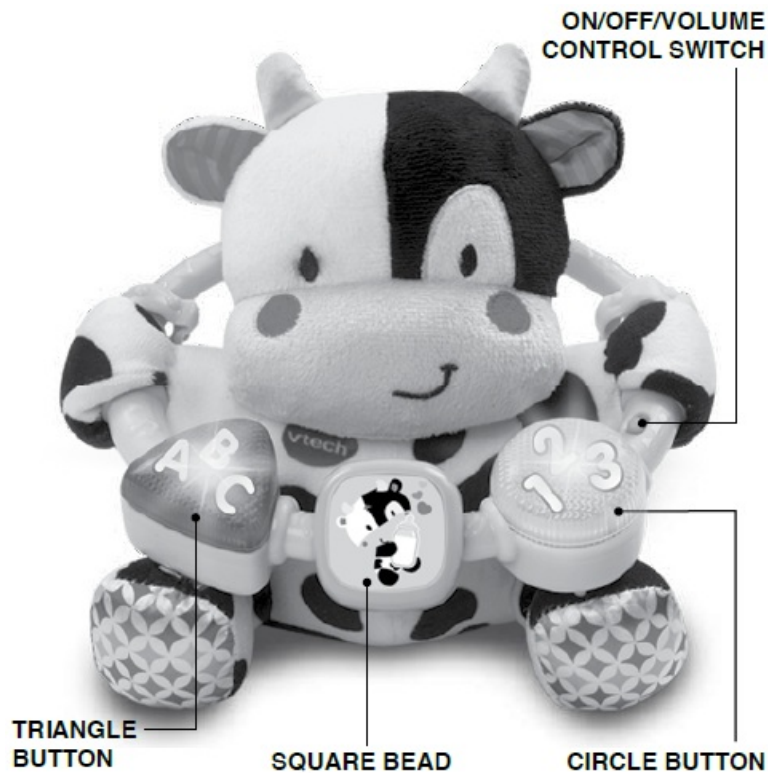

INCLUDED IN THIS PACKAGE

 
- One VTech® Lil' Critters Moosical Beads™ learning toy
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks, and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this instruction manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

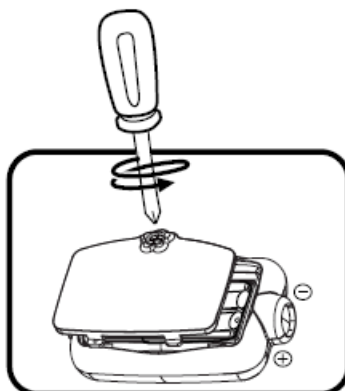

1. Make sure the unit is turned OFF.




2. Locate the battery cover on the electronic box on the back of the plastic ring. Use a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in a fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit ON, slide the ON/OFF/VOLUME CONTROL SWITCH to the LOW VOLUME () or HIGH VOLUME () position. To turn the unit OFF, slide the ON/OFF/VOLUME CONTROL SWITCH to the OFF () position.



 
2. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Lil' Critters Moosical Beads™ will automatically power down after approximately 40 seconds without input. The unit can be turned on again by pressing any button or spinning the square bead.

ACTIVITIES

1. Slide the on/off/volume control switch to turn the unit on. You will hear a cow sound, a phrase, and a song. The lights will flash with the sounds.

2. Press the circle button to learn the shape and color, and hear playful songs and melodies. The lights will flash with the sounds.
3. Press the triangle button to learn the shape and color, and hear playful songs and melodies. The lights will flash with the sounds.
4. Spin the square bead to learn the shape and color, and hear playful songs and melodies. Continue spinning the bead to hear fun sounds play over the music. The lights will flash with the sounds.
5. If there is no input after approximately 10 seconds, you will hear a phrase. After another 10 seconds without input, you will hear a short tune. If there continues to be no input for another 10 seconds, the unit will play a phrase and the unit will automatically power down. The unit can be turned on again by pressing any button or spinning the square bead.

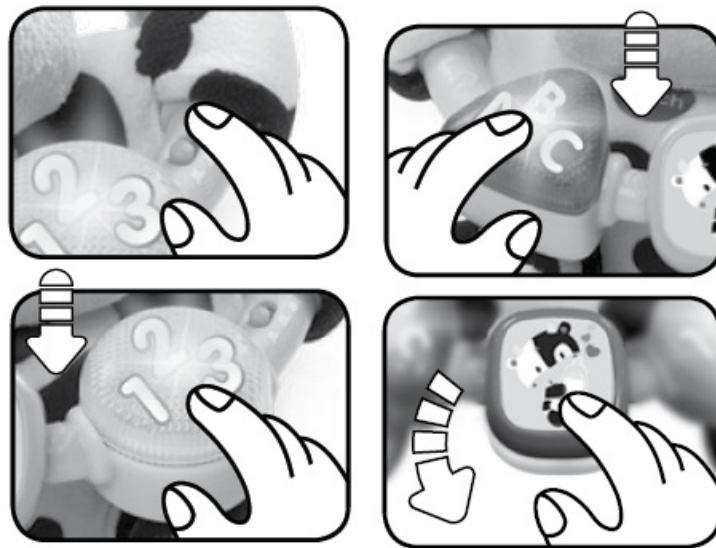

SUNG SONG LYRICS

SONG 1

- I'm a soft and spotted cow.
- Hug me, love me, all day long.

SONG 2

- A-B-C-D-E-F-G,
- H-I-J-K-L-M-N-O-P,
- Q-R-S,
- T-U-V,
- W-X, Y, and Z.
- Now I know my A-B-C's,
- Next time won't you sing with me?

SONG 3

- One, two, three,

- One, two, three.
- I like to count,
- Count on me!

MELODY LIST

1. Hey Diddle Diddle
2. Old MacDonald Had a Farm
3. Farmer in the Dell
4. Big Rock Candy Mountain
5. Looby Loo
6. Are You Sleeping?
7. ABC Tumble Down D,
8. Diddle, Diddle, Dumpling
9. Little Miss Muffet
10. London Bridge
11. Humpty Dumpty
12. Hot Cross Buns

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace it with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada.

IMPORTANT NOTE: Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S., or

1-[877-352-8697](tel:877-352-8697) in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PRODUCT WARRANTY

- This Warranty is applicable only to the original purchaser, is non-transferable, and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.
- Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-[800-521-2010](tel:800-521-2010). If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:
- If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the

purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

- THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.
- To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.
- This Warranty is not intended for persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

To register your product online at www.vtechkids.com/warranty

FREQUENTLY ASKED QUESTIONS

What is the brand of the VTech 80-166010 Lil' Critters Moosical Beads?

The brand of the VTech 80-166010 Lil' Critters Moosical Beads is VTech.

What is the product name of VTech 80-166010?

The product name is Baby Lil' Critters Moosical Beads.

What are the product dimensions of the VTech 80-166010 Lil' Critters Moosical Beads?

The product dimensions of the VTech 80-166010 Lil' Critters Moosical Beads are 4.72 x 6.69 x 6.5 inches.

What is the weight of the VTech 80-166010 Lil' Critters Moosical Beads?

The weight of the VTech 80-166010 Lil' Critters Moosical Beads is 8.6 ounces.

What is the item model number of the VTech 80-166010 Lil' Critters Moosical Beads?

The item model number of the VTech 80-166010 Lil' Critters Moosical Beads is 80-166010.

What is the manufacturer recommended age for the VTech 80-166010 Lil' Critters Moosical Beads?

The manufacturer recommended age for the VTech 80-166010 Lil' Critters Moosical Beads is 0 - 2 years.

How many batteries does the VTech 80-166010 Lil' Critters Moosical Beads require?

The VTech 80-166010 Lil' Critters Moosical Beads requires 2 AAA batteries.

Who is the manufacturer of the VTech 80-166010 Lil' Critters Moosical Beads?

VTech is the manufacturer of the VTech 80-166010 Lil' Critters Moosical Beads.

What is the price of the VTech 80-166010 Lil' Critters Moosical Beads?

The price of the VTech 80-166010 Lil' Critters Moosical Beads is \$14.99.

What is the warranty period for the VTech 80-166010 Lil' Critters Moosical Beads?

The VTech 80-166010 Lil' Critters Moosical Beads comes with a 3-month warranty.

Why is my VTech 80-166010 Lil' Critters Moosical Beads not turning on?

Ensure that the batteries are inserted correctly according to the polarity markings inside the battery compartment of the VTech 80-166010 Lil' Critters Moosical Beads. Replace the batteries if necessary.

How do I fix it if my VTech 80-166010 Lil' Critters Moosical Beads' lights are not working properly?

Check the battery compartment for any corrosion on the terminals. Clean the terminals with a dry cloth and replace the batteries with fresh ones.

My VTech 80-166010 Lil' Critters Moosical Beads is not playing music or sounds. What should I do?

Make sure that the volume is turned up to an audible level. If the issue persists, check if the sound settings are not muted or turned off accidentally.

The buttons on my VTech 80-166010 Lil' Critters Moosical Beads are not responding when pressed. What should I check?

Ensure that the toy is turned on and that the buttons are not stuck. Clean around the buttons gently with a dry cloth to remove any dirt or debris.

My VTech 80-166010 Lil' Critters Moosical Beads' volume is too low even when turned up. How can I increase it?

Check if the sound settings on the toy are adjusted correctly. If the issue persists, consider using the toy in a quieter environment or replacing the batteries with fresh ones.

DOWNLOAD THE PDF LINK: [VTech 80-166010 Lil' Critters Moosical Beads User's Manual Moosical-Beads-Users-Manual.mp4](#)

REFERENCE: [VTech 80-166010 Lil' Critters Moosical Beads User's Manual -Device.Report](#)

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.