

VTECH 80-166600 TURN AND LEARN DRIVER



## VTech 80-166600 Turn and Learn Driver Instruction Manual

[Home](#) » [vtech](#) » VTech 80-166600 Turn and Learn Driver Instruction Manual 

### Contents

- 1 VTech 80-166600 Turn and Learn Driver
- 2 INTRODUCTION
- 3 GETTING STARTED
- 4 BATTERY NOTICE
- 5 PRODUCT FEATURES
- 6 ACTIVITIES
- 7 MELODY LIST
- 8 SUNG SONG LYRICS
- 9 CARE & MAINTENANCE
- 10 TROUBLESHOOTING
- 11 PRODUCT WARRANTY
- 12 FREQUENTLY ASKED QUESTIONS
- 13 VIDEO – PRODUCT OVERVIEW
- 14 References
- 15 Related Posts



**VTech 80-166600 Turn and Learn Driver**



**Dear Parent,**

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the Infant Learning® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s Infant Learning® toys develop babies' mental and physical abilities by inspiring, engaging, and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

 
Sincerely,

Your friends at VTech®

To learn more about VTech® toys, visit [vtechkids.com](http://vtechkids.com)

## **INTRODUCTION**

Thank you for purchasing the VTech® Turn & Learn Driver™! This role-play toy introduces vehicles, animals, colors and numbers with fun phrases and realistic car sounds. Encourage baby's imagination while turning the wheel, moving the little car and pressing the horn button. A mirror, gear shifter and light-up traffic lights add to the fun.

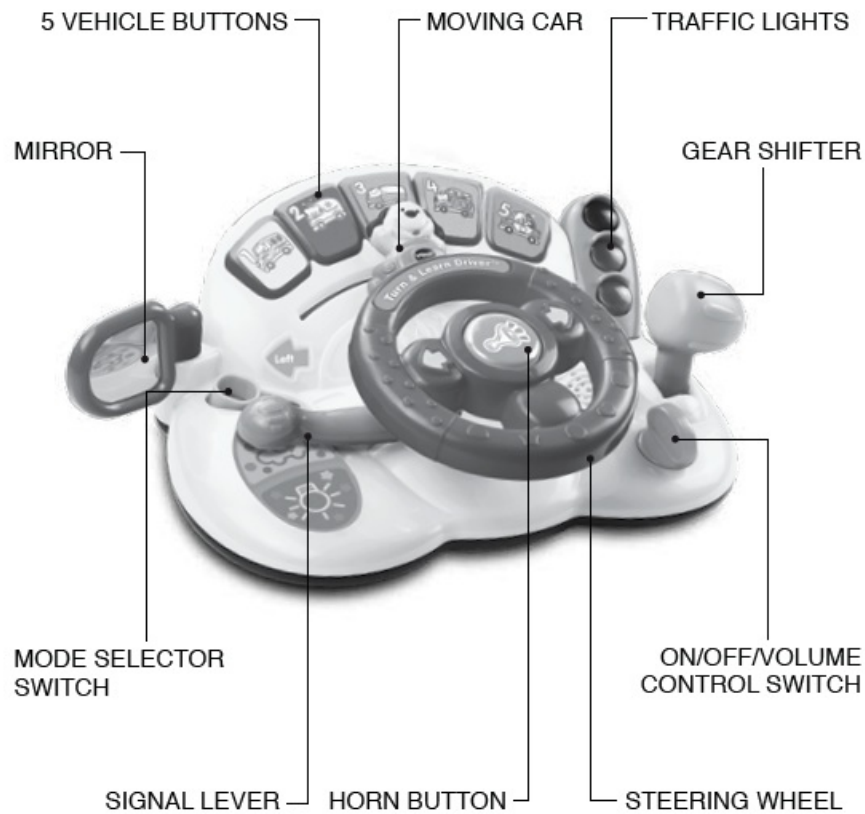


### INCLUDED IN THIS PACKAGE

- One VTech® Turn & Learn Driver™ learning toy
- One instruction manual

**WARNING:** All packing materials, such as tape, plastic sheets, wire ties, and tags are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep the user's manual as it contains important information.

 
### Unlock the packing lockers:

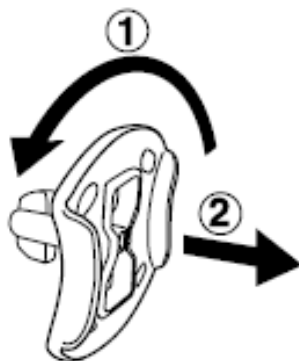

1. Rotate the packing locker counter-clockwise through 90 degrees
2. Pull out the packing locker

### GETTING STARTED
 
## BATTERY INSTALLATION

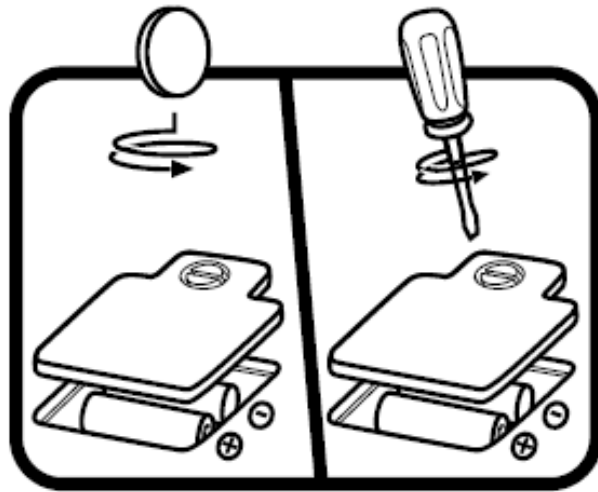

- Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
- Install 2 new AA batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- Replace the battery cover and tighten the screw to secure it.

## BATTERY NOTICE




- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in a fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

## PRODUCT FEATURES



 
## 1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit ON, turn the ON/ OFF/VOLUME CONTROL SWITCH to the LOW VOLUME (  ) or HIGH VOLUME (  ) position. To turn the unit OFF, turn the ON/OFF/VOLUME CONTROL SWITCH to the OFF (  ) position.

## 2. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Turn & Learn Driver™ will automatically power down after approximately 50 seconds without input. The unit can be turned on again by pressing any button.

## ACTIVITIES

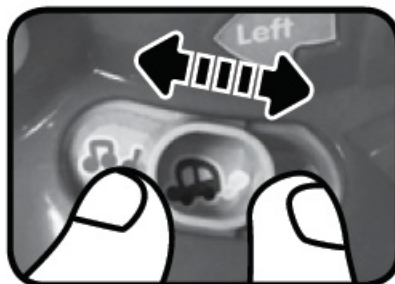

1. Turn the on/off/volume control switch to turn the unit on. You will hear playful sounds, a song, and a fun phrase. The lights will flash with the sounds.
2. Slide the mode selector switch to choose Animal Mode, Driving Mode, or Music Mode. You will hear fun sounds and phrases or a song. The lights will flash with the sounds.
3. Press the vehicle buttons to learn colors, animals, and their sounds in Animal Mode, learn vehicles and their sounds and daily life in Driving Mode and learn numbers and enjoy playful songs and melodies in Music Mode. When a melody is playing, press the vehicle buttons to hear the song played note by note. The lights will flash with the sounds.
4. Turn the steering wheel to hear fun sounds, phrases, or melodies in the different modes. When a melody is playing, turn the steering wheel or press the vehicle and horn buttons to play fun sounds over the melody. The lights will flash with the sounds.
5. Press the horn button to hear horn sounds, and press and hold the button to hear a long horn sound and fun

phrases. The lights will flash with the sounds.

6. Pull or push the gear shifter to hear fun phrases, sounds, and short tunes in different modes. The lights will flash with the sounds.
7. Move the signal lever to hear fun sounds and short tunes. The lights will flash with the sounds.

## **MELODY LIST**

1. Here We Go Looby Loo
2. I've Been Working On the Railroad
3. Pop! Goes the Weasel
4. Sailing, Sailing
5. Oh, Susanna!
6. Down by the Riverside
7. Row, Row, Row Your Boat
8. Yankee Doodle
9. Teddy Bears' Picnic
10. Polly Wolly Doodle

## **SUNG SONG LYRICS**

### **1. SONG 1**

- Buckle up, puppy's ready to ride,
- Start the car, and off we go!

### **2. SONG 2**

- Beep, beep, beep,
- We're on our way,
- Beep, beep, beep,
- We're going on a musical adventure!

## **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## **TROUBLESHOOTING**

**If for some reason the program/activity stops working or malfunctions, please follow these steps:**

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.

5. If the product still does not work, replace it with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada.

**IMPORTANT NOTE:** Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S., or 1-[877-352-8697](tel:877-352-8697) in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:**

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Caution:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**PRODUCT WARRANTY**

- This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use,



immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

- Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to [vtechkids@vtechkids.com](mailto:vtechkids@vtechkids.com) or calling 1-[800-521-2010](tel:800-521-2010). If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:
- If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase data and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.
- THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.
- To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.
- This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech .

To register your product online at [www.vtechkids.com/warranty](http://www.vtechkids.com/warranty)

## **FREQUENTLY ASKED QUESTIONS**

What are the product dimensions of the VTech 80-166600 Turn and Learn Driver?

The VTech 80-166600 Turn and Learn Driver measures 8.86 x 10.79 x 4.33 inches.

What is the weight of the VTech 80-166600 Turn and Learn Driver?

The VTech 80-166600 Turn and Learn Driver weighs 1.4 pounds.

What age range is recommended for the VTech 80-166600 Turn and Learn Driver?

The VTech 80-166600 Turn and Learn Driver is recommended for children aged 6 months to 3 years.

What type of batteries does the VTech 80-166600 Turn and Learn Driver require?

The VTech 80-166600 Turn and Learn Driver requires 2 AA batteries.



What should I do if the VTech 80-166600 Turn and Learn Driver does not turn on?

Ensure the 2 AA batteries are properly installed and not depleted. If the VTech 80-166600 Turn and Learn Driver still does not turn on, try replacing the batteries with new ones.

How can I fix the issue if the lights on the VTech 80-166600 Turn and Learn Driver are not working?

Verify that the batteries are correctly installed and have sufficient charge. If the lights still do not work, try replacing the batteries with new ones.

What steps should I take if the sound on the VTech 80-166600 Turn and Learn Driver is too low or distorted?

Check the battery level and replace the batteries if necessary. Low battery power can cause sound issues in the VTech 80-166600 Turn and Learn Driver.

How can I reset the VTech 80-166600 Turn and Learn Driver if it freezes or becomes unresponsive?

Remove the 2 AA batteries for a few minutes, then reinsert them. This can reset the VTech 80-166600 Turn and Learn Driver and resolve any temporary issues.

What should I do if the buttons on the VTech 80-166600 Turn and Learn Driver are not responding?

Ensure the buttons are clean and free from debris. Gently clean the buttons with a dry cloth and check that the batteries are not depleted.

Why is my VTech 80-166600 Turn and Learn Driver intermittently turning off?

Check the battery compartment to ensure the batteries are securely in place. Loose batteries can cause the VTech 80-166600 Turn and Learn Driver to turn off unexpectedly. Replace the batteries if the issue continues.

What can I do if the VTech 80-166600 Turn and Learn Driver is not playing sounds?

Make sure the volume is turned up. If the volume is set correctly and the sounds are still not playing, check and replace the batteries if needed.

How do I address the issue if the songs on the VTech 80-166600 Turn and Learn Driver are not playing?

Ensure the volume is turned up. If the volume is set correctly and the songs are still not playing, check and replace the batteries if necessary.

 
What should I do if the steering wheel on the VTech 80-166600 Turn and Learn Driver is not functioning properly?

Check if there are any obstructions or debris around the steering wheel. Gently clean the area and ensure that it can move freely.

How can I resolve issues with the VTech 80-166600 Turn and Learn Driver not switching between modes?

Turn off the VTech 80-166600 Turn and Learn Driver, remove the batteries, and wait a few minutes before reinserting them. This can help reset the mode settings and resolve the issue.

**VIDEO – PRODUCT OVERVIEW**



[Download the PDF link: VTech 80-166600 Turn and Learn Driver Instruction Manual  
Learn-Driver-Instruction-Manual.mp4](#)

**References**

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.