

VTECH
80-184900
WIGGLE
AND
CRAWL
BALL



VTech 80-184900 Wiggle and Crawl Ball User's Manual

[Home](#) » [vtech](#) » VTech 80-184900 Wiggle and Crawl Ball User's Manual 

Contents

- [1 VTech 80-184900 Wiggle and Crawl Ball](#)
- [2 INTRODUCTION](#)
- [3 BATTERY INSTALLATION](#)
- [4 PRODUCT FEATURES](#)
- [5 ACTIVITIES](#)
- [6 MELODY LIST](#)
- [7 SUNG SONG LYRICS](#)
- [8 CARE & MAINTENANCE](#)
- [9 TROUBLESHOOTING](#)
- [10 PRODUCT WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)
- [14 Related Posts](#)



VTech 80-184900 Wiggle and Crawl Ball



Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the Infant Learning® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors, and music. More importantly, VTech®'s Infant Learning® toys develop babies' mental and physical abilities by inspiring, engaging, and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

 
Sincerely,

Your friends at VTech®

To learn more about VTech® toys, visit vtechkids.com

INTRODUCTION


Thank you for purchasing the VTech® Wiggle & Crawl Ball™! Move and crawl with your animal friends! With lots of buttons to press, twist and spin, the Wiggle & Crawl Ball™ introduces colors, numbers, animals, and animal sounds. Equipped with a motor, the Wiggle & Crawl Ball™ will wobble and wobble and roll around when the music plays!

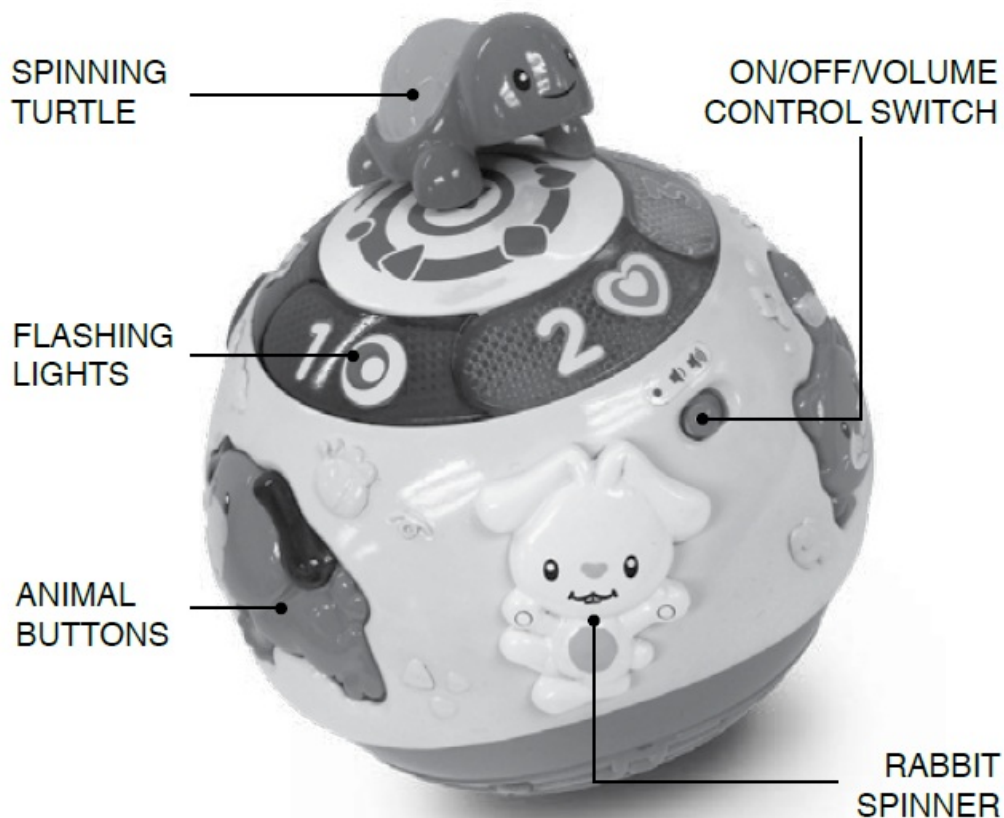

WARNING: All packing materials, such as tape, plastic sheets, wire ties, and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this instruction manual as it contains important information.

 BATTERY INSTALLATION

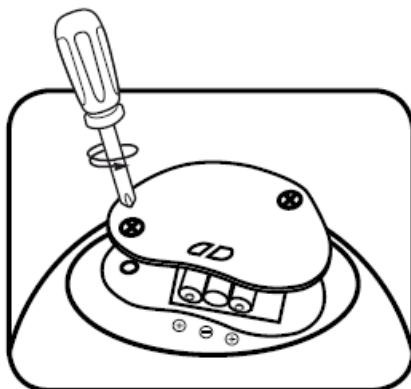




1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the ball. Use a screwdriver to loosen the screw.
3. Install 3 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

 
BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in a fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit ON, slide the ON/ OFF /VOLUME CONTROL SWITCH to the LOW VOLUME () or the HIGH VOLUME () position. To turn the unit OFF, and slide the ON/OFF/ VOLUME CONTROL SWITCH to the OFF () position.

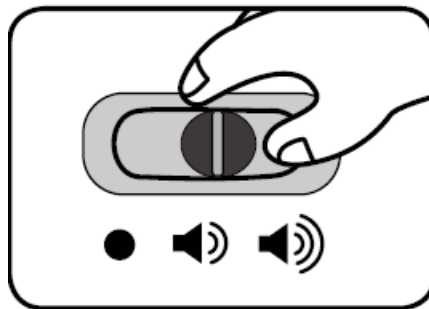


2. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Wiggle & Crawl Ball™ will automatically power down after approximately one minute without input. The unit can be turned on again by pressing any button.

Note: If the unit repeatedly powers down or the red light flashes three times then power down, we suggest changing the batteries.

 ACTIVITIES

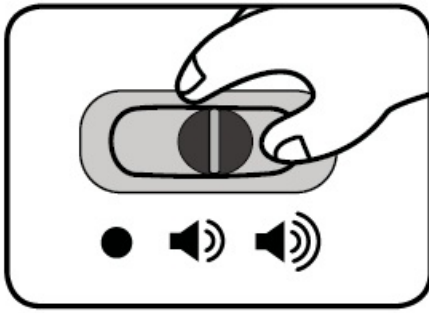

1. Slide the on/off/volume control switch to turn the unit on. You will hear a song, a phrase, and fun sounds. The lights will flash and the ball will wobble with the sounds.
2. Press the animal buttons to learn animal names, animal sounds, colors, and numbers, and hear playful music. The lights will flash and the ball will wobble with the sounds.
3. Spin the bunny to hear the bunny introduced and a variety of fun sounds or short tunes. The lights will flash with the sound and the ball will wobble with the music.
4. If there is no input after approximately 8 seconds, you will hear a phrase encouraging you to play with the ball. After another 10 seconds without input, you will be asked to find a specific animal and press the animal buttons to answer. If there continues to be no input, you will hear a short tune before the unit automatically powers down.

MELODY LIST

1. BINGO
2. Where Has My Little Dog Gone?
3. Farmer in the Dell
4. Three Little Kittens
5. Pussy Cat, Pussy Cat
6. Three Blind Mice
7. Teddy Bears' Picnic
8. Bear Went Over the Mountain
9. Ta-Ra-Ra Boom-De-Ay
10. Pop! Goes the Weasel
11. Ring Around the Rosy
12. Skip to My Lou

SUNG SONG LYRICS

SONG 1

- We like to spin fast or roll nice and slow.
- Keep your eyes on us.
- You never know where we'll go!

SONG 2

- I'm a friendly dog,
- I like it when you pat my head.

SONG 3

- I am playful,
- I like to run around and chase the ball.

SONG 4

- I'm a happy bear.
- I like to roll around and play all day.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace it with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada.

IMPORTANT NOTE: Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S., or 1-[877-352-8697](tel:877-352-8697) in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PRODUCT WARRANTY

- This Warranty is applicable only to the original purchaser, is non-transferable, and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.
- Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-[800-521-2010](tel:800-521-2010). If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:
- If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.
- THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED

WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

- To the extent permitted by law, VTech will not be responsible for direct, special, incidental, or consequential damages resulting from any breach of Warranty.
- This Warranty is not intended for persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

To register your product online at www.vtechkids.com/warranty

FREQUENTLY ASKED QUESTIONS

What sport or category does the VTech 80-184900 Wiggle and Crawl Ball belong to?

The VTech 80-184900 Wiggle and Crawl Ball belongs to the Exercise & Fitness category.

3. What is the item diameter of the VTech 80-184900 Wiggle and Crawl Ball?

The item diameter of the VTech 80-184900 Wiggle and Crawl Ball is 6.46 inches.

What is the package weight of the VTech 80-184900 Wiggle and Crawl Ball?

The package weight of the VTech 80-184900 Wiggle and Crawl Ball is 0.85 kilograms.

What are the item dimensions (LxWxH) of the VTech 80-184900 Wiggle and Crawl Ball?

The item dimensions (LxWxH) of the VTech 80-184900 Wiggle and Crawl Ball are 6.46 x 6.46 x 6.97 inches.

What is the outer material of the VTech 80-184900 Wiggle and Crawl Ball made of?

The outer material of the VTech 80-184900 Wiggle and Crawl Ball is polyester.

What is the warranty description for the VTech 80-184900 Wiggle and Crawl Ball?

The warranty description for the VTech 80-184900 Wiggle and Crawl Ball is a 90-day warranty against manufacturer defects.

What is the model name of the VTech 80-184900 Wiggle and Crawl Ball?

The model name of the VTech 80-184900 Wiggle and Crawl Ball is Wiggle and Crawl.

Who is the manufacturer of the VTech 80-184900 Wiggle and Crawl Ball?

VTech is the manufacturer of the VTech 80-184900 Wiggle and Crawl Ball.

What is the price of the VTech 80-184900 Wiggle and Crawl Ball?

The price of the VTech 80-184900 Wiggle and Crawl Ball is \$14.97.

Why is my VTech 80-184900 Wiggle and Crawl Ball not turning on?

Ensure that the batteries are inserted correctly according to the polarity markings inside the battery compartment. Replace the batteries if necessary.

How do I fix it if my VTech 80-184900 Wiggle and Crawl Ball's lights are not working properly?

Check the battery compartment for any corrosion on the terminals. Clean the terminals with a dry cloth and replace the batteries with fresh ones.

My VTech 80-184900 Wiggle and Crawl Ball is not playing music or sounds. What should I do?

Make sure that the volume is turned up to an audible level. If the issue persists, check if the sound settings are not muted or turned off accidentally.

The wheels on my VTech 80-184900 Wiggle and Crawl Ball are stuck. How can I free them?

Inspect the wheels for any debris or hair that may be causing them to jam. Clean around the wheels and axles with a soft brush or cloth.

How can I replace the batteries in my VTech 80-184900 Wiggle and Crawl Ball?

Locate the battery compartment on the toy and open it using a screwdriver if necessary. Replace the old batteries with new ones according to the polarity markings.

My VTech 80-184900 Wiggle and Crawl Ball's buttons are not responding when pressed. What should I check?

Ensure that the toy is turned on and that the buttons are not stuck. Clean around the buttons gently with a dry cloth to remove any dirt or debris.

VIDEO – PRODUCT OVERVIEW



[Download the PDF link: VTech 80-184900 Wiggle and Crawl Ball Users Manual and Crawl Ball Users Manual.mp4](#)

REFERENCE: [VTech 80-184900 Wiggle and Crawl Ball User's Manual -Device.Report](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.