

VTECH
80-192300
PRANCE
AND
ROCK
LEARNING
UNICORN



VTech 80-192300 Prance and Rock Learning Unicorn User's Guide

[Home](#) » [vtech](#) » VTech 80-192300 Prance and Rock Learning Unicorn User's Guide 

Contents

- [1 VTech 80-192300 Prance and Rock Learning Unicorn](#)
- [2 INTRODUCTION](#)
- [3 GETTING STARTED](#)
- [4 ASSEMBLY INSTRUCTIONS](#)
- [5 PRODUCT FEATURES](#)
- [6 ACTIVITIES](#)
- [7 SONG LYRICS](#)
- [8 MELODY LIST](#)
- [9 CARE & MAINTENANCE](#)
- [10 TROUBLESHOOTING](#)
- [11 PRODUCT WARRANTY](#)
- [12 FREQUENTLY ASKED QUESTIONS](#)
- [13 VIDEO – PRODUCT OVERVIEW](#)
- [14 References](#)
- [15 Related Posts](#)




VTech 80-192300 Prance and Rock Learning Unicorn



INTRODUCTION

 Thank you for purchasing the Prance & Rock Learning Unicorn™. The unicorn easily transforms from a rocker to a ride-on. The two chunky handles are easy for toddlers to grasp when riding on the unicorn. Press one of the two light-up buttons to learn about colors and to hear playful songs and imaginative phrases. Rocking or riding on the unicorn triggers the motion sensor which responds with fun melodies and sounds.

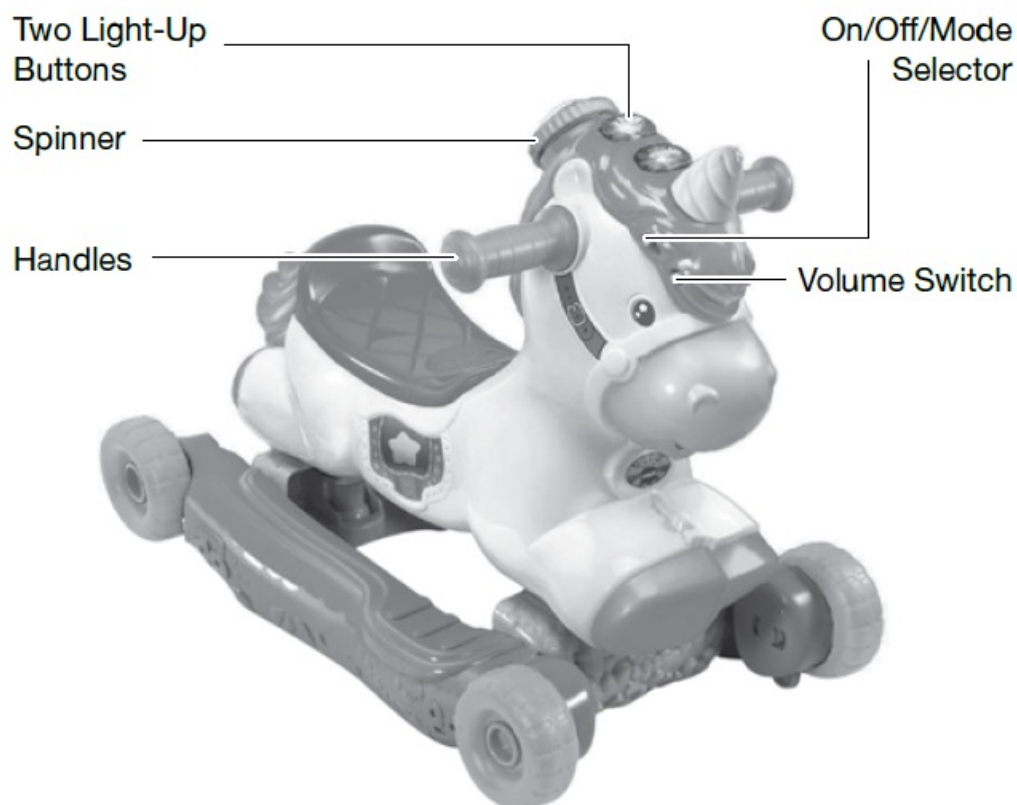

INCLUDED IN THIS PACKAGE



One Prance & Rock
Learning Unicorn™



Four wheels



Two handles



One back link bracket



Two rockers



One front link bracket



8 small screws



Two plastic screws

 
- One sticker sheet
- One parent's guide

WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

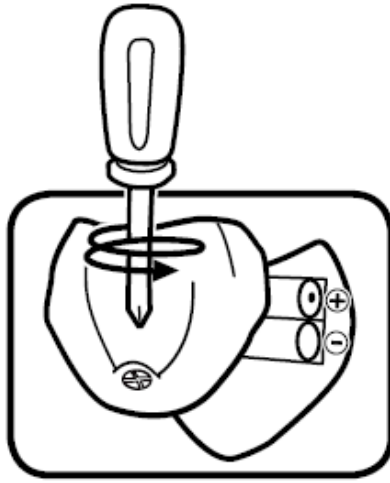

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure it.

BATTERY NOTICE

 
- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in a fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

WARNING!

- Safety comes first with the Prance & Rock Learning Unicorn™: Adult assembly required. The maximum weight limit is 42 pounds. Children over this weight should not use the ride-on. Not to be used by children over 36 months. Insufficient strength. This product includes electronics and is not waterproof.
- This package contains eight small screws. For your child's safety, do not let your child play with the toy until it is fully assembled. This toy should be used in a safe area, for example, indoors, on flat level surfaces, and away from any hazards such as cars, stairs, water, etc.
- Not for use on sidewalks, on pavement, or near traffic.


- Adult supervision is advised.
- Regularly check if the eight screws are securely tightened to link the brackets and rockers.

Please place the stickers on the unicorn securely as indicated below:


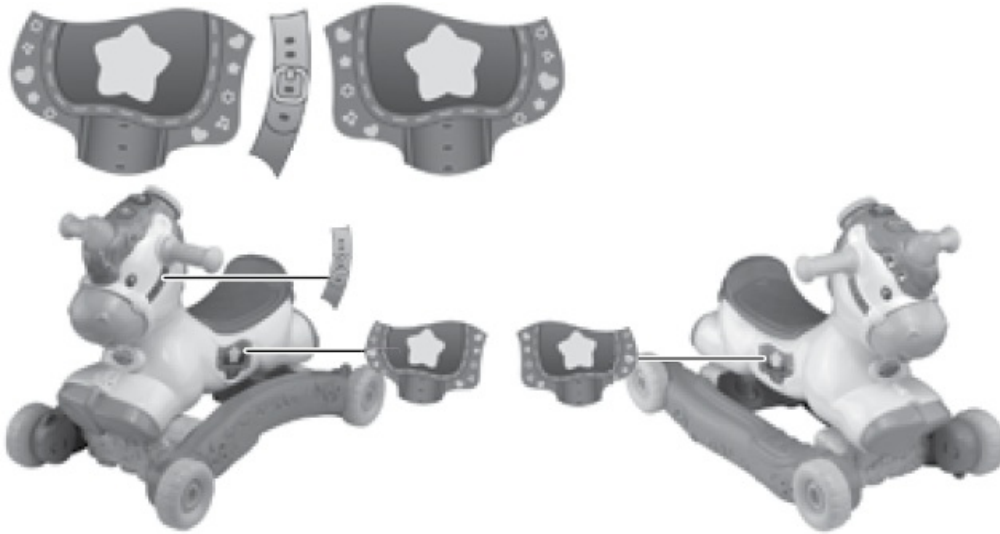


ASSEMBLY INSTRUCTIONS

 
1. Insert the four wheels into the two rockers as shown. You will hear the wheels click into place to indicate they are attached securely.

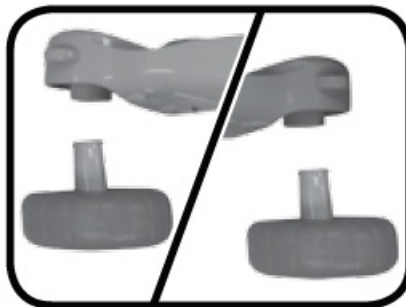

  2. Insert the front link bracket and the backlink bracket onto the inside of the rockers. Secure the brackets to the rockers with the small screws provided.

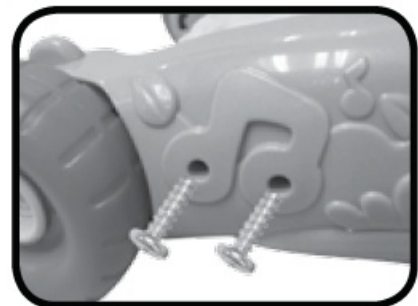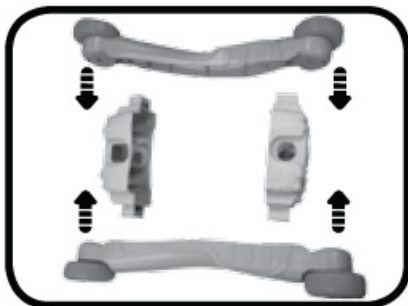

 3. Insert the Prance & Rock Learning Unicorn™ onto the support brackets as shown.
4. Insert the two plastic screws into the holes in the front link and backlink brackets. Turn the screws clockwise to secure. You will hear the locks click into place to indicate they are attached securely.
5. Insert the two handles into the sides of the unicorn's head. You will hear the handles click into place to indicate the handles are attached securely. Once the handles have been attached, they cannot be removed.

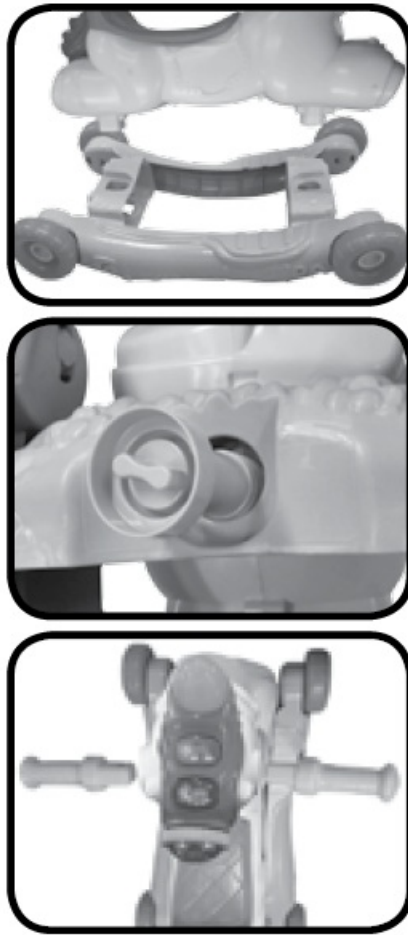




TRANSFORM FROM ROCKER TO RIDE-ON MODE

 
- To change the unicorn from rocker mode to ride-on mode, press and hold the lock next to the plastic screws and turn the screws counterclockwise. Remove the rocker panel and turn it over so the wheels are on the ground. Reinsert the two plastic screws into the holes in the front link and backlink brackets. Turn the screws clockwise to secure.





PRODUCT FEATURES


1. On/Off/Mode Selector

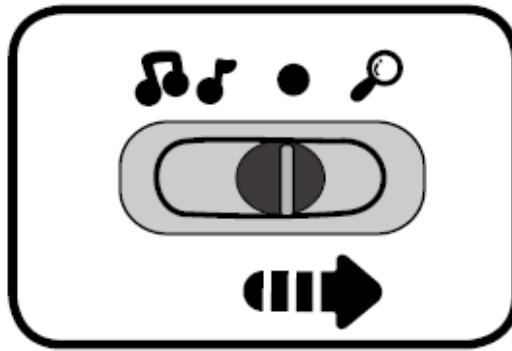To turn the unit On, slide the On/ Off/Mode selector to the Learning & Music mode  or the Adventure mode  position. You will hear a playful song and a friendly phrase. To turn the unit Off, slide the On/Off/ Mode selector to the Off  position.



2. Volume Switch

 To adjust the volume, slide the Volume switch to the Low Volume  or the High Volume  position.

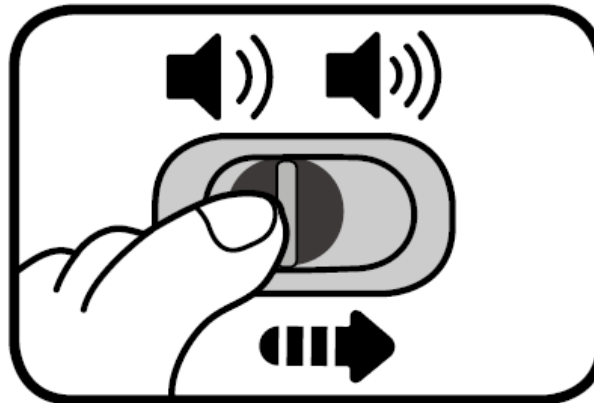

3. Automatic Shut Off

To preserve battery life, the Prance & Rock Learning Unicorn™ will automatically power down after approximately 45 seconds without input. The unit can be turned on again by pressing any button, or by turning the spinner on the unicorn's head.

ACTIVITIES



1. Light-Up Buttons

Press the Light-Up buttons to learn about colors and to hear fun songs and music in Learning & Music mode. In Adventure mode, you will hear playful phrases, sounds, and songs. When a melody is playing, press the Light-Up buttons to play the melody one note at a time. The lights and horn will flash with the sounds.

2. Spinner

Turn the Spinner to hear fun sounds and short tunes in both Learning & Music mode and Adventure mode. The lights and horn will flash with the sounds.

3. Motion Sensor

Rock or ride the unicorn to activate the Motion Sensor. In Learning & Music mode you will hear playful melodies. In Adventure mode, you will hear a variety of fun sounds. The lights and horn will flash with the

sounds. The faster you ride, the faster the lights will flash.

SONG LYRICS

Song 1

- I'm a pretty little unicorn.
- I prance and rock, dream, and sing.
- Hop onto my back and we will go on a fantastic adventure.

Song 2

- What an amazing journey that was,
- Flying through the sky and over the rainbow.
- Where should we go on our next adventure?

Song 3

- What an amazing journey that was,
- Exploring castles and visiting a princess.
- Playing pretend is so much fun!

MELODY LIST

1. Bicycle Built for Two
2. A-Tisket, A-Tasket
3. Little Miss Muffet
4. Roses Are Red
5. Beautiful Dreamer
6. All The Pretty Little Horses
7. Little Robin Redbreast
8. Riddle Song
9. White Coral Bells
10. Ring Around the Rosie

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace it with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada.

IMPORTANT NOTE: Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S., or 1-[877-352-8697](tel:877-352-8697) in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

- **Trade Name:** VTech®
- **Model:** 1923
- **Product Name:** Prance & Rock Learning Unicorn™
- **Responsible Party:** VTech Electronics North America, LLC
- **Address:** 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
- **Website:** vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND

2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PRODUCT WARRANTY

- This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.
- Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:
- If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.
- THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.
- To the extent permitted by law, VTech will not be responsible for direct, special, incidental, or consequential damages resulting from any breach of Warranty.
- This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

To register your product online at www.vtechkids.com/warranty

FREQUENTLY ASKED QUESTIONS

What are the product dimensions of the VTech 80-192300 Prance and Rock Learning Unicorn?

The product dimensions of the VTech 80-192300 Prance and Rock Learning Unicorn are 22.01 x 13.54 x 18.54 inches.

What is the weight of the VTech 80-192300 Prance and Rock Learning Unicorn?

The weight of the VTech 80-192300 Prance and Rock Learning Unicorn is 5.64 pounds.

What is the item model number of the VTech 80-192300 Prance and Rock Learning Unicorn?

The item model number of the VTech 80-192300 Prance and Rock Learning Unicorn is 80-192300.

What is the manufacturer recommended age for the VTech 80-192300 Prance and Rock Learning Unicorn?

The manufacturer recommended age for the VTech 80-192300 Prance and Rock Learning Unicorn is 12 months to 3 years.

How many batteries does the VTech 80-192300 Prance and Rock Learning Unicorn require?

The VTech 80-192300 Prance and Rock Learning Unicorn requires 2 AAA batteries.

Who is the manufacturer of the VTech 80-192300 Prance and Rock Learning Unicorn?

VTech is the manufacturer of the VTech 80-192300 Prance and Rock Learning Unicorn.

What is the price of the VTech 80-192300 Prance and Rock Learning Unicorn?

The price of the VTech 80-192300 Prance and Rock Learning Unicorn is \$28.99.

What is the warranty period for the VTech 80-192300 Prance and Rock Learning Unicorn?

The VTech 80-192300 Prance and Rock Learning Unicorn comes with a 3-month warranty.

Why is my VTech 80-192300 Prance and Rock Learning Unicorn not turning on?

Ensure that the batteries are inserted correctly according to the polarity markings inside the battery compartment of the VTech 80-192300 Prance and Rock Learning Unicorn. Replace the batteries if necessary.

How do I fix it if my VTech 80-192300 Prance and Rock Learning Unicorn's lights are not working properly?

Check the battery compartment for any corrosion on the terminals. Clean the terminals with a dry cloth and replace the batteries with fresh ones.

My VTech 80-192300 Prance and Rock Learning Unicorn is not playing music or sounds. What should I do?

Make sure that the volume is turned up to an audible level. If the issue persists, check if the sound settings are not muted or turned off accidentally.

The buttons on my VTech 80-192300 Prance and Rock Learning Unicorn are not responding when pressed. What should I check?

Ensure that the toy is turned on and that the buttons are not stuck. Clean around the buttons gently with a dry cloth to remove any dirt or debris.

Why does my VTech 80-192300 Prance and Rock Learning Unicorn move slowly or inconsistently?

Check the wheels or rocking mechanism for any obstructions or debris. Clean the wheels and axles thoroughly to ensure smooth movement.

How can I replace the batteries in my VTech 80-192300 Prance and Rock Learning Unicorn?

Locate the battery compartment on the toy and open it using a screwdriver if necessary. Replace the old batteries with new ones according to the polarity markings.

The unicorn's mane or tail on my VTech 80-192300 Prance and Rock Learning Unicorn is tangled. How can I fix this?

Gently comb through the mane or tail with a soft brush to untangle any knots. Avoid using excessive force to prevent damaging the toy.

VIDEO – PRODUCT OVERVIEW



[Download the PDF link: VTech 80-192300 Prance and Rock Learning Unicorn User's Guide and Rock Learning Unicorn Users Guide.mp4](#)

REFERENCE: [VTech 80-192300 Prance and Rock Learning Unicorn User's Guide -Device.Report](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.