

VTECH 80-196200
ROCK AND BOP
MUSIC PLAYER
USER'S MANUAL



VTech 80-196200 Rock and Bop Music Player User's Manual

[Home](#) » [vtech](#) » VTECH 80-196200 Rock and Bop Music Player User's Manual 

Contents

- 1 VTECH 80-196200 Rock and Bop Music Player
- 2 INTRODUCTION
- 3 GETTING STARTED
- 4 Product Features
- 5 Activities
- 6 SONGS
- 7 CARE & MAINTENANCE
- 8 TROUBLESHOOTING
- 9 PRODUCT WARRANTY
- 10 FREQUENTLY ASKED QUESTIONS
- 11 VIDEO – PRODUCT OVERVIEW
- 12 References
- 13 Related Posts



VTECH 80-196200 Rock and Bop Music Player



Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the Infant Learning® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s Infant Learning® toys develop babies' mental and physical abilities by inspiring, engaging, and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

Your friends at VTech®

To learn more about VTech® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the VTech® Rock & Bop Music Player™! Your child will love listening to the music, playing games, singing along with the songs and dancing around!



1. LETTER SONGS BUTTON
2. NUMBER SONGS BUTTON
3. CLASSICAL MUSIC BUTTON
4. HIP-HOP MUSIC BUTTON
5. INSTRUMENT REMIX BUTTON
6. PREVIOUS BUTTON
7. TEMPO BUTTON
8. PLAY/PAUSE BUTTON
9. LIGHT-UP MUSIC BUTTON
10. LCD SCREEN
11. ON/OFF BUTTON
12. CLOCK CHIMES BUTTON
13. WHAT LETTER COMES NEXT? BUTTON
14. ANIMAL REMIX BUTTON
15. ROCK MUSIC BUTTON
16. BOOGIE DANCE BUTTON
17. NEXT BUTTON
18. VOLUME BUTTON
19. LED LIGHT

INCLUDED IN THIS PACKAGE

- One Rock & Bop Music Player™

 
- One set of headphones
- User's manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties, and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this user's manual as it contains important information.


Unlock the packaging lock:

1. Turn the packaging lock counterclockwise several times.
2. Pull out and discard the packaging lock.

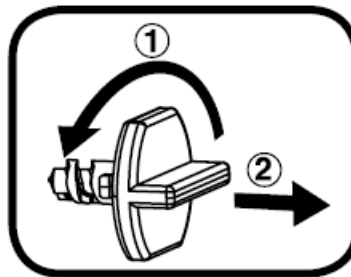

GETTING STARTED

 BATTERY INSTALLATION

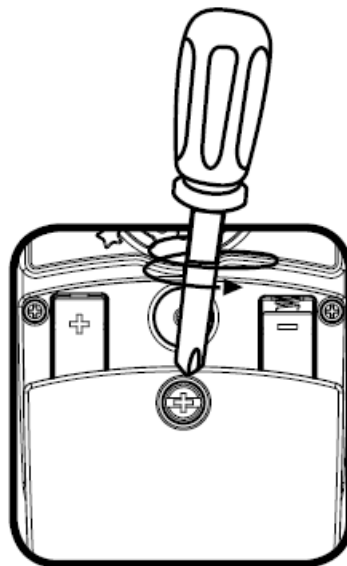

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit.
3. Install 2 new "AAA" size (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover to secure it.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in a fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Product Features

1. ON/OFF BUTTON

Press the On/OFF BUTTON  to turn the unit ON. Press the ON/OFF BUTTON to turn the unit OFF.

2. Function Buttons

• PLAY/ PAUSE BUTTON

Play or pause the music by pressing the PLAY/ PAUSE BUTTON.

• PREVIOUS BUTTON & NEXT BUTTON

Press the PREVIOUS BUTTON & NEXT BUTTON to make a selection.

• LIGHT-UP MUSIC BUTTON

Press the LIGHT-UP MUSIC BUTTON to hear music or confirm your selection.

 
• TEMPO BUTTON

Press the TEMPO BUTTON to adjust the tempo of the melodies.

• VOLUME BUTTON

Press the VOLUME BUTTON to adjust the volume.

3. AUTOMATIC SHUT-OFF

- To preserve battery life, the unit will automatically power off after several minutes without input. The unit can be turned on again by pressing the On/Off button.
- When you see this low battery icon  on the screen or the unit repeatedly powers down, please insert new batteries and try switching it on again.

Activities

1. Letter Songs Mode

Learn letters and phonics while listening to letter songs. Press the PREVIOUS & NEXT BUTTONS to select

different songs.

2. Number Songs Mode



Listen to number songs while watching cute animations to learn about numbers and counting.

3. What Letter Comes Next? Mode



Listen to the ABC song. When the music stops, use the PREVIOUS & NEXT BUTTONS to choose the letter that comes next.

4. Clock Chimes Mode



Listen to the clock chimes and press the PREVIOUS & NEXT BUTTONS to select the correct number of chimes.

5. Classical Music Mode



Listen to classical music by pressing the PREVIOUS & NEXT BUTTONS to select different melodies.

6. Hip Hop Music Mode



Enjoy some hip-hop music by pressing the PREVIOUS & NEXT BUTTONS to select different melodies.

7. Rock Music Mode



Hear rock music by pressing the PREVIOUS & NEXT BUTTONS to select different melodies.

8. Animal Remix Mode



Listen to the animals sing cute songs by pressing the PREVIOUS & NEXT BUTTONS to select different animals.

9. Instrument Remix Mode



Remix the melody by pressing the PREVIOUS & NEXT BUTTONS to select different instruments.

10. Boogie Dance Mode



Dance and “freeze” when the music stops. Listen to the words in the song and boogie down!

SONGS

- **SONG 1** It's dancin' time, let's boogie down! Move and groove and shake all around! C'mon now, let's turn up the beat! Play it again, put it on repeat!
- **SONG 2** 1 little, 2 little, 3 little penguins 4 little, 5 little, 6 little penguins 7 little, 8 little, 9 little penguins 10 will waddle away
- **SONG 3** Clap, clap, clap your hands! Bounce, bounce, bounce around! Stomp, stomp, stomp your feet! Jump, jump, touch the sky! Boogie, boogie, boogie down!
- **SONG 4** Dance, dance, dance it out! Wave, wave, wave your arms! Dance, dance, dance all day! Slow, slow, slow it down!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace it with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada.

IMPORTANT NOTE: Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S., or 1-[877-352-8697](tel:877-352-8697) in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PRODUCT WARRANTY

- This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.
- Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:
- If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase data and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.
- THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.
- To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.
- This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech .

To register your product online at www.vtechkids.com/warranty

FREQUENTLY ASKED QUESTIONS

What are the key features of the VTech 80-196200 Rock and Bop Music Player?

The VTech 80-196200 Rock and Bop Music Player features a 1.77-inch screen, 4 GB memory capacity, and comes with headphones and 2 AAA batteries for immediate use.

What age group is the VTech 80-196200 Rock and Bop Music Player designed for?

The VTech 80-196200 Rock and Bop Music Player is designed for children and young users interested in portable music playback.

What type of connectivity does the VTech 80-196200 Rock and Bop Music Player support?

The VTech 80-196200 Rock and Bop Music Player supports Aux connectivity, allowing users to connect headphones or external speakers.

How large is the screen of the VTech 80-196200 Rock and Bop Music Player?

The music player features a 1.77-inch screen, suitable for displaying track information and basic navigation.

What is included in the package of the VTech 80-196200 Rock and Bop Music Player?

The package includes the music player itself, headphones, and 2 AAA batteries, providing everything needed to start enjoying music right away.

How much memory does the VTech 80-196200 Rock and Bop Music Player have?

It has a memory storage capacity of 4 GB, allowing users to store a sizable collection of music tracks.

What dimensions and weight does the VTech 80-196200 Rock and Bop Music Player have?

The dimensions are 0.75 inches deep, 1.97 inches wide, and 6.2 inches high, with a weight of approximately 7 ounces, making it compact and lightweight.

Where can I purchase the VTech 80-196200 Rock and Bop Music Player?

You can purchase the VTech 80-196200 Rock and Bop Music Player from major retailers, online stores, and the VTech website, priced at approximately \$17.12.

Why is my VTech 80-196200 Rock and Bop Music Player not turning on?

Ensure that the batteries are inserted correctly and that they are not depleted. Try replacing the batteries with new ones and make sure they are properly aligned according to the polarity (+ and -) markings.

The sound from my VTech 80-196200 Rock and Bop Music Player is distorted. What should I do?

Check the batteries to ensure they are fully charged and replace them if necessary. Also, inspect the speaker for any debris or obstruction that might be affecting the sound quality.

Why does my VTech 80-196200 Rock and Bop Music Player turn off unexpectedly?

This could be due to low battery power. Replace the batteries with new ones. If the issue persists, check for any signs of damage to the battery compartment or internal components.

The buttons on my VTech 80-196200 Rock and Bop Music Player are not responding. What should I do?

Ensure that the buttons are not stuck and that there is no debris underneath them. Try gently pressing each button to see if it loosens. If the problem continues, the internal circuitry might need inspection by a professional.

How do I clean my VTech 80-196200 Rock and Bop Music Player?

Use a soft, damp cloth to wipe the surface of the music player. Avoid using any harsh chemicals or submerging the device in water. For any stubborn dirt, a mild soap solution can be used on the cloth.

Why is the volume on my VTech 80-196200 Rock and Bop Music Player too low?

Check if the volume control is set to a low level and adjust it accordingly. Ensure that the batteries are fully charged as low battery power can affect volume output.

The lights on my VTech 80-196200 Rock and Bop Music Player are not working. How can I fix this?

Replace the batteries to see if that resolves the issue. If the lights still do not work, there may be an issue with the internal LED components, which would require professional repair or replacement.

VIDEO – PRODUCT OVERVIEW



[Download the PDF link: VTech 80-196200 Rock and Bop Music Player and User's Manual Bop-Music-Player-Users-Manual.mp4](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.