



80-533400
TOUCH
&
TEACH
SEA
TURTLE



Vtech 80-533400 Touch & Teach Sea Turtle User's Guide

[Home](#) » [vtech](#) » Vtech 80-533400 Touch & Teach Sea Turtle User's Guide 

Contents

- [1 Vtech 80-533400 Touch & Teach Sea Turtle](#)
- [2 INTRODUCTION](#)
- [3 GETTING STARTED](#)
- [4 PRODUCT FEATURES](#)
- [5 ACTIVITIES](#)
- [6 MELODIES](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PRODUCT WARRANTY](#)
- [10 FREQUENTLY ASKED QUESTIONS](#)
- [11 VIDEO – PRODUCT OVERVIEW](#)
- [12 References](#)
- [13 Related Posts](#)




Vtech 80-533400 Touch & Teach Sea Turtle



INTRODUCTION

 Thank you for purchasing the Touch & Teach Sea Turtle™. Go on an underwater adventure and learn numbers, letters, first words and more while exploring eight double-sided pages. Press the eight number buttons to learn about animals, animal sounds, numbers and to hear songs and melodies.

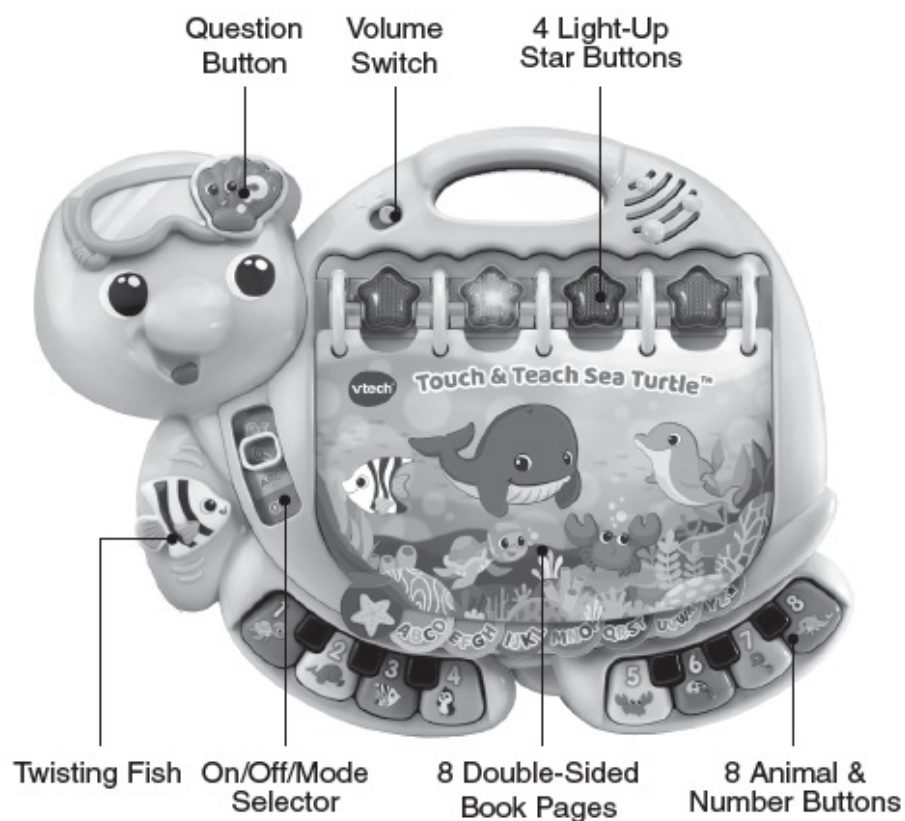

INCLUDED IN THIS PACKAGE


- Touch & Teach Sea Turtle™
- Parent's guide

WARNING All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE Please keep this parent's guide as it contains important information.

Unlock the Packaging Locks


1. Rotate the packaging locks counterclockwise 90 degrees.
2. Pull out the packaging locks.

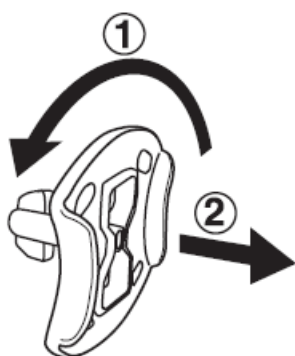

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned Off.
2. Locate the battery cover on the back of the unit. Use a coin or a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one side of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

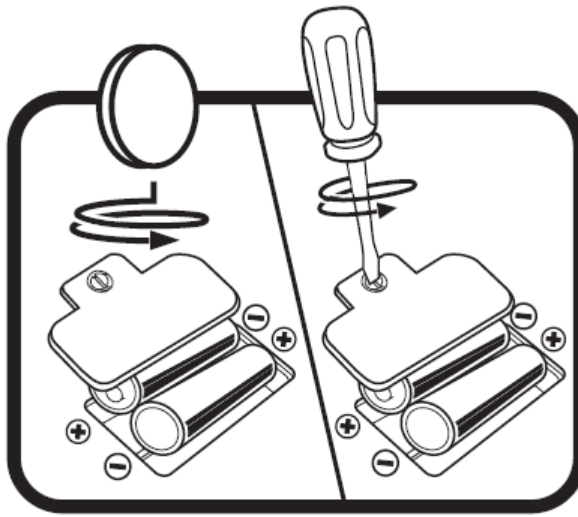



BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and –).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES



1. On/Off/Mode Selector

To turn the unit On, slide the On/Off/ Mode Selector to Letter mode **ABC**, Explore mode  or Music mode  position. You will hear a fun opening response in each mode. To turn the unit Off, slide the On/Off/Mode Selector to the Off position.

2. Volume Switch

Slide the Volume Switch to the Low volume  or High volume  position to adjust the sound level.

3. Automatic Shut Off

To preserve battery life, the Touch & Teach Sea Turtle™ will automatically power down after approximately 45 seconds without input. The unit can be turned on again by pressing any button.

NOTE: If the unit repeatedly powers down while playing or if the light fades out during play, please install a new set of batteries.


ACTIVITIES

1. Light-Up Star Buttons

Press the Light-Up Star buttons to learn about letters, animal names and sounds, objects and more in Letter mode. Hear interesting facts with fun sounds and short tunes in Explore mode. Listen to a variety of short tunes and melodies in Music mode. The lights will flash with the sounds.

2. Animal and Number Buttons

Press the Animal and Number buttons to learn about numbers and counting 1–8 in Letter mode. In Explore mode, learn about animal names and hear sound effects. Play piano notes in Music mode. While a melody is playing, press the piano keys again to play the melody one note at a time. The lights will flash with the sounds.

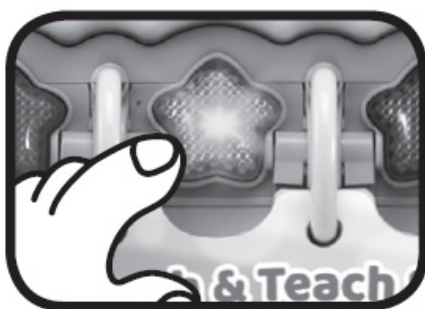

3. Book Pages


Turn the Book Pages to hear magical sounds and short tunes. The lights will flash with the sounds.

4. Question Button

Press the Question button to hear a variety of questions about numbers, letters, animals and objects, depending on the selected mode and page. Press the Animal and Number buttons or the Light-Up Star buttons to answer the questions. The lights will flash with the sounds.

5. Twisting Fish

Turn the Twisting Fish to hear a mechanical clicking sound.

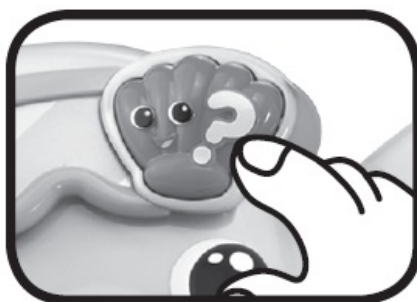

MELODIES

1. Turkey in the Straw
2. My Bonnie Lies Over the Ocean
3. Hot Cross Buns
4. Ding Dong Bell
5. MacNamara's Band
6. A-Tisket, A-Tasket
7. Cockles and Mussels
8. Oranges and Lemons
9. Shenandoah
10. Arkansas Traveler
11. Lazy Mary, Will You Get Up?
12. Home Sweet Home
13. Animal Fair
14. There Is a Tavern in the Town
15. Do You Know the Muffin Man?
16. Jack Be Nimble
17. Sing a Song of Sixpence
18. Skip to My Lou
19. Sailing, Sailing
20. Ta-Ra-Ra Boom-De-Ay

SONG LYRICS

- I'm a little sea turtle,
- See me crawl, see me swim.
- I live in the deep blue sea with all my friends.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace it with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S. or 1-[877-352-8697](tel:877-352-8697) in Canada.

IMPORTANT NOTE: Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-[800-521-2010](tel:800-521-2010) in the U.S., or 1-[877-352-8697](tel:877-352-8697) in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

- **Trade Name:** VTech®
- **Model:** 5334
- **Product name:** Touch & Teach Sea Turtle™
- **Responsible Party:** VTech Electronics North America, LLC
- **Address:** 1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
- **Website:** vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PRODUCT WARRANTY

- This Warranty is applicable only to the original purchaser, is non-transferable and applies only to “VTech” products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner’s manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.
- Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-[800-521-2010](tel:800-521-2010). If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:
- If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.
- THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.
- To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.
- This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

To register your product online at www.vtechkids.com/warranty

FREQUENTLY ASKED QUESTIONS

What is the VTech 80-533400 Touch & Teach Sea Turtle?

The VTech 80-533400 Touch & Teach Sea Turtle is an interactive educational toy designed for young children. It features touch-sensitive areas and audio prompts to help toddlers learn about animals, numbers, and letters through play.

What are the dimensions of the VTech 80-533400 Touch & Teach Sea Turtle?

The VTech 80-533400 Touch & Teach Sea Turtle measures 2.56 x 14.25 x 10.51 inches, providing a large, engaging surface for interactive play.

How much does the VTech 80-533400 Touch & Teach Sea Turtle weigh?

The VTech 80-533400 Touch & Teach Sea Turtle weighs 2.2 pounds, which makes it a substantial yet manageable toy for young children.

What is the price of the VTech 80-533400 Touch & Teach Sea Turtle?

The VTech 80-533400 Touch & Teach Sea Turtle is priced at \$19.58, making it a reasonably priced educational toy for toddlers.

What is the recommended age for the VTech 80-533400 Touch & Teach Sea Turtle?

The VTech 80-533400 Touch & Teach Sea Turtle is recommended for children aged 12 months to 3 years, making it suitable for early learners and toddlers.

What type of batteries does the VTech 80-533400 Touch & Teach Sea Turtle use?

The VTech 80-533400 Touch & Teach Sea Turtle requires 2 AA batteries for operation.

What features does the VTech 80-533400 Touch & Teach Sea Turtle include?

The VTech 80-533400 Touch & Teach Sea Turtle features touch-sensitive areas that trigger educational sounds and phrases, teaching children about numbers, letters, and sea animals through interactive play.

How does the VTech 80-533400 Touch & Teach Sea Turtle enhance learning?

The VTech 80-533400 Touch & Teach Sea Turtle uses touch-sensitive areas and auditory feedback to engage children in learning basic concepts like numbers and letters, while also introducing them to sea

creatures.

What materials is the VTech 80-533400 Touch & Teach Sea Turtle made from?

The VTech 80-533400 Touch & Teach Sea Turtle is made from durable plastic designed to withstand regular play by toddlers.

What educational benefits does the VTech 80-533400 Touch & Teach Sea Turtle provide?

The VTech 80-533400 Touch & Teach Sea Turtle helps develop early literacy and numeracy skills, along with promoting sensory development and motor skills through interactive touch points.

How does the touch-sensitive feature of the VTech 80-533400 Touch & Teach Sea Turtle work?

The touch-sensitive feature of the VTech 80-533400 Touch & Teach Sea Turtle responds to touch by activating corresponding sounds and educational content, making learning interactive and engaging.

What kind of sound effects does the VTech 80-533400 Touch & Teach Sea Turtle produce?

The VTech 80-533400 Touch & Teach Sea Turtle produces a variety of sound effects, including educational phrases, animal sounds, and music, to enhance the interactive learning experience.

How can parents maintain the VTech 80-533400 Touch & Teach Sea Turtle?

To maintain the VTech 80-533400 Touch & Teach Sea Turtle, parents should regularly clean it with a damp cloth, ensure the batteries are fresh, and store it in a dry place to prevent damage.

What should I do if the VTech 80-533400 Touch & Teach Sea Turtle is not turning on?

Check that the batteries are installed correctly and have sufficient charge. Ensure the battery compartment is securely closed. If the turtle still does not turn on, replace the batteries with fresh ones.

Why is the VTech 80-533400 Touch & Teach Sea Turtle not responding to touch?

Make sure the touch-sensitive areas are clean and free from debris. Verify that the batteries are properly installed and have enough power. If the turtle remains unresponsive, there may be an issue with the touch sensor or internal electronics.

VIDEO – PRODUCT OVERVIEW



[Download the PDF link: Vtech 80-533400 Touch & Teach Sea Turtle User's Guide Teach-Sea-Turtle-Users-Guide.mp4](#)

REFERENCE: [Vtech 80-533400 Touch & Teach Sea Turtle User's Guide-Device.Report](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.