

Vuelogic VL-VB300 Smart Camera Soundbar Microphone And Video Switcher User Manual

<u>Home</u> » <u>Vuelogic</u> » Vuelogic VL-VB300 Smart Camera Soundbar Microphone And Video Switcher User Manual



VL -VB 300
SMART CAMERA, SOUNDBAR, MICROPHONE AND VIDEO SWITCHER
All-In-One Conferencing Solution



User Manual



Contents

- 1 INTRODUCTION
- **2 FEATURES**
- **3 PACKAGE CONTENTS**
- **4 SPECIFICATIONS**
- **5 PANEL DESCRIPTION**
- **6 INSTALLATION**
- **7 APPLICATION**
- **8 AUTOMATIC SIGNAL SWITCHING**
- 9 PAIRING WITH BLUETOOTH REMOTE

CONTROLLER

- 10 SCREEN MIRRORING
- 11 USING APPLE DEVICES
- **12 OVERVIEW**
- **13 TROUBLE SHOOTING**
- 14 Documents / Resources

INTRODUCTION

This product is an all-in-one meeting videobar with ultra-wide angle 4K camera, microphone and speaker, as well as wired and wireless screen casting capability. It is ideal for teleconference and collaboration applications in huddle rooms and small to medium meeting rooms.

FEATURES

- Smart video conference collaboration device. All-in-one solution for all meeting scenarios
- · Wired screen presentation via USB-C and HDMI
- · Wireless BYOD via Airplay, Miracast and Dongle
- Wide angle 4K video camera with 120° FOV
- 4x MEMS digital microphone arrays with a range of 5 ~ 8 meters and an angle of 180°
- 2x 5W Stereo full range speakers with passive radiator bass enhancement
- Includes AEC (Acoustic Echo Canceltation), AGC (Automatic Gain Control), ANS (Automatic Noise Suppression) and full duplex mode communication to make all participants feet like they are in the same room
- Auto Framing / Speaker Tracking / Presenter Tracking based on Al technology makes meetings more intimate and friendly
- Plug and play with excellent compatibility for OS and UC applications, e.g. Zoom, Teams, Webex, Tecent Meeting, etc.
- Provides flexible control options via Web GUI and Remote Controller
- Built-in Wi-Fi

PACKAGE CONTENTS


- ix Video Bar
- ix DC 24V 5A Power Adapter
- ix Remote Controller
- ix Magnetic Lens Cap
- Ix Wall Mounting Kit
- 4x Expansion Screws
- 4x Mounting Screws

SPECIFICATIONS

| Interface | 1 x HDMI in, 1 x HDMI out, 1 x USB-C, 1 x USB-B, 1 x USB-A, 1 x Mic, 1 x GE, 1 x DC |
|---------------------------|---|
| Video Resolutions | 41<@30Hz (Max) |
| Output Video Encoding | 3840×2160 @ 30 Hz (max) |
| CAMERA AND SENSOR | • |
| Lens | Fixed Focus |
| Sensor | CMOS, Effective Pixel: 8.0M |
| White Balance | Auto |
| Backlight Compensation | Auto |
| Digital Noise Reduction | 2D, 3D Digital noise reduction supported |
| Viewing Angle | FOV: 120° |
| ePTZ | Supported I 5 x Digital Zoom |
| HDR | Supported |
| Tracking Mode | Auto Framing / Speaker Tracking / Presenter Tracking |
| SPEAKERPHONE | |
| Microphone | 4 x Linear microphone arrays with echo cancellation Pick-up Range: 5m-8m |
| Speaker | 2 x 5W |
| COMMUNICATION AND CONTROL | |
| HDMI | HDMI 2.0, HDCP 2.2 |
| USB | USB-C: USB 3.0 host (60W max charging) USB-A: USB 3.0 device USB-B: USB 3.0 host |
| USB Protocol | UAC, UVC, USB HID |
| Ethernet | 1 x RJ-45 |
| WLAN | IEEE 802.11 a/b/g/n/ac |
| Control Methodw | Web UI, Bluetooth Remote Controller |
| GENERAL | • |
| Operating Temperature | 0°C – 45°C, 10% to 90%, non-condensing |
| Storage Temperature | -20°C – 60°C, 10% to 90%, non-condensing |
| MTBF | > 30000h |
| Power Supply | DC 24V 5A |
| Power Consumption | 100W (Max) |
| | I . |

| Dimension (Width x Height x Depth) | 700mm x 126.83 mm x 90mm (with Bracket) |
|---------------------------------------|---|
| Net Weight | 2.42 kg (with Bracket) |
| Gross Weight | 6.22 kg |

PANEL DESCRIPTION

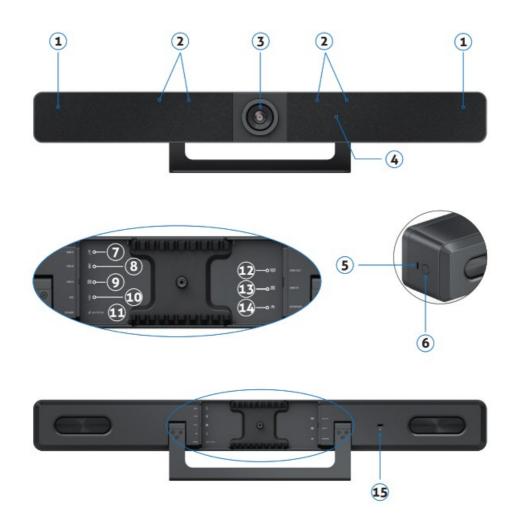


| ID | NAME | DESCRIPTION |
|----|----------------|---|
| 1 | Speaker | 2 x Speakers for audio signal output |
| 2 | Microphone | 4 x Linear microphone arrays for picking up sound. |
| 3 | Lens | Camera lens. |
| 4 | Status LED | Blinking orange: The device is booting. Constant white: The device is working properly. Blinking white: The device is in standby state. Blinking white very quickly: The device is being upgraded. Blinking and white: The device is in sleep state. Constant red: The device's microphone is muted. Blinking blue: The device is in Bluetooth pairing state. |
| 5 | USB-C | Connect to the Dongle for pairing. |
| 6 | Pairing Button | Press and hold this button for more than 2 seconds to start pairing with the bluetooth remote controller. |
| 7 | USB-A | USB 3.0 Type-A port. Connect to a USB device such as touch sc reen. |
| 8 | USB-B | USB 3.0 Type-B port. Connect to the room PC for meetings. |
| 9 | USB-C | USB 3.0 Type-C port. USB PD: 60W max Connect to the laptop for meetings. |
| 10 | MIC | Connect to an external microphone. |
| 11 | Power | Connect to the power adapter provided for DC 24V 5A input |
| 12 | HDMI Out | Connect to a HDMI display device or a capture card of the room PC. |
| 13 | HDMI In | Connect to a laptop. |
| 14 | Ethernet | Connect to a network device (e.g. network switch, wireless route r, computer, etc.) for Airplay Mirroring signal input and LAN contr of (Web GUI Et Telnet API). |
| 15 | 8 | Kensington security slot |

INSTALLATION


Note: Before installation, ensure the device is disconnected from the power source. To install the device on the wall:

- 1. Drill holes in the wall where appropriate, then insert the expansion screws provided into the wall. Secure the wall hanging bracket on the wall using the mounting screws provided.
- 2. Remove the stand from the device.
- 3. Screw the wall-mounted bracket to the device.
- 4. Attach the device's wall-mounted bracket to the wall hanging bracket on the wall.

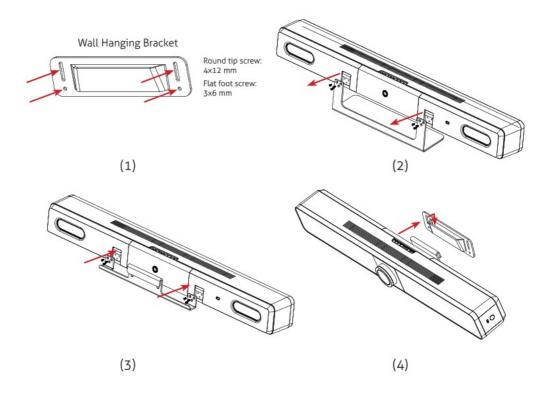


APPLICATION

1. BYOM

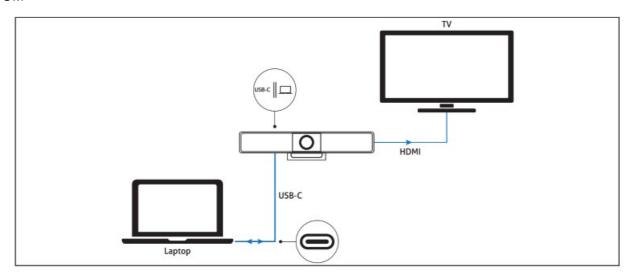


One Type-C AOC full function cable (optional) supports DP1.4, USB3.0, USB2.0 and PD (max 60W).

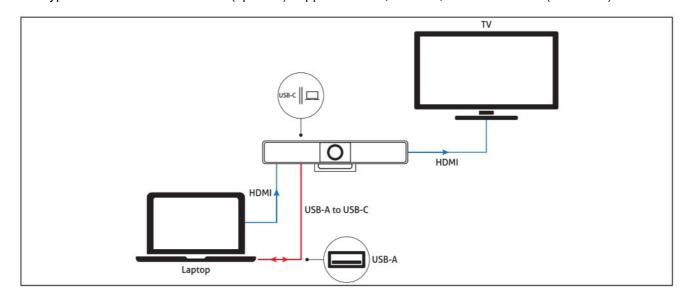

The second connection method is to use the standard HDMI and USB-A cables.

2. Zoom Room + BYOM

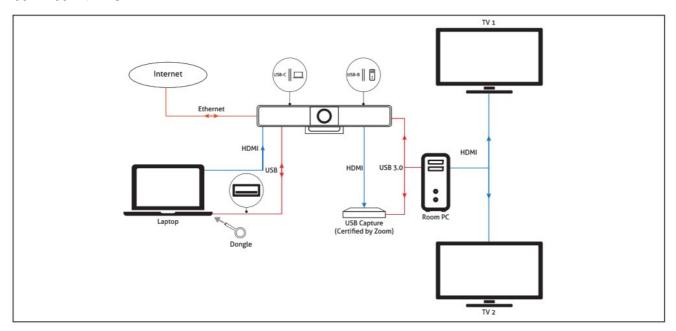


Dongle sold separately


Note: After the device is connected to a computer, it can be detected by the system and specific applications with the following name:

* Model: VB300

* Camera/Speaker/Microphone: VB300

3. Microphone Cascading

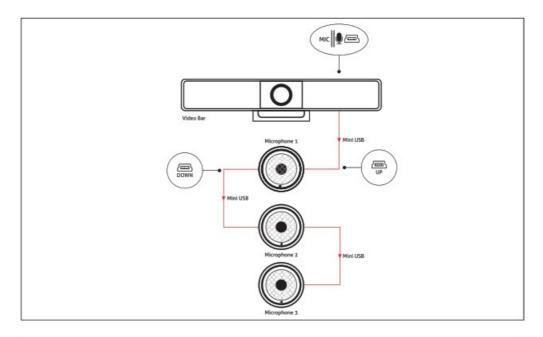

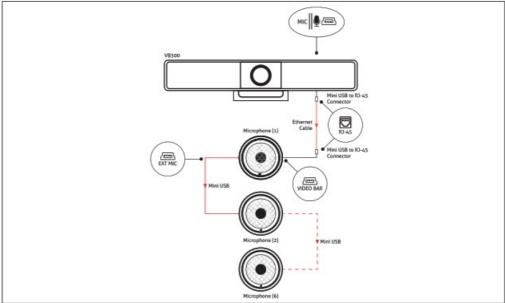

AUTOMATIC SIGNAL SWITCHING

Automatic signal switching function allows you to easily and quickly choose a source.


- 1. If screen display mode is set as Single Screen (default setting), signal switching follows Last-In-First-Out rule. In Single Screen mode, if a new video source inputs, the device will output it to the display screen.
- 2. If two video sources are being played in dual view (Split Screen), connect a new video source input to the device: when there's one hardware video source (HDMI/ USB-C) at most among three sources, the latest input source will replace the source that has been displayed the longest on the screen; or the latest input source will replace the previous hardware video source.
- 3. If all video sources are removed, the device will output the Home Screen connection guide.

PAIRING WITH BLUETOOTH REMOTE CONTROLLER

The device can be controlled by the Bluetooth remote controller provided, after they have been successfully paired with each other.

To pair with the Bluetooth remote controller:

1. Press and hold the pairing button on the enclosure's left side, the status LED wittDbtink blue, which indicates that the device enters Bluetooth pairing mode.

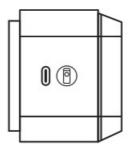

2. Press any button on remote controller, "Remote Control Connected" will appear on the display screen, indicating that Bluetooth paring between the remote controller and the device is successful. Now you can use the remote controller to control the device with ease.

The following briefly introduces the functions of the remote controller buttons.



| BUTTONS | DESCRIPTION |
|------------------------|---|
| Bluetooth | Press and hold the button for 2s to make the device to start paring with other third-party Bluetooth device. (This function will be a vailable in further versions) |
| Answer | Press to answer the phone (available only when connect to a cellphone via Bluetooth). |
| Hang up | Press to hang up the phone (available only when connect to a cellphone via Bluetooth. |
| Home | Press to back to the default camera view (available only when Tracking mo de is off). Press and hold the button for 2s to show OSD that includes IP address, mo del name, etc. |
| Navigation | Press to perform ePTZ (only available when Trackingmode is off). |
| 1 2 Presets | •Press and hold 3s to save current camera view to preset 1. or 2. •Press to switch the camera view to preset 1 or 2. (Available only when Tracking mode is off) |
| Mute/ Unmute | Press to toggle between mute and unmute. |
| + d> Volume | Press to adjust the volume. Press and hold to adjust the volume continuously. |
| Tracking mode and Off. | Press to toggle among Auto Framing, Speaker Tracking |
| (+ Q - Zoom | Press to adjust the zoom. Press and hold to adjust the zoom continuously. |
| * + • | Press and hold the combination buttons for 3s, the remote controller will ent er pairing mode. |

SCREEN MIRRORING

With screen mirroring support, the device allows users to share multimedia content wirelessly from their mobile devices on any HDMI displays over Windows, Airplay Mirroring and Miracast.

USING APPLE DEVICES

Step 1: Connect your iPhone/iPad/Mac to the network on which the device runs.

Step 2: Open Control Center on your Apple device, tap to select appropriate mirroring device from the pop-up menu.

Note: For Apple device screen casting, please use the remote control to control the volume of VB300.

USING ANDROID PHONES

Take Samsung Galaxy series for example:

Step 1: Enable the Wi-Fi or WLAN feature of your mobile device.



Step 2: On your mobile device, swipe down from the top and tap SmartView or Projection to select appropriate mirroring device from the pop-up CONNECT menu.

USING THE DONGLE

Pre-Step: Plug the Dongle in to type-C port on the side of VB300 for pairing.

Step1: Plug the Dongle in to your PC or Laptop.

Step 2: Press the button to start casting once the LED stops flashing.

USING WINDOWS PCS

Step 1: Enable the Wi-Fi or WLAN feature of your PC.


Step 2: On your PC, press the combination keys "+ K" to select appropriate mirroring device from the popup menu.

WEB UI

The Web UI designed for this device allows for basic settings. It can be accessed through a modern browser, e.g. Chrome, Safari, Firefox, etc.


To access the Web UI page:

- 1. Connect the Ethernet port of the device to a local area network. (Ensure there's a DHCP server in the network so that the switcher can obtain a valid IP address.)
- 2. Connect a PC to the same network as the device.
- 3. Input the device's IP address in the browser and press Enter, the following window will pop up. Note: Default IP mode for this device is DHCP.

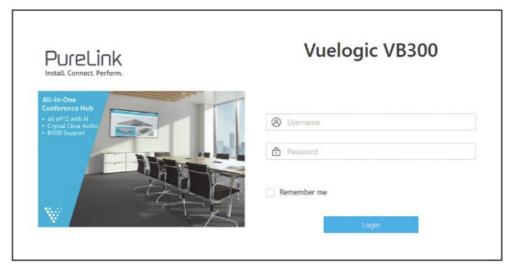

4. Input the user name and password (default user name & password: admin) and click Login to enter the main page.


The main page includes Overview, Camera, Settings and Support tabs.

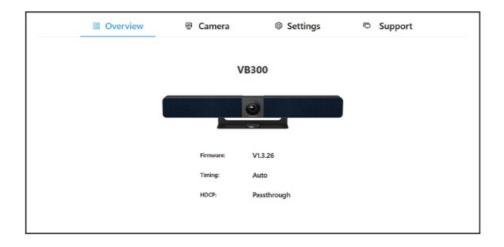

- Overview offers basic information of the device.
- Camera offers settings of camera parameters.
- Settings offers basic settings of Video, Wi-Fi, BYOD, etc.
- Support offers firmware update function and device information.


OVERVIEW

This page offers firmware version and status of output timing and HDCP settings for thew device. **CAMERA**

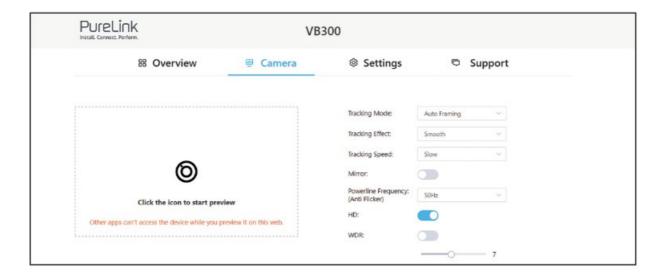


| UI ELEMENTS | DESCRIPTION/OPTIONS |
|------------------------------------|---|
| Tracking Mode | Auto Framing is an Al feature to zoom, pan, and tilt intelligently so that ev eryone in the room is perfectly located in the picture. Speaker tracking is an Al feature to intelligently focus on the person who is talking. When more than one person is speaking, it will automatically switch between speakers. Presenter tracking is an Al feature to intelligently track the presenter, so that the presenter can always be in the best position on the screen even when constantly moving. Off |
| Tracking Effect | Tracking effect is available when Auto Framing is enabled. •Smooth (default): The tracking image moves smoothly in the frame. •Immediate: The tracking image switches from one to another immediatel y in the frame. |
| Tracking Speed | Tracking speed is available when Auto Framing is enabled. •Slow (default) /Normal/Fast |
| Mirror | •Mirror image function •On: Image flipped horizontally. •Off (default setting): Image not flipped horizontally. |
| Powerline Frequency (Anti Flicker) | Change the frequency to prevent flicker in the video. •50Hz (default) /60Hz |
| HD | On (default): Turn on for better image quality. Off: Turn off for better compatibility. |
| 0 | Click this icon to enable camera preview. Note: Other Apps cannot use the camera until camera preview is disabled. |
| WDR | WDR When WDR is enabled, you can manually adjust the Backlight comp ensation value. |

SETTINGS GENERAL SETTINGS

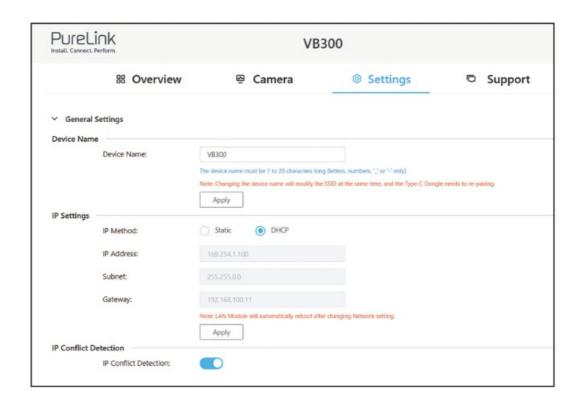


| UI ELEMENTS | DESCRIPTION/OPTIONS |
|-----------------------|---|
| Device Name | Redefine the device name to an easy to remember one. Note: The name must be 1-20 characters in length, including letters, numbers, "_" or "-". By default, it's set as VB300. • Apply: Click to save and perform above settings. Note: The device name is as same as the soft AP SSID. If you change to a new device name, you need to re-pair Dongle with this device as well. |
| IP Method | Static / DHCP (default) |
| IP Address | Set IP address manually when Static mode is selected. |
| Subnet | Set subnet mask manually when Static mode is selected. |
| Gateway | Set gateway address manually for the device to communicate with another network that uses different communication protocols when Static mode is s elected. |
| Apply | Click to save and perform above IP settings. (LAN module will reboot auto matically once IP settings are changed. |
| IP Conflict Detection | When IP Conflict Detection is enabled, an OSD prompt is displayed when a n IP address conflict is detected |

VIDEO SETTINGS

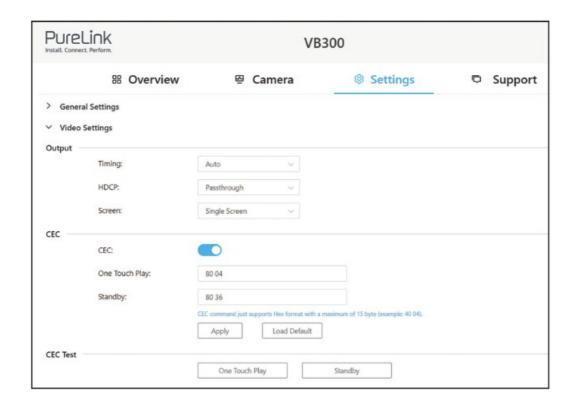


| UI ELEMENTS | DESCRIPTION/OPTIONS |
|----------------|--|
| Timing | Set output resolution for the device. Two options are offered: •Auto (default): Select to output the maximum resolution supported by the display based on the display's EDID. •Resolution range list: Select a desired output resolution from the dropdow n menu to output this fixed resolution |
| HDCP | Set HDCP capability for the device's output. Four options are offered: •Pass-through (default)/HDCP 2.2/HDCP 1.4/0ff |
| Screen | Single Screen (default) Split Screen: Dual view on one screen. |
| CEC | On (default)/Off: Select to enable/disable CEC control. |
| One Touch play | Enter the CEC one touch play command in hex of the controlled display de vice. For more information about the command, see the user guide of your display device. By default, it's set as "80 04". |
| Standby | Enter the CEC standby command in hex of the controlled display device. F or more information about the command, see the user guide of your display device. By default, it's set as "80 36". |
| Apply | Click to save and perform above settings. |
| Load Default | Click to load default settings. |
| CEC Test | One Touch Play/Standby: Click to test if command setting takes effect. |

WI-FI SETTINGS

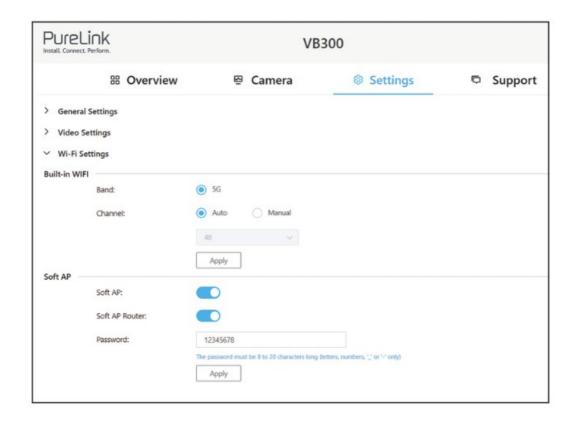


| UI ELEMENTS | DESCRIPTION/OPTIONS |
|---------------------|--|
| Band | 5G |
| Channel | Auto (default): The device selects a wireless channel for itself automaticall y. Manual: Assign a wireless channel for the device manually. |
| Soft AP | On (default)/Off |
| Soft AP Router | On (default)/Off |
| Password | Configure the soft AP password. By default, it is set as 12345678. |
| Apply | Click to save and perform above settings. |
| Operation Frequency | •2412MHz-2462MHz for WIFI 2.4G •5180MHz-5240MHz for WIFI 5G •2402-2480MHz for BT-EDR •2402-2480MHz for BT-BLE |
| Maximum Power | •WIFI 2.4G 16.30dbm (E.I.R.P) •WIFI 5G 14.81dbm (E.I.R.P) |

BYOD SETTINGS

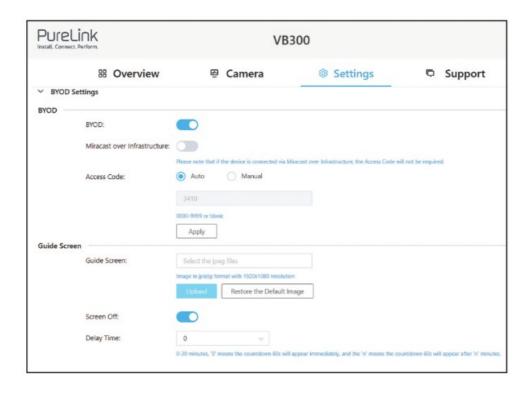


| UI ELEMENTS | DESCRIPTION/OPTIONS |
|--------------|--|
| BYOD | On (default)/Off |
| Access Code | The access code is used to help prevent users from accidentally connectin g to an unintended device and protect from an unauthorized access. •Auto: The device will randomly generate a four-digit access code in the foll owing cases: ✓ The device switches to Guide Screen for output. ✓ The device reboots. •Manual: Select to input a four-digit code. Access Code ON by default. |
| Apply | Click to save and perform above settings. |
| Guide Screen | Click to select a Guide Screen image in .jpg format of 1920×1080 and uplo ad to the device. |
| Screen off | Enable means that the screen will enter the countdown after the set time a nd then turn off. Disable means that the screen will never turn off. |
| Delay time | 10' means the countdown 60s will appear immediately, and the ,n' means t he countdown 60s will appear after ,n' minutes. |

SYSTEM SETTINGS

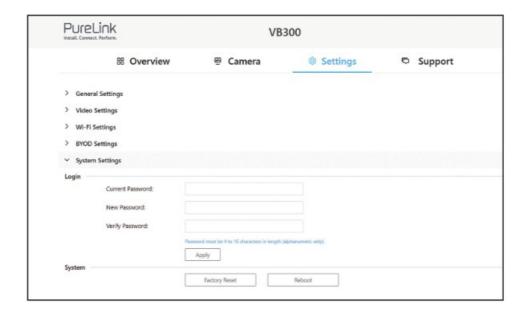

| UI ELEMENTS | DESCRIPTION/OPTIONS |
|-------------|---|
| Login | Set a new password to login Web UI. |
| Apply | Click to save and perform above settings. |
| System | •Factory Reset •Reboot |

SUPPORT

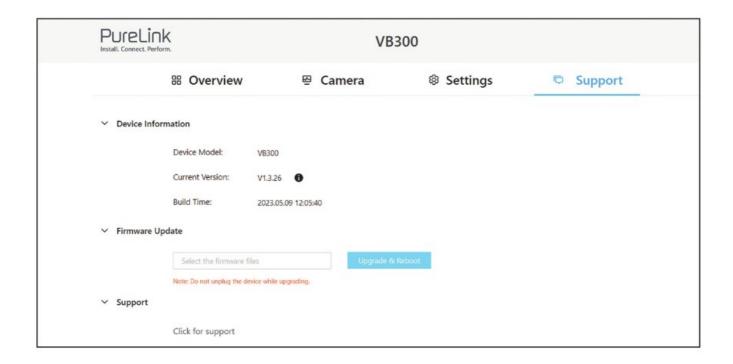

| UI ELEMENTS | DESCRIPTION/OPTIONS |
|--------------------|---|
| Device Information | Displays device model and firmware information. |
| Firmware Update | Select the firmware file and upload it for upgrade. |
| Support | https://www.purelink.de/de/anfrage-formular-purelink.de |

TROUBLE SHOOTING

| TROUBLE | TROUBLE SHOOTING |
|--|---|
| The key on remote has no reaction how to resolve? | Try to replace the battery in remote. |
| Press the Home button on remote, the picture of Camera ca n't return to panorama, how to re solve? | Please make sure the Al mode is off, this function is only effective in manual mode. |
| The HDMI OUT of VB300 no vide o output, how to check? | To check if the cables (HDMI IN / HDMI OUT / Type-C) have been plugged properly, re-plug the cables. To check if the display device has selected the correct input. |
| Why can VB300 only output at 72 0p when using third-party video c onferencing apps like Zoom, Micr osoft Teams, etc. | This is due to the limitations of third-party software, like Zoom and Microsof t Teams only support 720p now. |
| The Camera/Speaker/Mic of VB3 00 can't be recognized or the pict ure from Camera is abnormal, ho w to resolve? | Try using a different USB port on your computer. Try using a different USB c able. |
| The audio from Win10/11 system PC is stereo but the Left and Right speaker of VB300 is mono, how to resolve? | Click Win 10/11 system PC's start button, settings button, select Easy to us e, select Audio, set mono audio OFF. |
| After connecting a new device to PC, PC's audio doesn't output from VB300, how to resolv e? | Open the settings page of PC, in selecting output device select VB300. |
| win+k doesn't work on Windows PC | Please try to reboot the Windows PC. |

For further support or questions please contact us under https://www.purelink.de/en/anfrage-formular-purelinlcde or scan the QR- code below



CE CONFORMITY

SO PureLink GmbH hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the RED Directive 2014/53/EU and the RoHS Directive 2011/65/EU amended by 2015/863/EU.

PureLink GmbH hereby declares that this product is in compliance with the essential requirements of the Electromagnetic Compatibility Regulations 2016 and all other applicable UK regulations. The EU Declaration of Conformity is available here:

www.purelink.de

DISPOSAL OF DEVICE

CA WEEE-Reg.-№ DE 93847290

According to the European WEEE Directive, electrical and electronic equipment may not be disposed of with household waste. As a consumer, you are obliged to return electrical and electronic equipment free of charge at the end of its service life to the public collection points set up for this purpose or to the point of sale. Details on this are regulated by the respective national law.

The symbol on the product, the instructions for use or the packaging refers to these regulations Recycling old appliances in this way is an important contribution to the protection of our environment.

BATTERY RECYCLING INFORMATION

Batteries and accumulators must not be disposed of in household waste. Please dispose of used batteries and accumulators properly, following local regulations.

Consumers in Germany are required by law to take all batteries and accumulators to a collection point in their community/borough or to retailers to have them disposed of in an environmentally friendly way. Otherwise they pose a potential risk to the environment and to human health.

DISCLAIMER OF LIABILITY

PureLink GmbH will not be held liable, nor provide any warranty for damage resulting from improper installation, assembly and use of the product, or failure to observe the operating instructions and/or safety instructions.

TRADEMARK

Product model and logo are trademarks. All other trademarks mentioned in this manual are acknowledged as the property of the trademark owners. No part of this publication may be copied or reproduced without prior written permission of their respetive owners.



PureLink GmbH Von-Liebig-Str. 10 D – 48432 Rheine Germany www.purelink.de

WEEE-Reg.-No. DE 93 847 290

PureLink UK LTD. Carpenter Court, 1. Maple Road Bramhall, Stockport Cheshire SK7 2DH United Kingdom

Documents / Resources



<u>Vuelogic VL-VB300 Smart Camera Soundbar Microphone And Video Switcher</u> [pdf] User Manual

VL-VB300 Smart Camera Soundbar Microphone And Video Switcher, VL-VB300, Smart Camer a Soundbar Microphone And Video Switcher, Camera Soundbar Microphone And Video Switcher, Soundbar Microphone And Video Switcher, Microphone And Video Switcher, And Video Switcher, Video Switcher

Manuals+,