




## W-KING D10 Portable Bluetooth Speaker User Manual

[Home](#) » [W-KING](#) » W-KING D10 Portable Bluetooth Speaker User Manual 

# W-KING®

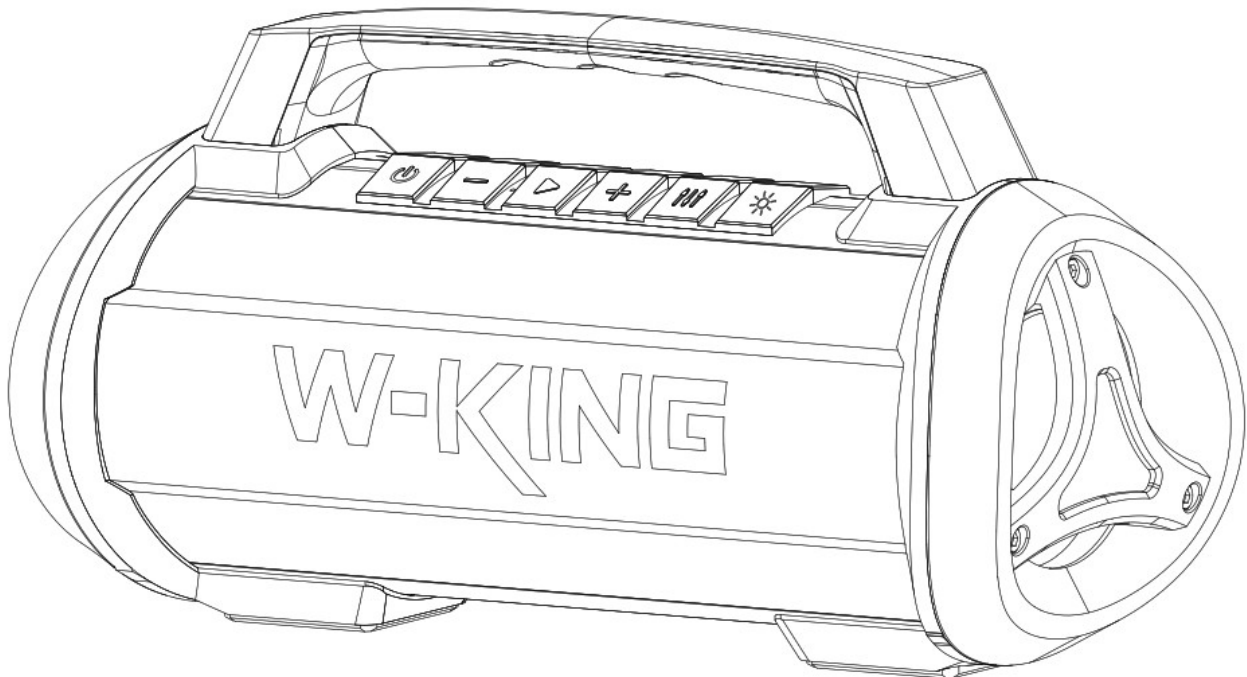

### User Manual

D10 Portable Party Soaker

W-KING® is a registered trademark in the U.S. and European Union. All rights reserved.

## Contents

- 1 D10 Portable Bluetooth Speaker
- 2 Package Contents
- 3 Product Diagram
- 4 Specification
- 5 Operation Instruction Charging
- 6 Connection Way
- 7 Product Care & Use
- 8 Warranty & Customer Support
- 9 Notice for US
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts

## D10 Portable Bluetooth Speaker

### Sound Great!

Why not help other people hear something special?



Tell your friends and family



Share your experience by writing an online review

### Not As Good As I Hoped...

We can put things right for you.




Our friendly customer support team are always here to help you: Amazon E-mail: [support.amazon@w-king.com](mailto:support.amazon@w-king.com)

## Package Contents

D10 Portable Party Soeaker USB Type-C Charging Cable 3.5mm Audio Cable User Manual

## Product Diagram

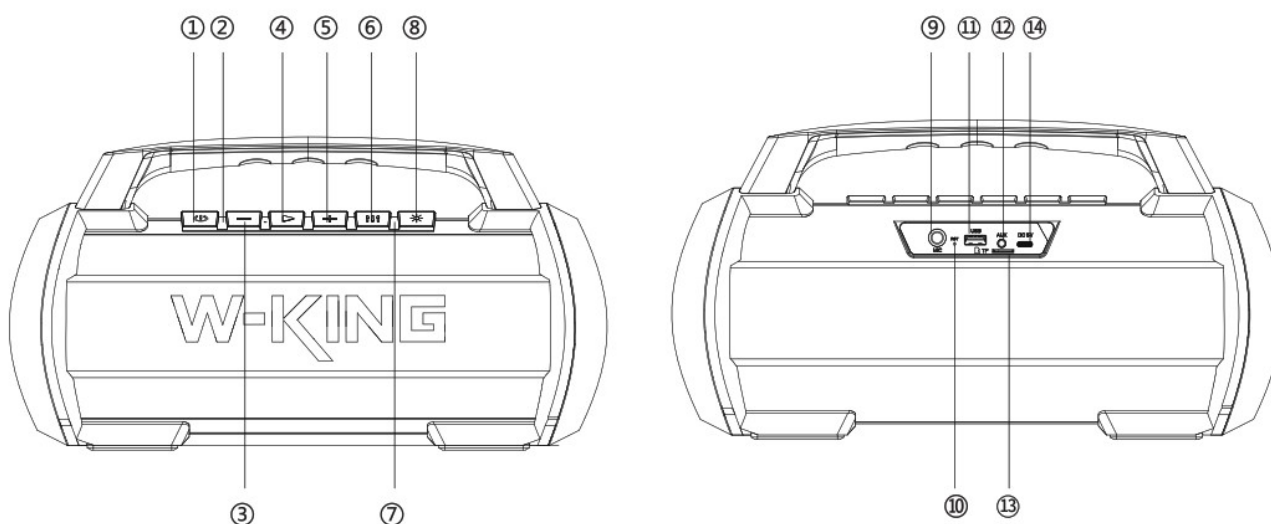

1. Power Button 2. Led Indicator 3. Volume Down /Previous Track Button 4. Play/Pause 5. Volume Up/ Next Track Button 6. Equalizer/ Sound Effect 7. Battery indicator	8. Light Mode Button 9. Microphone Input 10. Reset 11. USB Port 12. AUX 13. TF-card Slot 14. USB Type-C Charging Port
--	---

## Specification

Model Number	W-KING DIO
Bluetooth Version	BT5.0
Bluetooth Pairing Name	W-KING DIO
Speaker Output Power	70w
Waterproof Grade	IPX6
Product Size	369mm x 194mm x 154mm/ 14.53" x 7.64"x 6.06"
Product Net Weight	3040gt 100g
Frequency Range	70Hz-20KHz
THD	sl%at 1KHz 1M/IW
S/N	28ODB
Support Profiles	HFP V1.5;A2DP VI .2;AVRCP V1.4, GAVDP V1.2; AVDTP V1.2;S PP V1.2;AVCTP V1.2
True Wireless Stereo	Yes
Phone/Table Charge	Yes
Music Source Input	Support Bluetooth / AUX / TF-card in
Power Bonk Function	Support power bank function. output:5V/2.1A

## Operation Instruction Charging

- Fully Charge this speaker before first Use.
- Use the included USB Type-C charging cable and a 5V 2A power adapter to charge your speaker. The power adapter is NOT INCLUDED.
- When there are 3 solid white lights, your speaker is fully charged and ready for use.

## Battery

Battery Type	7800mAh
Battery Voltage	7.2V
Low battery alarm (When battery voltage lower than 6.9V (20%) & 6.2V (10%))	Red LED flashes
Automatically turn off at low battery (When battery voltage lower than 0%)	/
Input voltage/current	TYPE-C USB :5V/2.4A
Charging time	Around 7.5 hours

## Power On/Off

Actions	Operation	LED status
Power on	When the speaker on power off status, press and hold the power button for 2 to 3 seconds.	Blue LED on
Power off	When the speaker on power on status, press and hold the power button for 2 to 3 seconds.	LED turns off

## Connection Way

### 1. Bluetooth Pairing

Actions	Operation	LED status
Pairing	Automatically enter pairing mode when turn on the speaker.	Blue LED flash
Connected	Select the Bluetooth pairing name “W-KING D10” on mobile phone.	Blue LED stays on (successfully paired)
Disconnected manually	Press volume + and volume – at the same time for 2-3 second.	Blue LED flash
Reconnect	Speaker will reconnect with last device when power on.	Blue LED stay on

### 2. Other Connection Way

Actions	Operation	LED status
AUX Mode	Insert AUX cable to enter AUX mode.	Play: green LED stays on Pause: green LED flashes
TF-Card Mode	Insert TF-card to enter TF-card mode.	Indoor mode: green LED stays on Outdoor mode: green LED flashes slowly
Switch Mode (Bluetooth/ AUX/TF-Card)	Short press power button to switch . (Note: The mode can only be changed when there are more than two connection modes at the same time.)	/

**Note:**

- If a code or pin is required for pairing, please enter “0000”
- The speaker will automatically shut down after 10 minutes in pairing mode if no devices are paired.
- If speaker can not enter pairing, please reset the speaker to clear the pairing list or any program errors.
- The speaker can remember last volume and mode, it will continue at the same status when turns on again.
- If your paired device is switched off or manually disconnected, the speaker will enter pairing mode and automatically shut down after 10 minutes.
- If the speaker or connected device exceeds the operating range, the speaker will disconnect. The connection to the last successfully connected device will be re-established once you re-enter wireless range within 10 minutes. To connect to other devices, please repeat the previous “Pairing” steps.

**Hands-Free Calling**


Actions	Operation	LED status
Pick up the call	When receive a phone call, short press “play/pause” button.	Blue LED stays on
Hang up	During a phone call, press the “play/pause” button.	Blue LED stays on
Reject the call	When receive a call, long-press the “play/pause” button.	Blue LED stays on

**True Wireless Stereo**

Actions	Operation	LED status
Power on	Turn on both D10 bluetooth speakers. (note: Please make sure that the Bluetooth of your two speakers is not connected)	Blue LED on
True Wireless Stereo	Select one speaker as the master speaker. and then double press the power button of the master speaker to start pairing.	Blue and green LED flash (master speaker)
Connection between two speakers	Successfully connection. (do nothing, just wait pairing)	Slave speaker blue LED stay on. blue LED on master flash slowly
Connect with mobile	When “True Wireless Stereo” successfully connected, open Phone’s Bluetooth to search and connect the master speaker.	Master and slave speaker blue LED stay on

Note: In “True Wireless Stereo” mode, only the master speaker has phone call function.

**Basic Control**

Actions	Operation	LED status
Adjust Volume	Short press volume+/- button	/
Next/Previous Track	Press and hold volume + /- button	/
Pause/Play/ Mute	Press the Play/Pause button (In AUX mode, it's a mute function)	/
Switch Equalizer Mode	Short press Equalizer button	Default setting: turns on Enhance bass Equalizer: slowly flashes
light Mode	Short press  light mode button	/
Reset	Press the reset button	LED turns off

### Microphone function (The following situations are all after the microphone is connected)

Actions	Operation
Mic Volume Mode	Press and hold the “Equalizer” button until you hear ONE “bee-“, then short press “Volume +/-” buttons to adjust volume.
Music Volume	When you enter mic volume mode , 10 seconds of no operation will automatically enter the music volume, then Short press “Volume +/-” buttons to adjust music volume.

### Product Care & Use

- Keep away from liquids, extreme heat, and strong magnetic fields.
- Do not use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss.

### Warranty & Customer Support

For questions, support, or warranty claims, contact us at Amazon E-mail: [support.amazon@w-king.com](mailto:support.amazon@w-king.com) or Walmart E-mail: [support.walmart@w-king.com](mailto:support.walmart@w-king.com) which corresponds with your region. Please include your Amazon order number and product model number.

Please note, W-KING can only provide after-sales service for products purchased directly from our official online store. If you have purchased from a different seller, please contact them directly for service or warranty issues.

### Notice for US

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device will not cause harmful interference.
- This device accepts any interference received, including other Bluetooth interference that may cause undesired operation.

## FCC Rules

This equipment had been tested and found to comply with the limits for Class B digital devices, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio communication. However. There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Caution

Changes or modifications made to this device not expressly approved by W-KING may void the FCC authorization to operate this equipment.



---

## Documents / Resources

	<p><a href="#">W-KING D10 Portable Bluetooth Speaker</a> [pdf] User Manual D10 Portable Bluetooth Speaker, D10, Portable Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
---	--

## References

- [User Manual](#)