

## Contents [ [hide](#) ]

- [1 WalkingPad WPS1F Foldable Walking Treadmill](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 INTRODUCTION](#)
- [4 Specification](#)
- [5 Product and Accessories](#)
- [6 Function schematic diagram](#)
- [7 Guide for initial operation](#)
- [8 Learn to use WalkingPad](#)
- [9 Safety Notice](#)
- [10 Maintenance and Service](#)
- [11 Trademark and Legal Declaration](#)
- [12 Replacement and Disposal](#)
- [13 Fcc Statement](#)
- [14 Documents / Resources](#)
  - [14.1 References](#)

# ***WalkingPad***

## **WalkingPad WPS1F Foldable Walking Treadmill**



## IMPORTANT SAFETY INSTRUCTIONS

 
- **DANGER-** To reduce the risk of electric shock: Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- **WARNING** -To reduce the risk of burns, fire, electric shock, or injury to persons.
  1. An appliance should never be left unattended when plugged in. Unplug from the outlet when not in use, and before putting on or taking off parts.
  2. Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
  3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
  4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service centre for examination and repair.
  5. Do not carry this appliance by the supply cord or use the cord as a handle.
  6. Keep the cord away from heated surfaces.
  7. Never drop or insert any object into any opening.
  8. Do not use outdoors.
  9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
  10. To disconnect, turn all controls to the off position, then remove the plug from the outlet.
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this machine.
- To reduce the risk of electric shock, this appliance has a polarised plug (one blade is wider than the other). This plug will fit in a polarised outlet only one way.
- If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.
- To reduce the risk of personal injury, read and understand all the instructions before using this product.
- Make sure that the product is connected to an outlet having the same configuration as

the plug. No adapter should be used with this product.

## INTRODUCTION

### Welcome to use

- Thank you for choosing the KingSmith WalkingPad Walking device, hereinafter referred to as a WalkingPad, which possesses various advantages, including exquisite, foldable, innovative, and integral design.
- From now on, enjoy the quality life of walking at home.

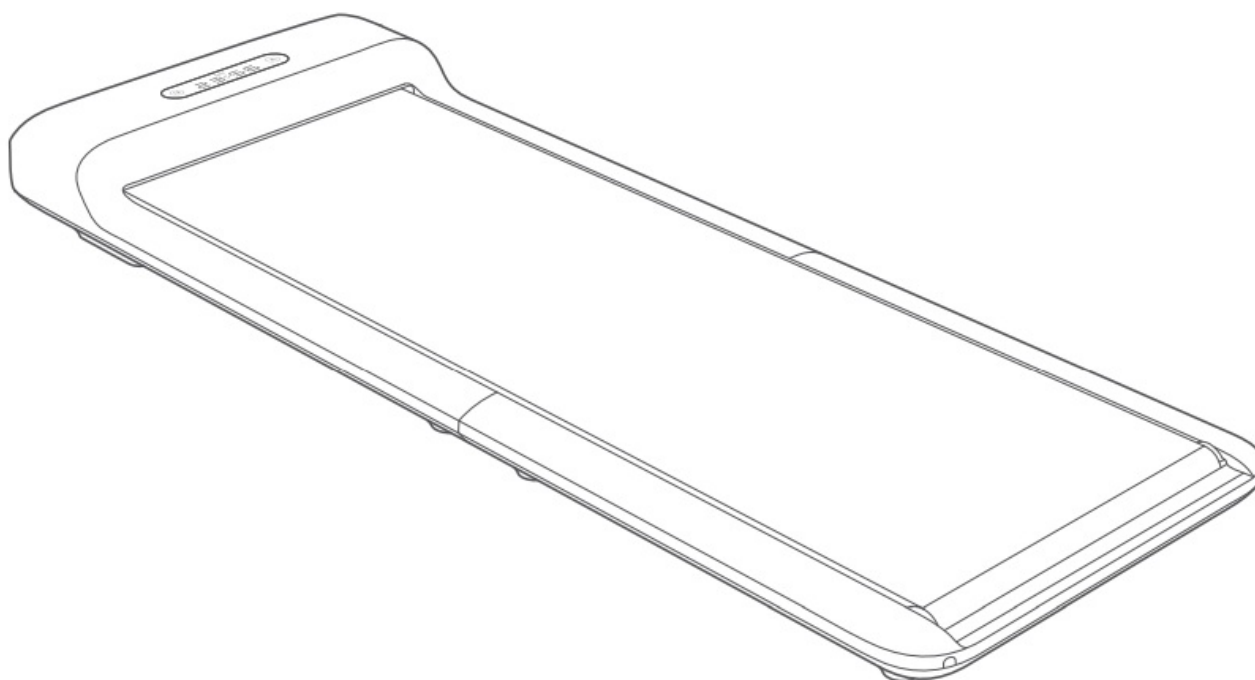


### Specification

Performance &indicators	Detailed parameters
Expansion dimensions	1445 x 518 x 125 mm 56.9" X 20.4" X 4.9"
Folding dimensions	825 x 518 x 136 mm 32.5" X 20.4" X 5.4"
Walking Area	1200 x400 mm 47" X 15.7"
Net weight	25 kg/ 55 lbs
Maximum load	100 kg/ 220 lbs

Applicable age	14 – 60 years old
Applicable height	Unlimited
Minimum speed	0.5 km/hr 0.5 mi/hr
Maximum speed	6 km/hr 3.7 mi/hr
Power Input	735W
Frequency	50/60 Hz
Rated voltage	100 – 127 V-
Sport mode	Standby mode/ Manual mode/ Automatic mode


## Product and Accessories

 Please carefully check whether the contents of the package are complete and intact. If there is any missing or damaged items, please contact the seller.

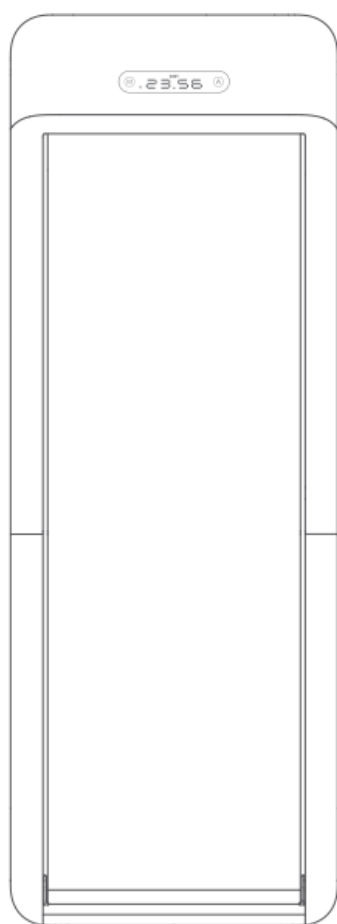

Main Product

## Parts

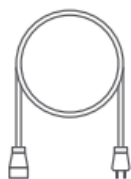 

Power Cable



Remote Controller



Lanyard




Wrench




User Manual

## Function schematic diagram

 
### 1. Product main body

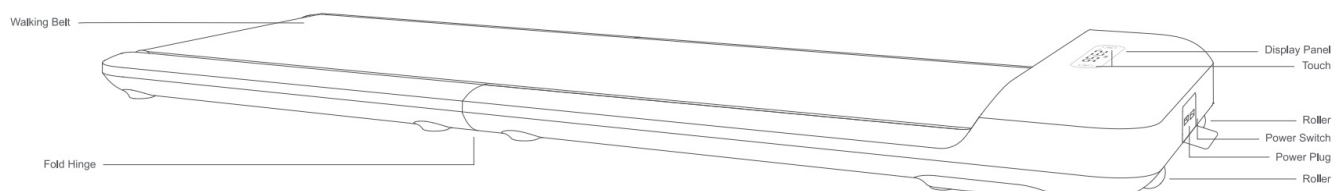

### 2. Introduction of the function of the indicator panel

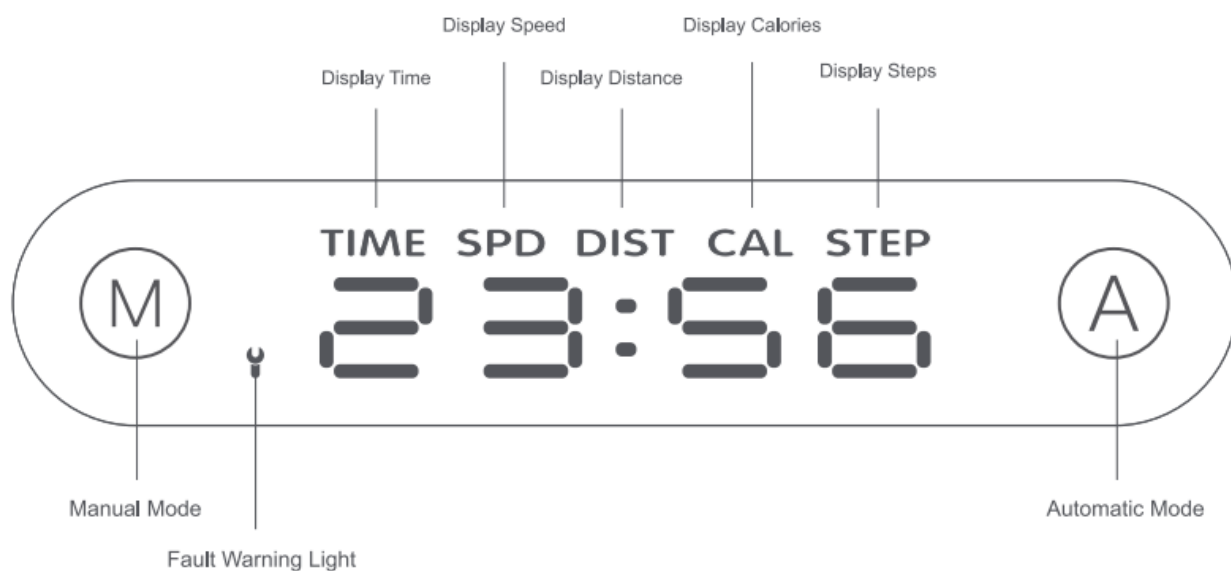 

### 3. Walking Pad remote control

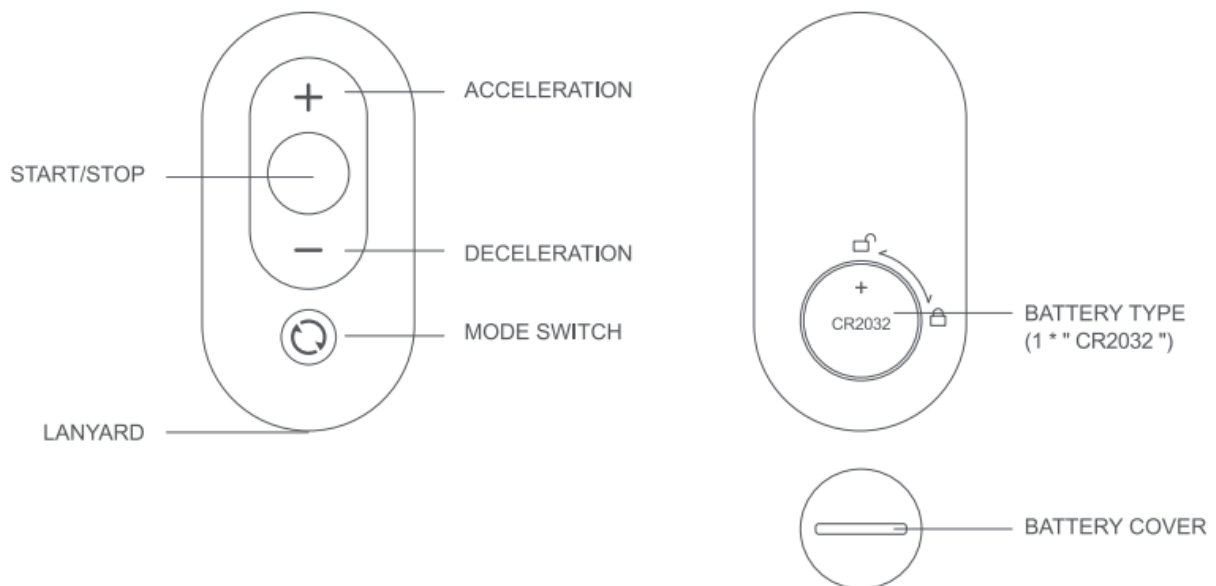 


### Guide for initial operation

1. Choose flat ground to place the WalkingPad. It is forbidden to place it on a thick and soft cushion.

• **Please note:** Don't connect the power before the WalkingPad is fully unfolded.

2. Unfold the walking pad slowly and press it down to be completely flat.

 3. Check and adjust the walking belt to make sure it's centred.

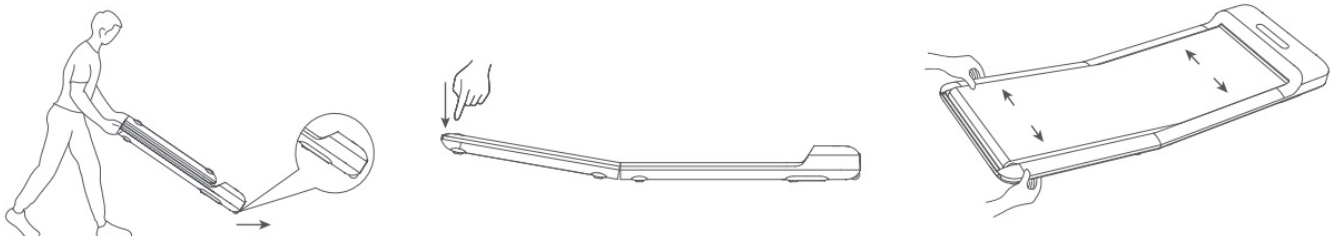

4. Connect the power cord and press the button to switch on.

5. Unlock all Functions by following two ways; otherwise, the speed limit remains at 3km/hr (1.9mi/hr):

1. Walk 1 km (0.6mi) on the device first, reboot to unlock all functions.

2. Complete Novice Guide by the "KS Fit" APP to unlock all functions.

6. Search "KS Fit" App from the Apple Store or Google Play and complete installation.

 
 


7. Open the App, follow the prompts to set up the device.

8. Enter the novice guide to unlock all functions.



9. Start to use the WalkingPad.
10. If the belt deviates from the orbit in use, please adjust it properly. SEE: 06 Maintenance and service.

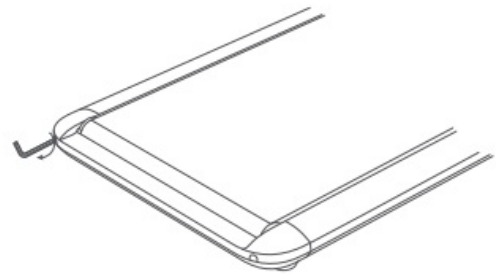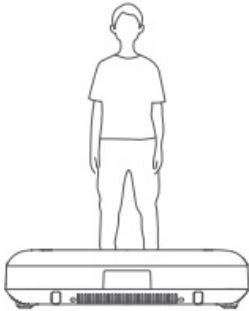

## Learn to use WalkingPad

### 1. Mode instruction

- **M** **Manual mode**
  - The light of the manual mode is on; Control the speed through the remote control or the APP.
- **A** **Automatic Mode**
  - The light of the automatic mode is on; Speed is automatically controlled by an intelligent algorithm.
  - It follows the speed of walking.

### 2. Instructions for the standby mode control

- The motor and sensor stop responding in this mode to prevent nonusers from accidentally triggering the WalkingPad.

 


Mode Switch

Short press: return to the previous mode.

### 3. Instructions for manual mode control (primary mode)

- **Manual Mode**
- In this mode, the speed of the Walking Pad can be controlled by the remote control. It is recommended that beginners use the manual mode first and then use the automatic mode after being skilled in using the WalkingPad.
- The manual mode is controlled by remote control by default, that is, the START/STOP button of the remote control is used to start or stop the WalkingPad, which can be modified in the client “Personalized”.

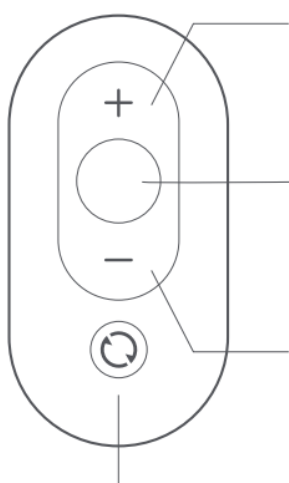

ACCELERATION

Short press: increase speed by 0.5 km/h (0.5 mi/hr)

START/STOP

Short press: start or stop the WalkingPad

DECELERATION

 
Short press: reduce speed by 0.5 km/h (0.5 mi/hr)

MODE SWITCH

Short press: switch to automatic mode.

Long press: switch to standby mode.




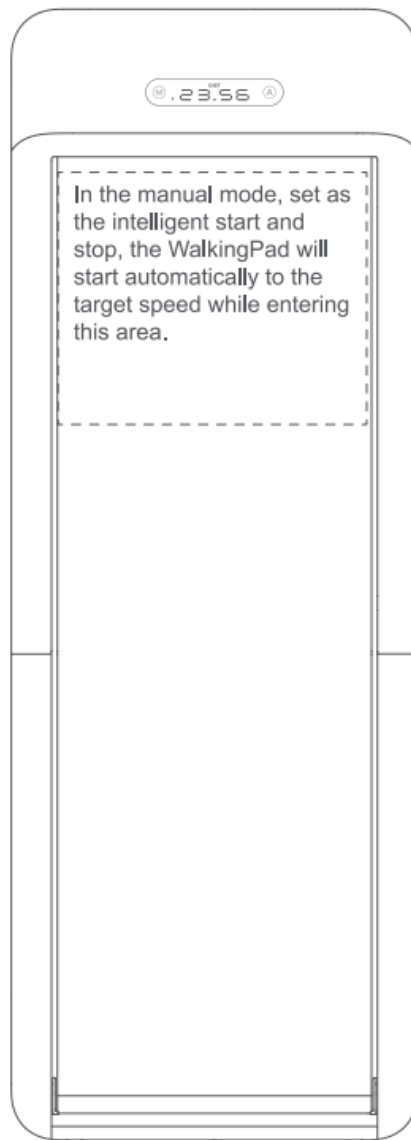

#### 4. Description of automatic mode control (advanced mode)



 
- **Automatic mode**
- This is a challenging and higher-class mode. The User can walk on the Walkingpad completely out of the remote controller.
- We only recommend those who have good sports skills or walking-device experience to take the challenge.

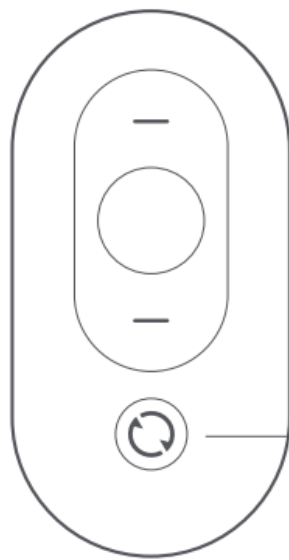

### Mode Switch

Short press: switch to manual mode.

 Long press: switch to standby mode.

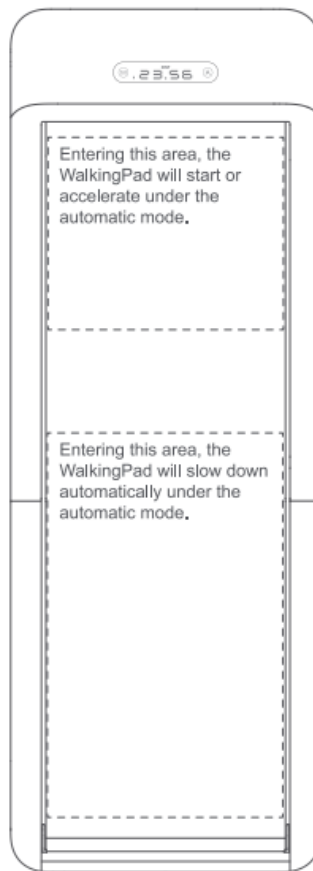




## 5. Remote Controller Notice

 
- If the remote controller has no response or you change to a new one, the remote controller and walking device need to re-establish communication.
- **Remote control pairing method:**
- Restart the WalkingPad, press and hold down the mode switch button on the remote control immediately, hearing the sound of “Beep” indicates the success of pairing.
- **Note:** During the operation, the remote control should be close to the LED display panel of the Walking Pad.




## 6. Error Warning Light




- Error Warning Light on the display panel is off when Walking pad works well.  
When error occurs, Error warning light turns on and shows its error code.
- **E01:** Upper control receives lower control data abnormally
- **E02:** Hall fault
- **E03:** Software overcurrent protection
- **E04:** locked rotor protection
- **E05:** The data received by the lower control is abnormal
- **E06:** Hardware overcurrent protection
- **E07:** Motor undervoltage protection
- **E08:** Motor overvoltage protection
- **E09:** Motor phase loss protection
- **E10:** Motor overload protection
- **E20:** Abnormal communication
- **E21:** Sensor failure

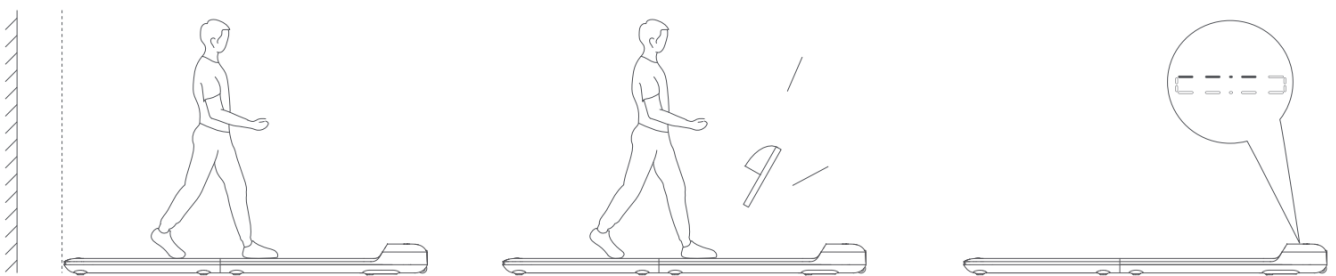


## Safety Notice

    
 
 
-  Please keep a rear distance of 1000 mm or more.
-  Please choose sport shoes.
-  Please do not stand up on the walking machine when it is in an auto calibration situation.



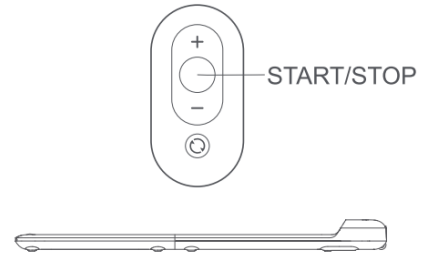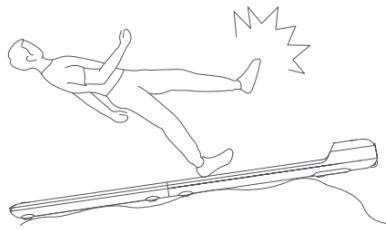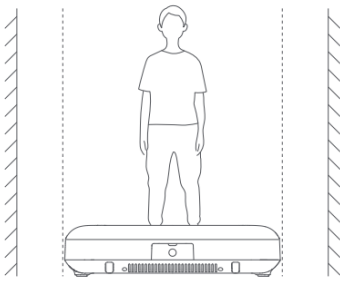


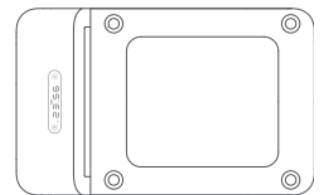 
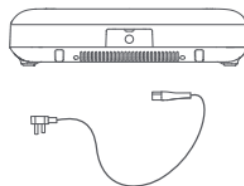 
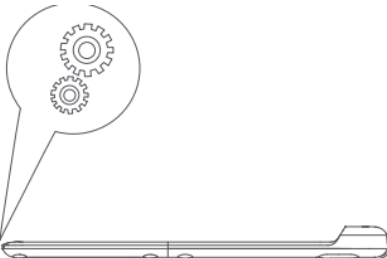 
-  Please keep a distance of 500 mm or more on both sides.
-  Using on uneven ground is prohibited.
-  It is strictly forbidden to walk up and down the walking pad while walking. When an emergency occurs, please press the remote control START/STOP and step away from the walking pad on one side.



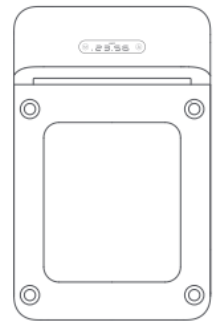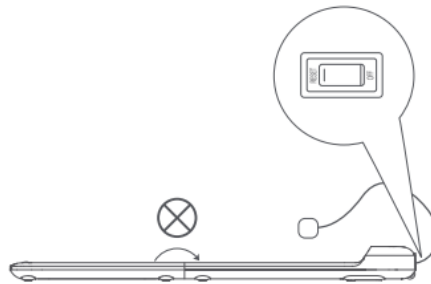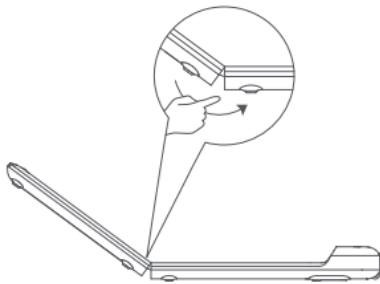







-  Anti-pinch.
-  Turn the power off before folding up the WalkingPad.
-  Prohibition of vertical placement.







    
-  Anti-involved, please do not trample.
-  Please pull out the plug when you are not using it.
-  Prohibition of lateral placement.

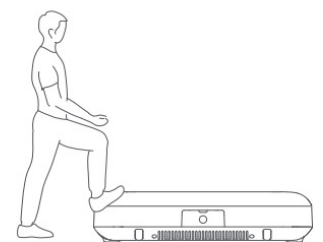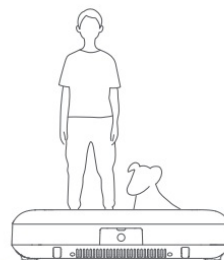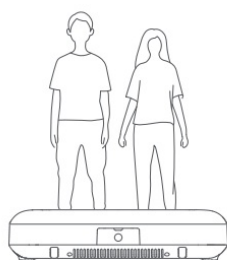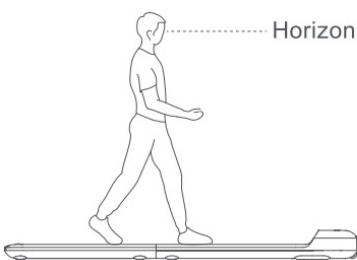

-  Please keep your sight horizontal to avoid dizziness.
-  More than one person on the Walkingpad.
-  Using a machine with a pet is prohibited.
-  Trampling the machine head is prohibited.



 -  Children should be supervised to ensure that they do not play with the Walkingpad.
-  Walking sideways on the machine is prohibited.
-  Walking backwards on the machine is prohibited.
-  Please use this product reasonably according to your physical condition (the elderly and pregnant women should use it cautiously). If you feel unwell, stop exercising immediately. If necessary, please seek medical attention.

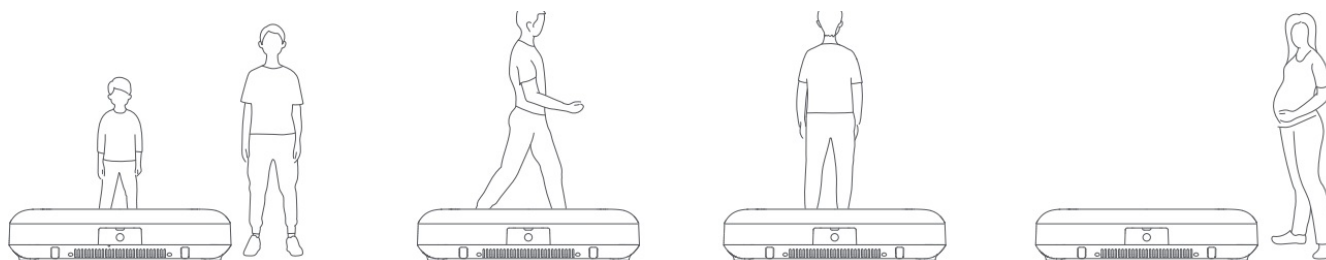

## Maintenance and Service

### 1. Clean the walking machine



- Turn off the machine and unplug the power cord.
- Add several drops of detergent on a cotton rag or towel. Don't pour the detergent on the belt directly, and don't use acid or corrosive cleaners.
- Wipe off dust and stains on the frame, front panel and belt. Do not wipe the backside of the belt.
- After using for a period, dust and stains may appear on the back part, which is a normal situation, and just clean them up.

### 2. Adjust the belt

- Press and hold both the Mode Switch Button and Acceleration Button on the remote control for over 3 seconds.
- The front panel shows "CALI", and the speed is 4 km/hr ( 2.5 mi/hr).
- If belt deviates to the left: Turn the left adjusting screw for a half-circle clockwise.
- If belt deviates to the right: Turn the right adjusting screw for a half-circle clockwise.

- If belt is slipping: Turn both left and right adjusting screw for a half-circle clockwise at same time.
- Keep the machine running for 1-2 minutes and check whether it needs to be readjusted.



### 3. Lubricate the Belt

- Turn off the machine and unplug the power cord.
- Lift the belt and apply silicone oil on the backside of the belt.
- Turn on the machine again
- Keep the machine running under 4 km/hr ( 2.5 mi/hr) for 10-20 20 seconds.
- Only apply 5 ml – 10 ml lubricant oil each time, too much lubricant oil makes the belt become slipping.
- Apply silicone oil once every 3 months.
- **Note:** silicone oil (purchased separately)



## Trademark and Legal Declaration

Beijing Kingsmith Technology Co., Ltd holds the patents for the KingSmith Walkingpad Walking Device series products. Kingsmith edits and owns the copyright of this manual. Without Kingsmith's written permission, any form of unauthorised distribution, reproduction, publication, release or quotation by any institution or individual is prohibited. This manual contains as many as possible of functions and instructions for use. However, due to product imperfections, design changes, etc., the description may still have discrepancies with what you have purchased. Because of product updates, the description in this manual may differ from what you have purchased in colour, appearance, etc. Actual supplies prevail. This appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge, unless they have been given supervision or instruction


concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Children aged 8 years and above and persons can use this appliance with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understood the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

## Replacement and Disposal



- The battery contained in this appliance must be removed for disposal.
- When replacing the battery, use only the original battery available from our online parts shop.
- The battery compartment is located on the underside of the appliance. Open the compartment by removing the screw in the cover using a suitable screwdriver, and then press the lower end of the locking catch on the connectors.
- In that way, both sides of the connection can be separated by pulling them apart.
- When inserting a new battery, push together the two connectors and ensure that the catch locks over the stop.
- Never dispose of old battery in domestic garbage, but only through the proper public collection points. This also applies to the battery of defective appliances.



-  Devices marked with this symbol must be disposed of separately from your household waste, as they contain valuable materials which can be recycled. Proper disposal protects the environment and human health.
- Your local authority or retailer can provide information on the matter.

## Fcc Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

two conditions:

1. This device may not cause harmful interference,
2. This device must accept any interference received, including interference that may cause undesired operation.

**Caution:** The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The appliance is intended for household use.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.

### **FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.


Electric shock hazard, where the appliance is used without the earth connection.

- **Manufacturer: Beijing Kingsmith Technology Co., Ltd.**



- **Address: Floor 4, Building 25, Area 18, ABP Park, Fengtai, Beijing, China.**
- **MADE IN CHINA**

## Documents / Resources

	<a href="#">WalkingPad WPS1F Foldable Walking Treadmill [pdf]</a> User Manual C2 110V, V1.0_20201224, WPS1F Foldable Walking Treadmill, WPS1F, Foldable Walking Treadmill, Walking Treadmill, Treadmill
---	--

## References

- [User Manual](#)

WalkingPad  
C2 110V, Foldable Walking Treadmill, Treadmill, V1.0\_20201224, Walking Treadmill, WalkingPad, WPS1F, WPS1F Foldable Walking Treadmill

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

---

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.